


## Front Panel Controls and Indicators



**XJ3000-2242**

2U 24Bays Hotswappable 6G JBOD

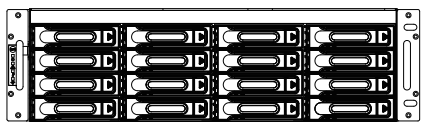


**XJ3000-3163**

3U 16Bays Hotswappable 6G JBOD



**XJ3000-4243**


4U 24Bays Hotswappable 6G JBOD

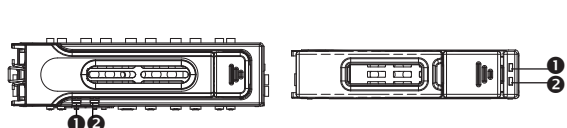

**3.5" HDD Tray**


**2.5" HDD Tray**

- ① HDD Power LED  
(Behavior: power-on: green/active: blink)
- ② HDD Failed LED (Behavior: red)

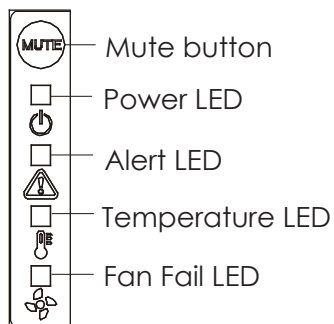


## Rear Panel Controls and Indicators


**XJ3000-2242 Rear View**

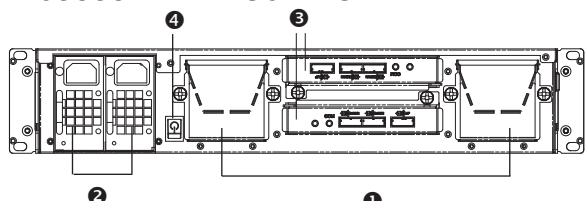


**XJ3000-3163 Rear View**

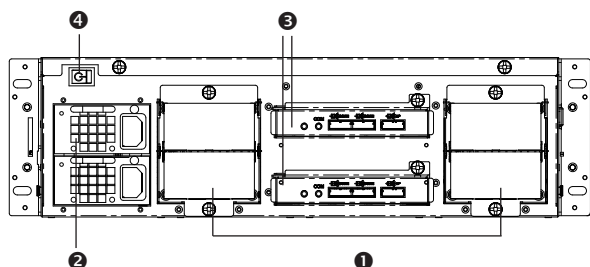

**XJ3000-4243 Rear View**

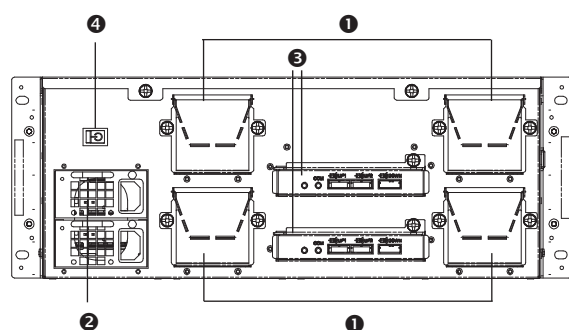


### Expander

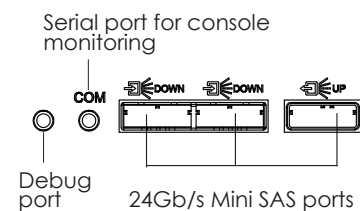

- ① Hot-swap Fan
- ② Hot-swap high efficiency power supply
- ③ Hot-swap expander modules
- ④ Power on/off


## Connecting the JBOD to the Host

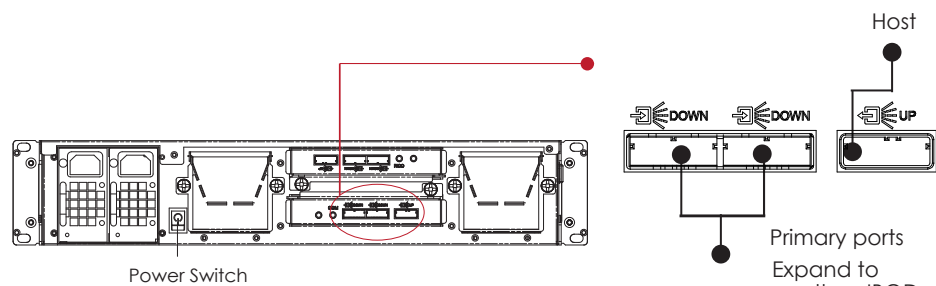

- A. Plug the cable into the connectors on the host and UP link on the primary ports of the JBOD.
- B. Turn the JBOD power switches on. It might take few minutes to turn on completely.


## Installing the HDD

### Install 3.5" Hot-swap HDD

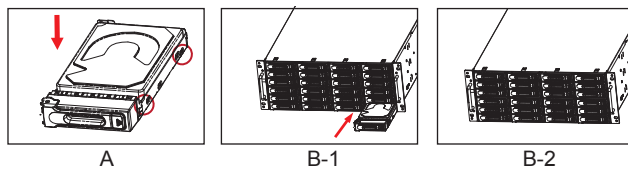


- A. Place the 3.5" HDD on the cage and fix HDD with 4 screws on both sides of HDD tray.
- B. Insert the drive carrier into its bay. Push the tray lever until it clicks. Make sure the drive tray is correctly secured in place when its front edge aligns with the bay edge.

### Install 2.5" HDD into 3.5" HDD Cage

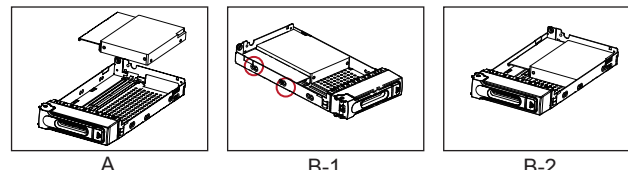


- A. Place the 2.5" HDD into the converted bracket and secure it with 2 screws.
- B. Place the 2.5" HDD on the cage and fix the HDD with 4 screws (B-1) on both sides of the HDD tray (B-2).

### Install 2.5" Hot-swap HDD

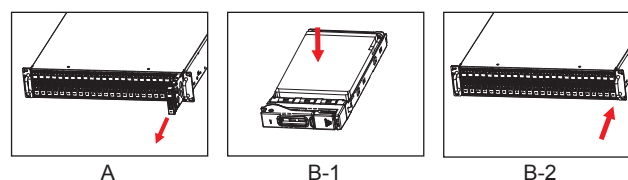


- A. Release a drive tray by pressing the unlock button and pinching the lock lever slightly and pulling out the drive tray.
- B-1. Place the 2.5" HDD on the tray and then secure it with four screws on the bottom.
- B-2. Insert the drive carrier into its bay. Push the tray lever until it clicks. Make sure the drive tray is correctly secured in place when its front edge aligns with the bay edge.

## Installing or Replacing the Power Supply

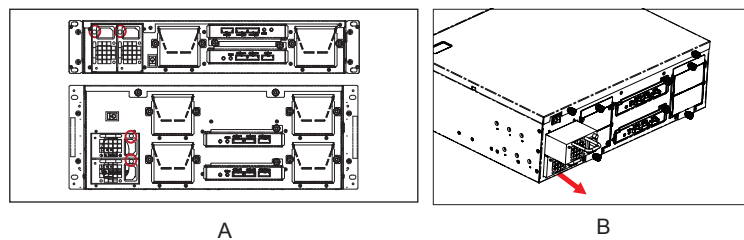


- A. Release 1 screw from each power module on the rear panel.
- B. Hold the PSU lever and firmly pull the PSU out of the chassis.

## Installing or Replacing the Expander

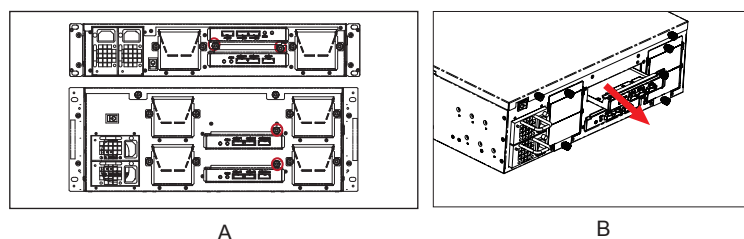

- A. Release 1 screw from each power module on the rear panel.
- B. Hold the tray lever and firmly pull the tray out of the chassis.

## Installing or Replacing the Fan/Blower

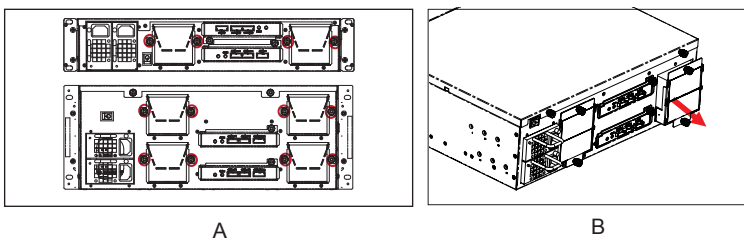

- A. Release the thumb screw(s) on the fan module.
- B. Hold the thumb screw firmly and pull the fan module out of the JBOD.

### Backplane

To install the backplane, please refer to the backplane installation guide in the accessory box.

### Slide rail

To install the slide rail, please refer to the manual in the slide rail kit.