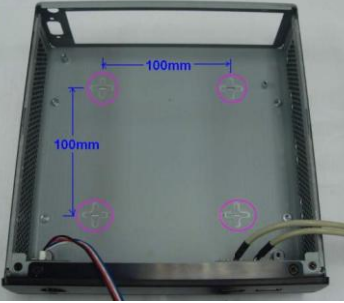
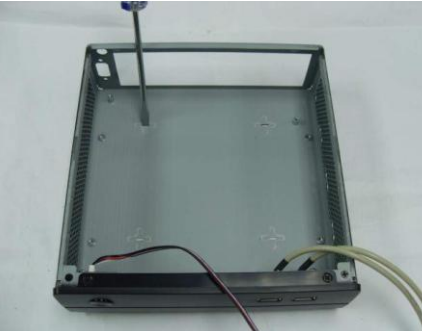
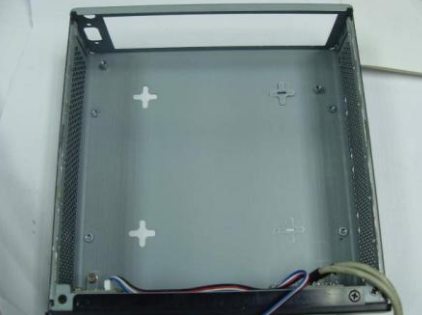
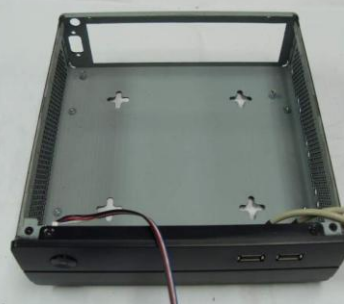

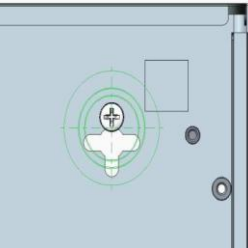

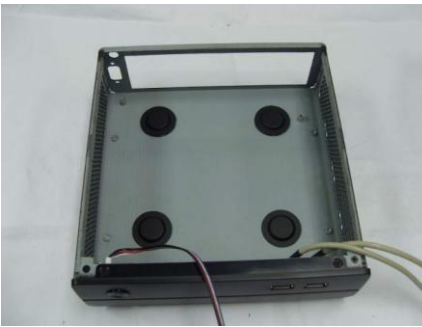


# 557 VESA Holes Assembly Instruction

<b>STEP-1</b>	<b>STEP-2</b>	<b>STEP-3</b>
		
<p>To make sure that the VESA Holes of 100mm</p>	<p>Use the flathead screwdriver to dig into the VESA iron sheet</p>	<p>Use the flathead screwdriver to dig into the VESA iron sheets</p>
<b>STEP-4</b>	<b>STEP-5</b>	<b>STEP-6</b>
		
<p>Use the flathead screwdriver to dig into the VESA iron sheets</p>	<p>To make sure which direction VESA Hole for hanging</p>	<p>This is the relation position between the Protective Cover and Screw Heads</p>
<b>STEP-7</b>	<b>STEP-8</b>	
		
<p>To paste the Protective Cover (This is Optional)</p>	<p>Finished</p>	<p>Then you can continue the system assembly</p>