



SB407-TU

**Storage Barebone
User's Manual**

Document Release History

| Release Date | Version | Update Content |
|---------------------|----------------|---|
| December, 2022 | 1 | Released to public. |
| December, 2022 | 1.1 | Update rear/front panel, add OCP content. |

Table of Contents

| | |
|---|-----------|
| Preface | i |
| Safety Instructions | ii |
| About This Manual | iv |
| Chapter 1. Product Features | 1 |
| 1.1 Box Contents | 1 |
| 1.2 Specifications | 2 |
| 1.3 System Block Diagram | 3 |
| 1.4 Features | 4 |
| Chapter 2. Hardware Setup | 7 |
| 2.1 Central Processing Unit | 7 |
| 2.1.1 Installation | 7 |
| 2.2 System Memory | 12 |
| 2.2.1 Placement | 12 |
| 2.2.2 DIMM Population | 13 |
| 2.2.3 Installation | 14 |
| 2.3 Top Cover | 15 |
| 2.4 Power Supply Unit | 18 |
| 2.4.1 Installation | 18 |
| 2.4.2 LED Indicator | 18 |
| 2.5 Fan | 19 |
| 2.6 Disk Drive | 20 |
| 2.6.1 Disk Drive: 2.5-inch | 20 |
| 2.6.2 Disk Drive: 3.5-inch | 21 |
| 2.6.3 LED Indicator | 23 |
| 3.5-inch Hard Disk Drive | 23 |
| 2.5-inch NVMe (Rear) | 23 |
| 2.6.4 Drive Slot Map | 24 |
| 2.7 HBA Card | 25 |
| 2.7.1 Cable routing | 25 |
| 2.8 OCP Card | 26 |
| 2.8.1 Cable routing | 29 |
| 2.9 M.2 SSD (NGFF) Card | 30 |
| 2.10 Motherboard (easy maintenance) | 31 |
| 2.11 Slide Rail | 32 |
| Chapter 3. Hardware Settings | 35 |
| 3.1 Block Diagram | 35 |
| 3.2 Placement | 36 |
| 3.3 Content List | 37 |

| | |
|---|-----------|
| 3.4 External Port | 39 |
| 3.5 Connector Definition | 40 |
| 3.6 Jumper Definition..... | 52 |
| 3.7 Internal LED..... | 59 |
| 3.8 Drive Backplane: 8 Bay..... | 60 |
| 3.8.1 Placement..... | 60 |
| 3.8.2 Connector | 61 |
| 3.8.3 LED Indicator | 63 |
| 3.8.4 DIP-Switch | 65 |
| 3.8.5 Cable routing | 67 |
| 3.9 Drive Backplane: 30 Bay..... | 68 |
| 3.9.1 Placement..... | 68 |
| 3.9.2 Connector | 69 |
| 3.9.3 LED Indicator | 71 |
| Chapter 4. BIOS Configuration Settings | 72 |
| 4.1 Navigation Keys..... | 72 |
| 4.2 BIOS Menu | 73 |
| 4.2.1 Menu | 73 |
| 4.2.2 Startup | 73 |
| 4.3 Main | 74 |
| 4.3.1 Main | 74 |
| 4.4 Advanced | 75 |
| 4.4.1 Trusted Computing | 75 |
| 4.4.2 Serial Port Console Redirection | 76 |
| 4.4.3 SIO Configuration..... | 76 |
| 4.4.4 PCI Subsystem Settings | 76 |
| 4.4.5 USB Configuration..... | 76 |
| 4.4.6 Network Stack Configuration | 77 |
| 4.4.7 T1s Auth Configuration..... | 77 |
| 4.4.8 RAM Disk Configuration..... | 77 |
| 4.4.9 Driver Health..... | 77 |
| 4.5 Platform Configuration | 78 |
| 4.5.1 PCH Configuration | 78 |
| 4.5.2 Server ME Configuration..... | 80 |
| 4.5.3 Server ME Debug Configuration..... | 80 |
| 4.5.4 Runtime Error Logging | 81 |
| 4.6 Socket Configuration..... | 82 |
| 4.6.1 Processor Configuration..... | 82 |
| 4.6.2 Common RefCode Configuration | 83 |
| 4.6.3 Memory Configuration | 83 |

| | |
|---|------------|
| 4.6.4 IIO Configuration | 84 |
| 4.6.5 Advanced Power Management Configuration | 85 |
| 4.7 Server Mangement | 89 |
| 4.7.1 Processor Configuration..... | 89 |
| 4.7.2 System Event Log..... | 90 |
| 4.7.3 BMC Network Configuration..... | 90 |
| 4.8 Security | 91 |
| 4.9 Boot | 92 |
| 4.10 Exit..... | 93 |
| 4.11 BIOS Update Process | 94 |
| Chapter 5. BMC Configuration Settings | 95 |
| 5.1 Login..... | 95 |
| 5.2 Web GUI | 96 |
| 5.2.1 Menu Bar..... | 96 |
| 5.2.2 Dashboard | 97 |
| 5.2.3 Sensor | 98 |
| 5.2.4 System Inventory..... | 98 |
| 5.2.5 FRU Information | 99 |
| 5.2.6 Log & Reports..... | 100 |
| 5.2.7 Settings..... | 101 |
| 5.2.8 Remote Control | 102 |
| 5.2.9 Images Redirection | 104 |
| 5.2.10 Power Control..... | 105 |
| 5.2.11 Maintenance Group..... | 106 |
| 5.2.11.1 Firmware Update..... | 107 |
| 5.2.11.2 BIOS Firmware Update | 112 |
| 5.2.12 Sign Out | 115 |
| Chapter 6. Technical Support..... | 116 |



Copyright © 2022 AIC®, Inc. All Rights Reserved.

This document contains proprietary information about AIC® products and is not to be disclosed or used except in accordance with applicable agreements.

Preface

Copyright

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photo-static, recording or otherwise, without the prior written consent of the manufacturer.

Trademarks

All products and trade names used in this document are trademarks or registered trademarks of their respective holders.

Changes

The material in this document is for information purposes only and is subject to change without notice.

Warning

1. A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.
2. Use only shielded cables to connect I/O devices to this equipment.
3. You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Disclaimer

AIC® shall not be liable for technical or editorial errors or omissions contained herein. The information provided is provided "as is" without warranty of any kind. To the extent permitted by law, neither AIC® or its affiliates, subcontractors or suppliers will be liable for incidental, special or consequential damages including downtime cost; lost profits; damages relating to the procurement of substitute products or services; or damages for loss of data, or software restoration. The information in this document is subject to change without notice.

Instruction Symbols

Special attention should be given to the instruction symbols below.



NOTE

This symbol indicates that there is an explanatory or supplementary instruction.



CAUTION

This symbol denotes possible hardware impairment. Upmost precaution must be taken to prevent serious hardware damage.



WARNING

This symbol serves as a warning alert for potential body injury. The user may suffer possible injury from disregard or lack of attention.

Safety Instructions

Before you commence, please attentively read the following important discretions below. All cautions and warnings on the equipment or in the manuals should be circumspactly noted and reviewed.

Always ground yourself to prevent static electricity.

請全程接地，以防止靜電。

请全程接地，以防止静电。

Всегда заземляйте себя, чтобы избежать статического электричества.

Aard jezelf altijd om statische elektriciteit te voorkomen.

- Firmly ground yourself at all times when installing or assembling the internal components of the server. Most of electronic components in the server are highly sensitive to electrical static discharge.
- Use a solid grounding wrist strap and distinctively place all electronic components in static-shielded devices to prevent static. Grounding wrist straps can be purchased in any electronic supply store.
- Confirm that the power source is turned off and then disconnect the power cords from your system before performing any type of installation or manual servicing. A sudden surge of power could severely damage the sensitive electronic components.
- Do not precipitously open the system's top cover. If you must open the cover for maintenance purposes, only a trained technician should be allowed to proceed this action. Integrated circuits on computer boards are highly sensitive to static electricity. Before operating a board or integrated circuit, touch an unpainted portion of the system unit chassis for a couple of seconds to discharge any static electricity on your body.

Place the server in a stable environment.

請將伺服器放置在穩定的環境中。

请将伺服器放置在穩定的環境中。

Поместите сервер в стабильную среду.

Plaats de server in een stabiele omgeving.

- Place this equipment on a stable surface when installing. A small mild drop or fall could cause fatal injury to both the equipment and the person handling the equipment.
- Please keep this equipment away from humidity to prevent vast rust and disintegration.
- Carefully and accurately mount the equipment into the rack. Uneven mechanical loading may lead to hazardous consequences.
- This equipment is to be installed for operation in an environment with maximum ambient temperature below 35°C.
- Review the environment before performing any installation or servicing. Keep the equipment away from hazardous and uneven grounds.
- This server must be installed only in Restricted Access Locations.

Handle equipment with care.

請謹慎操作設備。

请谨慎操作设备。

Обращайтесь с оборудованием осторожно.

Behandel de apparatuur voorzichtig.

- Do not cover the openings of the system. The openings on the system are for air convection, which intentionally protect the equipment from overheating.
- Never pour any liquid into ventilation openings of the system. This could cause catastrophic fire or electrical shock.

- Ensure that the voltage of the power source is within the specification on the label when connecting the equipment to the power outlet. The current load and output power of loads must be within the specification.
- This equipment must be firmly connected to reliable grounding before usage. Pay special attention to power supplied other than direct connections, e.g. using of power strips.
- Place the power cord out of the way of foot traffic. Do not place anything over the power cord. The power cord must be rated for the product, voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product.

Pay attention to hardware maintenance.

注意硬體維護。

注意硬体维护。

Обратите внимание на обслуживание оборудования.

Besteed aandacht aan hardware-onderhoud.

- If the equipment is not used for a long time, disconnect the equipment from mains to avoid being damaged by transient over-voltage.
- Module and drive bays must not be empty. They must have a dummy cover.
- Never open the equipment without professional assistance. For safety reasons, only qualified service personnel should open the equipment.
- If one of the following situations arise, the equipment should be checked and tested by service personnel:
 1. The power cord or plug is damaged.
 2. Liquid has penetrated the equipment.
 3. The equipment has been exposed to moisture.
 4. The equipment does not work well or will not work according to its user manual.
 5. The equipment has been dropped and/or damaged.
 6. The equipment has obvious signs of breakage.
 7. Please disconnect this equipment from the AC outlet before cleaning. Do not use liquid or detergent for cleaning. The use of a moisture sheet or cloth is recommended for cleaning.



CAUTION

The equipment intended for installation should be placed in Restricted Access Location.



CAUTION

There will be a risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. After performing any installation or servicing, make sure the enclosure is correct in position before turning on the power.



CAUTION

This unit may have more than one power supply. Disconnect all power sources before maintenance to avoid electric shock.



About This Manual

Thank you for selecting and purchasing the SB407-TU.

This user's manual is provided for professional technicians to perform easy hardware setup, basic system configurations and quick software startup. This document pellucidly presents a brief overview of the product design, device installation and firmware settings for SB407-TU. For the latest version of this user's manual, please refer to the AIC® website: <https://www.aicipc.com/en/productdetail/51384>.

Chapter 1 Product Features

SB407-TU is a flexible storage server barebone that is specifically designed to accommodate diverse corporations and enterprises for managing heavy workloads and multiple applications.

Chapter 2 Hardware Setup

This chapter displays an easy installation guide for assembling the hardware in this product. Utmost caution for proceeding to set up the hardware is highly advised. Most of the components are highly fragile and vulnerable to exterior influence. Do not endanger the device by placing the device in an unstable environment.

Chapter 3 Motherboard Settings

This chapter elaborates the overall layout of the server motherboard, including multifarious connectors, jumpers and LED descriptions. These descriptions assist users to configure different settings and functions of the motherboard, as well as to confirm the placement of each connector and jumper.

Chapter 4 BIOS Configuration Settings

This chapter introduces the key features of BIOS, including the descriptions and option keys for diverse functions. These details provide users to effortlessly navigate and configure the input/output devices.

Chapter 5 BMC Configuration Settings

This chapter illustrates the diverse functions of IPMI BMC, including the details on logging into the web page and assorted definitions. These descriptions are helpful in configuring various functions through Web GUI without entering the BIOS setup. For more information of BMC configurations, please refer to IPMI BMC (Aspeed AST2500) User's Manual for a more detailed description.

Chapter 6 Technical Support

For more information or suggestion, please contact the nearest AIC® corporation representative in your district or visit the AIC® website: <https://www.aicipc.com/en/index>. It is our greatest honor to provide the best service for our customers.

Chapter 1. Product Features

SB407-TU is a high density storage server that includes motherboard, chassis, power supply and disk drive. For more information about our product, please visit our website at <https://www.aicpc.com/en/index>.

Before removing the subsystem from the shipping carton, visually inspect the physical condition of the shipping carton. Exterior damage to the shipping carton may indicate that the contents of the carton are damaged. If any damage is found, do not remove the components; contact the dealer where the subsystem was purchased for further instructions. Before continuing, first unpack the subsystem and verify that the number of components in the shipping carton is accurate and in good condition.

1.1 Box Contents

This product contains the components listed below.

Please confirm the number and the condition of the components before installation.


| Pre-installed into the system | | Number |
|-------------------------------|--|-----------------|
| ✓ | 800W redundant power supply 80+ Platinum | 2+2 |
| ✓ | 2.5-inch disk drive tray (rear) | 8 |
| | 3.5-inch disk drive tray (top-load) | 60 |
| ✓ | Heat sink | 2 |
| ✓ | Middle: hot swap fans (4 x 80x38mm) | 4 |
| ✓ | AIC® Tucana motherboard | 1 |
| Accessory Item | | Number |
| ✓ | EPE foam for front board: 576*524*140H | 1 |
| ✓ | EPE foam for rear board: 576*524*140H | 1 |
| ✓ | EPE foam for front tray: 576*524*220H | 1 |
| ✓ | EPE foam for rear tray: 576*524*220H | 1 |
| ✓ | EPE PAD: 325*145*30T | 2 |
| ✓ | EPE foam for short rail: 305*15*45H | 1 |
| ✓ | Power cord | vary per region |
| ✓ | 43-inch tool-less slide rail assembly | 1 |
| option | Cable management kit | 1 |

Product features are subject to change without notice.

1.2 Specifications

| | | | | | | | |
|----------------------------------|--|--|--------------------------|-------------------------------------|--|--|---|
| Dimensions (W x D x H) | mm : 434 x 853 x 176 | | | System BIOS | BIOS Type | AMI UEFI BIOS | |
| | inches : 17.1 x 35 x 7 | | | | BIOS Features | <ul style="list-style-type: none"> • ACPI • PXE • WOL • AC loss recovery • IPMI 2.0 KCS interface • SMBIOS • Serial console redirection • BIOS Boot Specification • BIOS Recovery Mode • SRIOV • iSCSI • TPM • PCIe Hotplug | |
| Motherboard | AIC Server Board Tucana | | | | | | |
| Processor | Processor Support | Intel® 3rd Gen Xeon® Scalable Processors (Ice Lake) <i>*Please contact AIC Technical Support for more info/details about optimized CPUs and specialized system.</i> | | | | | |
| | CPU Interconnection | 11.2 GT/s | | | | | |
| | Socket Type | Socket P+ (LGA-4189) | | | | | |
| Chipset Support | Intel® Lewisburg-R C621A PCH | | | | On-board Devices | SATA | <ul style="list-style-type: none"> • Intel® Lewisburg-R on-chip solution • 8 x SATA 6.0 Gb/s (by 1 x Slimline 8i) • 2 x SATA 6.0 Gb/s (by 2 x SATA 7 pin) • RAID 0, 1, 5, 10 support by Intel RSTe |
| System Memory | <ul style="list-style-type: none"> • 8 x memory channels per CPU, 1 x DIMM per channel • 16 x DIMM slots support 3200/2933/2666 MT/S • Intel® Optane™ Persistent Memory 200 (Barlow pass) support | | | | | IPMI | <ul style="list-style-type: none"> • Aspeed AST2500 Advanced PCIe Graphics & Remote Management Processor • Baseboard Management Controller • Intelligent Platform Interface 2.0 (IPMI 2.0) • iKVM, Media Redirection, IPMI over LAN, Serial over LAN • SMASH Support • HTML5 • Redfish |
| Front Panel | System power on/off, System reset, 2 x USB 3.0 Type A | | | | | | |
| LEDs | Power status, System alert, LAN activity, Drive activity, System ID | | | | | | |
| | <ul style="list-style-type: none"> • Power (Secondary) • Warning B : <ul style="list-style-type: none"> • Power (Primary) • Warning | | | | | | |
| Drive Bays | Top-load | 3.5" hot swap | 60 (SATA/SAS) | Network Controllers | | <ul style="list-style-type: none"> • Realtek RTL8211E 10/100/1000 Mbps Ethernet for BMC dedicated management port • Reserve NC-SI to OCP bay for optional shared-NIC module | |
| | Rear panel | 2.5" hot swap | 8 NVMe | | | | |
| | Internal | M.2 | 2 x M.2(NGFF)/M-Key/2280 | | | | |
| Backplane | 2 x 30-port 12G SAS backplanes with 40-PHY expander | | | Graphics | | <ul style="list-style-type: none"> • Aspeed AST2500 Advanced PCIe Graphics & Remote Management Processor • PCIe VGA/2D Controller • 1920x1200 • 60Hz 32bpp | |
| Expansion Slots | PCIe 4.0 | <ul style="list-style-type: none"> • 3 x PCIe X16 slots (FHHL) • 2 x PCIe X8 slots (FHHL) • 1 x PCIe X16 OCP (hot-swappable) | | | | | |
| Rear I/O | LAN | 1 x 10/100/1000M RJ45 dedicated to BMC management | | System Management | <ul style="list-style-type: none"> • Baseboard Management Controller • Intelligent Platform Interface 2.0 (IPMI 2.0) • iKVM, Media Redirection, IPMI over LAN, Serial over LAN • SMASH Support • HTML5 • Redfish | | |
| | USB | 2 x USB3.0 double-staked Type A connector | | | | | |
| | VGA | 1 x external VGA port (in slot#1) | | Environmental Specifications | <ul style="list-style-type: none"> • Storage temperature : -10°C(14°F) ~ 60°C(140°F) • Operating temperature : 0°C(32°F) ~ 35°C(95°F) • Storage operating humidity : 5%~95% non-condensing | | |
| | Serial Port | 1 x external COM port phone jack | | | | | |
| TPM Support | 2.0 onboard | | | Gross Weight | (w/ PSU & Rail) | kgs : 80 | |
| Power Supply | Standard | 800W 2+2 redundant PSU PMBus 1.2 80+ Platinum | | Packaging Dimensions | (W x D x H) | lbs : 176 | |
| | Options | <ul style="list-style-type: none"> • 800W 2+2 redundant • 1200W 1+1 redundant • 1600W 1+1 redundant | | | | mm : 586 x 1110 x 400 | |
| | System Cooling | Middle : 4 x 80x38mm hot swap fans | | | Mounting | Standard | 37" tool-less slide rail (SKU01) |
| | | | Optional | 40" tool-less slide rail (SKU02) | | | |
| | | | | | | Cable Management Kit | |

1.3 System Block Diagram

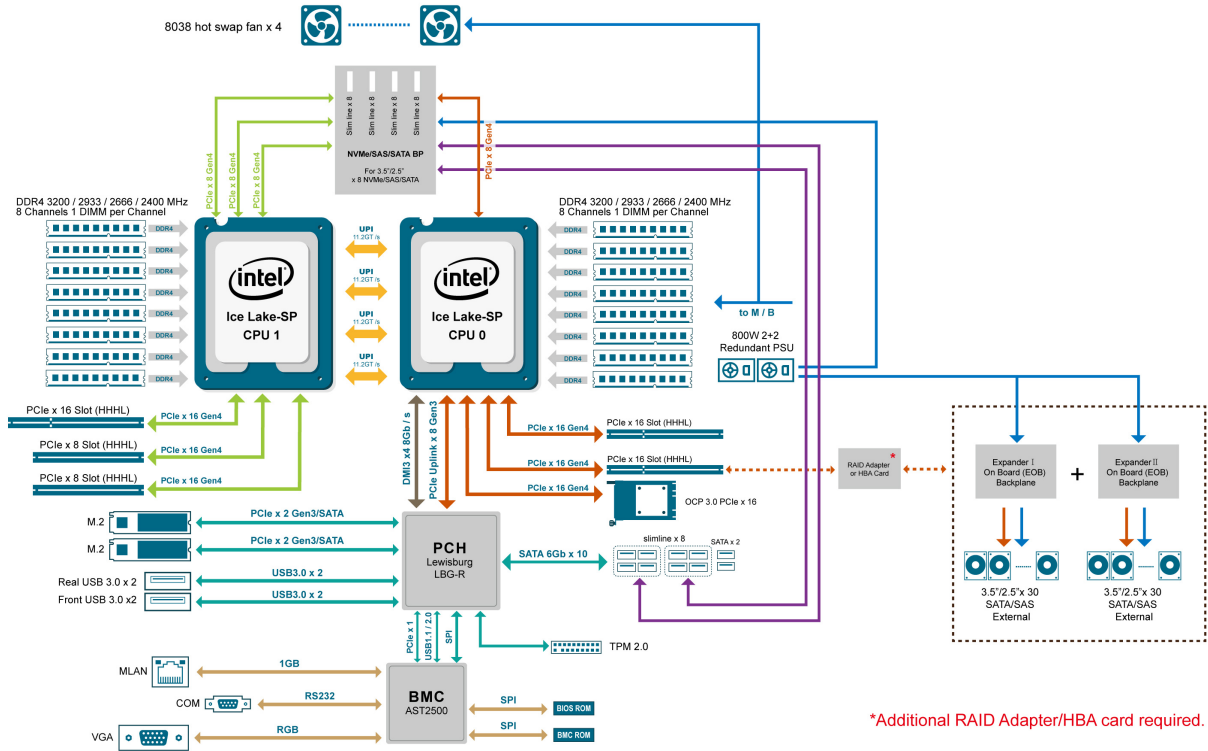

*Additional RAID Adapter/HBA card required.


1.4 Features

SB407-TU is a reliable 4U storage server barebone with 60 hot swap 3.5-inch SAS drives bays. This product is designed to accommodate the AIC-patented serverboard, Tucana, which supports two Intel® Xeon® Scalable Processors and 16 DDR4 DIMM to offer greater performance, efficiency and utility for our customers. Featuring Intel® C621A Series Chipset, which is emphasized for its accelerated speed and expansion, this product enhances these advantages by integrating flexible IO usage and system expansion into to provide greater bandwidth and utilization.

In addition to the noteworthy features of the barebone, SB407-TU provides immediate and efficient management with Onboard Baseboard Management Controller and greater I/O extension. Featuring IPMI 2.0 and Aspeed AST2500 Advanced PCIe Graphics, the server board offers support for iKVM, Media Redirection, Smash Support, IPMI over LAN and Serial over LAN.

- 4U high-density storage server supports 60 hot swap 3.5" SAS drive bays
- Supports 3rd generation Intel® Xeon® Scalable Processor (Ice Lake)
- Intel® C621A chipset to provide 5+ years product life cycle
- Onboard Baseboard Management Controller for system management and IPMI control
- Dedicated BMC management port
- Front-to-back airflow and hot swap redundant fans to provide optimal thermal conditions


Front Panel

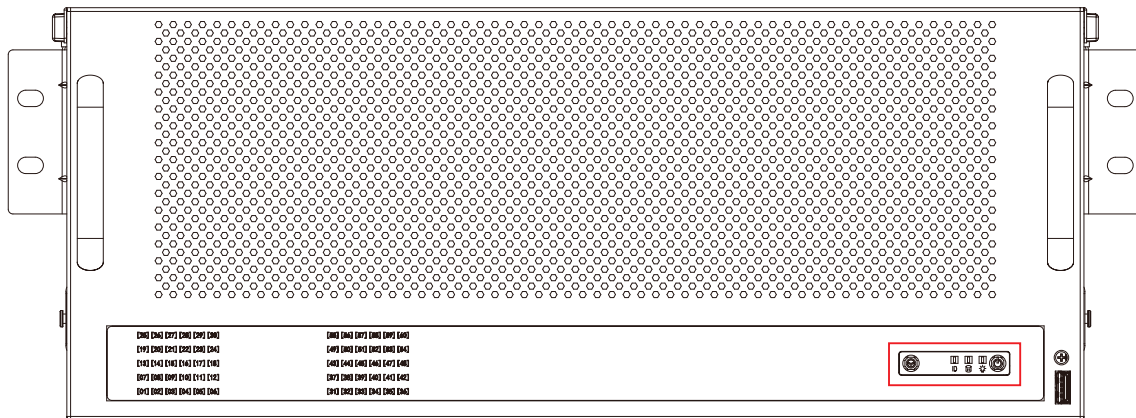

System LED Indicator and switch


| Item | Description | Item | Description |
|------|--------------------|------|---------------------|
| | Power Button | | System ID LED |
| | Power Status LED | | System Reset Button |
| | Drive Activity LED | | |

Rear Panel

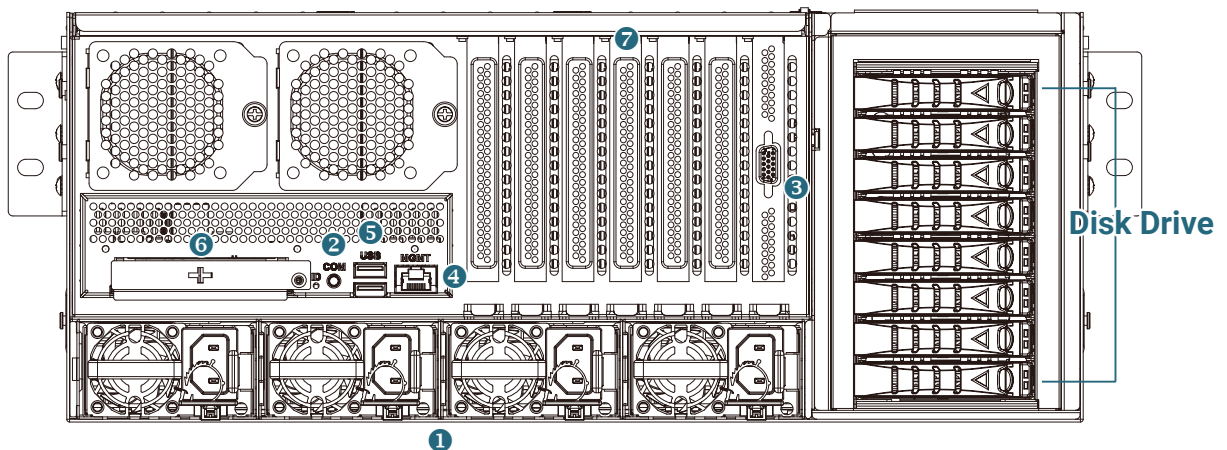

| Item | Description |
|------|---|
| 1 | 800W 2+2 redundant power supply 80+ Platinum |
| 2 | 1 x external COM port phone jack |
| 3 | 1 x VGA port (in slot#1) |
| 4 | 1 x GbE RJ45 dedicated to BMC management port |
| 5 | 2 x USB 3.2 Gen1x1 Type A in double-stack connector |
| 6 | 1 x PCIe X16 OCP 3.0 slot (hot-swappable) |
| 7 | 3 x PCIe X16 slots (FHHL) 2 x PCIe X8 slots (FHHL) |

Top View

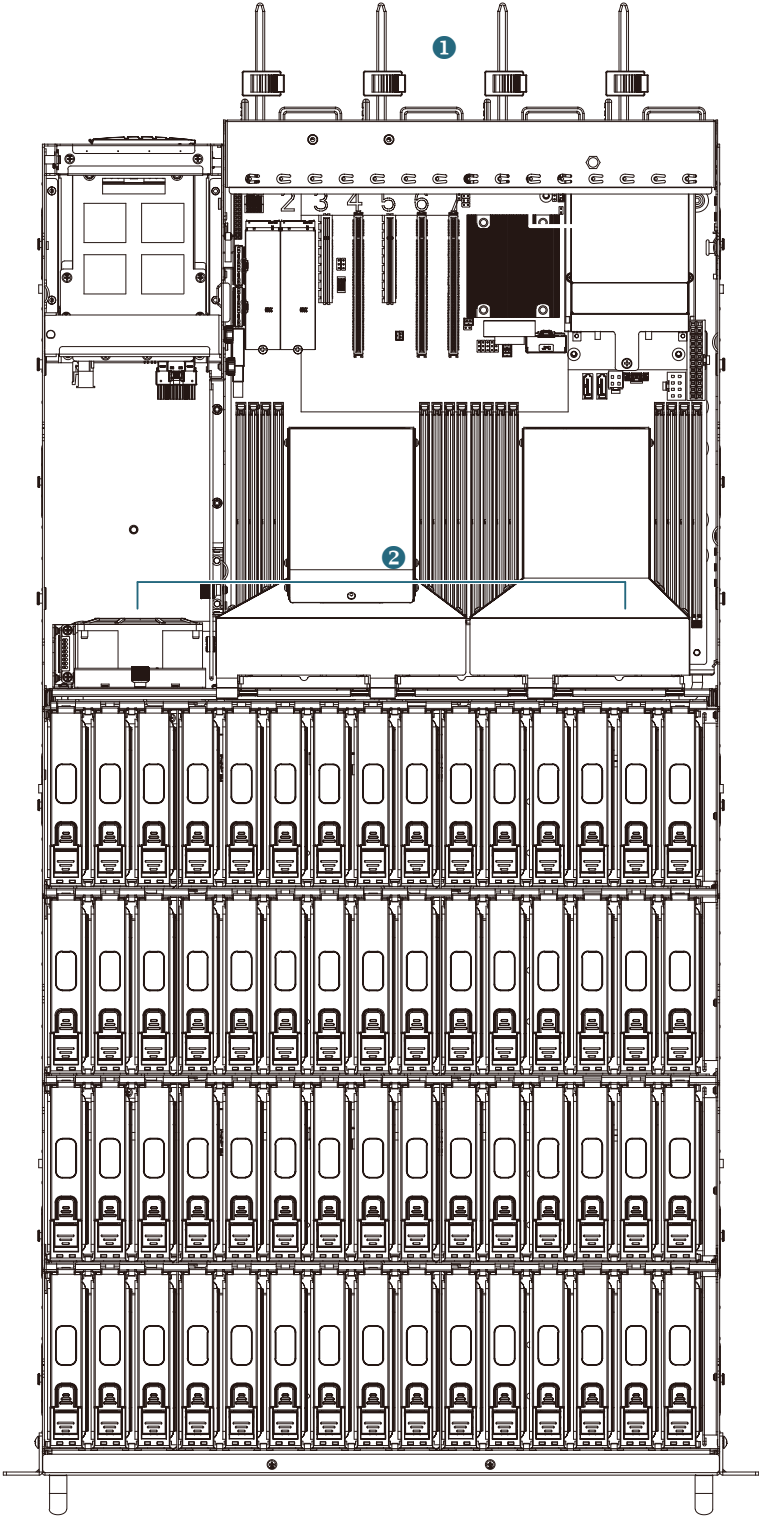

| Item | Description |
|------|---|
| 1 | 800W 2+2 redundant power supply 80+Platinum |
| 2 | 4 x 80x38mm hot swap fans (middle) |
| 3 | 60 x 3.5-inch hot swap disk drives |

Chapter 2. Hardware Setup

This chapter provides the graphic detail and basic instruction for hardware installation. Turn off the system and unplug all peripheral devices before proceeding.

2.1 Central Processing Unit

The serverboard supports dual Xeon scalable processors and Socket P4 (LGA-4189).

2.1.1 Installation

To ensure a safe and easy setup, you need to prepare before installation:

- a T30 torque screwdriver
- ESD wrist strap/mat and conductive foam pad
- Safe and stable environment



CAUTION

The pins of the processor socket are vulnerable and easily susceptible to damage if fingers or any foreign objects are pressed against them. Please keep the socket protective cover on when the processor is not installed.




CAUTION

When unpacking a processor, hold the processor only by its edges to avoid touching the contacts.

Standard Processor Assembly:


A standard processor assembly is comprised of 5 components: processor carrier, processor, bolster plate assembly, socket and back plate.

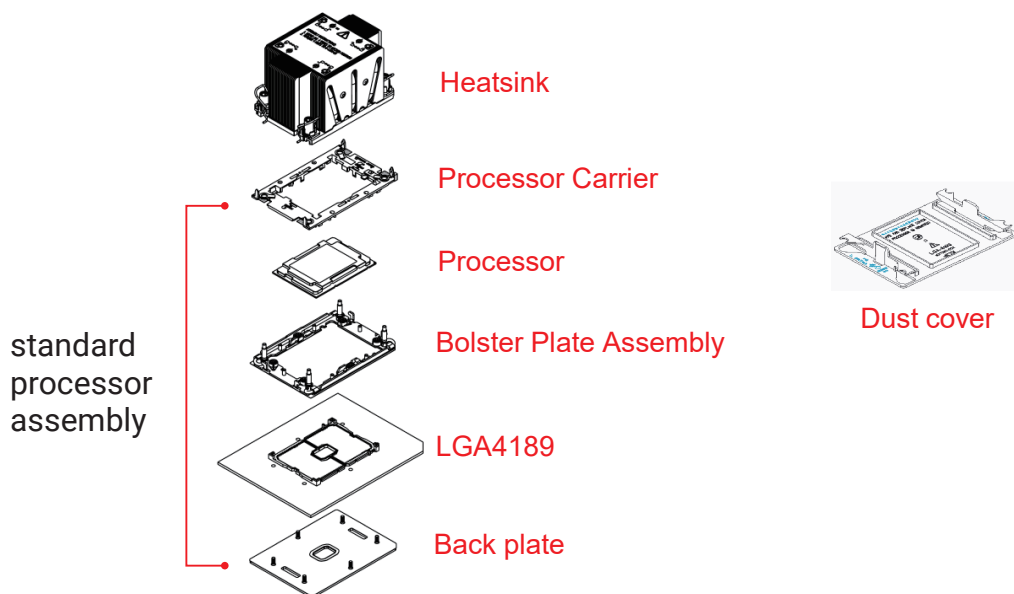


This information is provided for professional technicians only.

Procedure:

- ① Remove the dust cover. Push the tab inward on both sides to remove.

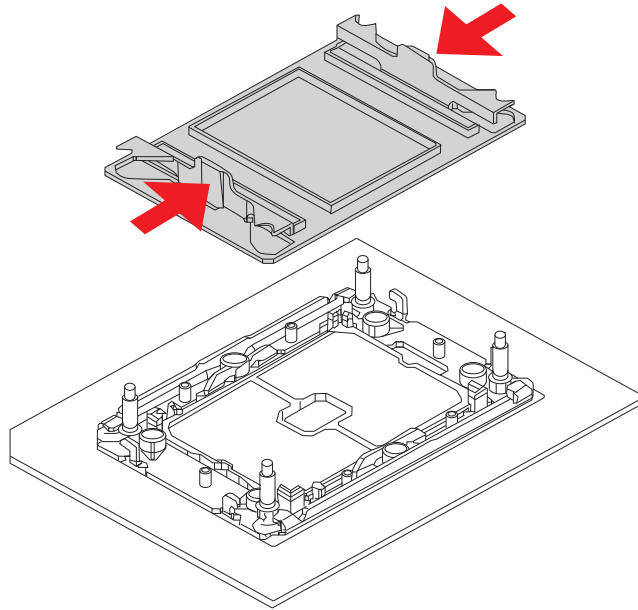



- ② Remove the Pnp cap from the socket. Press the tabs on both sides to remove.

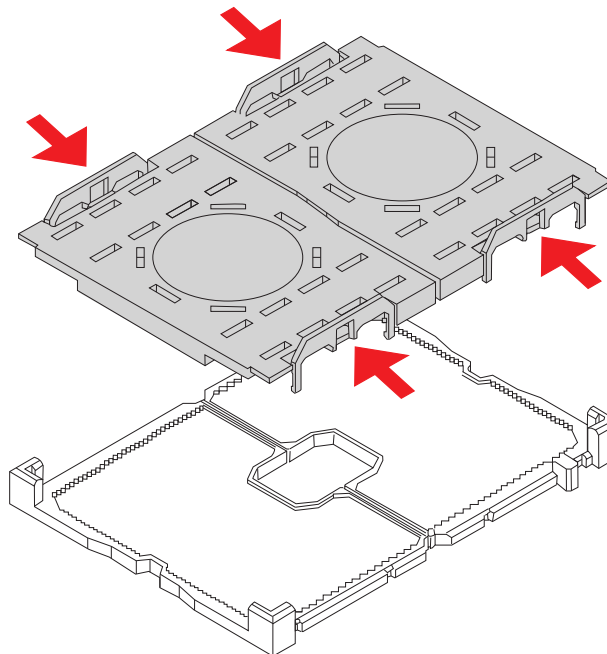


- Insert the CPU into the CPU carrier. Carefully align and insert on side of the CPU and then the other.

**NOTE**


Must ensure to match the direction and pin of the CPU with the carrier. Refer to the placement of pin 1.

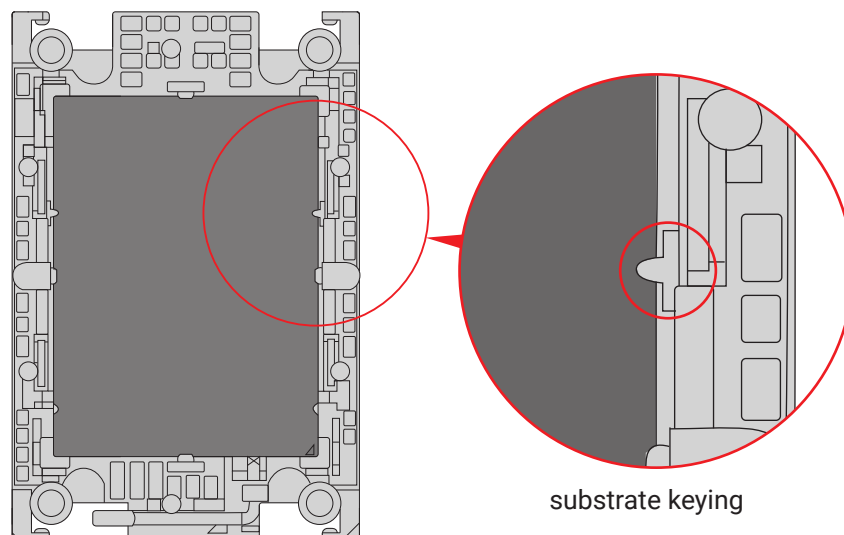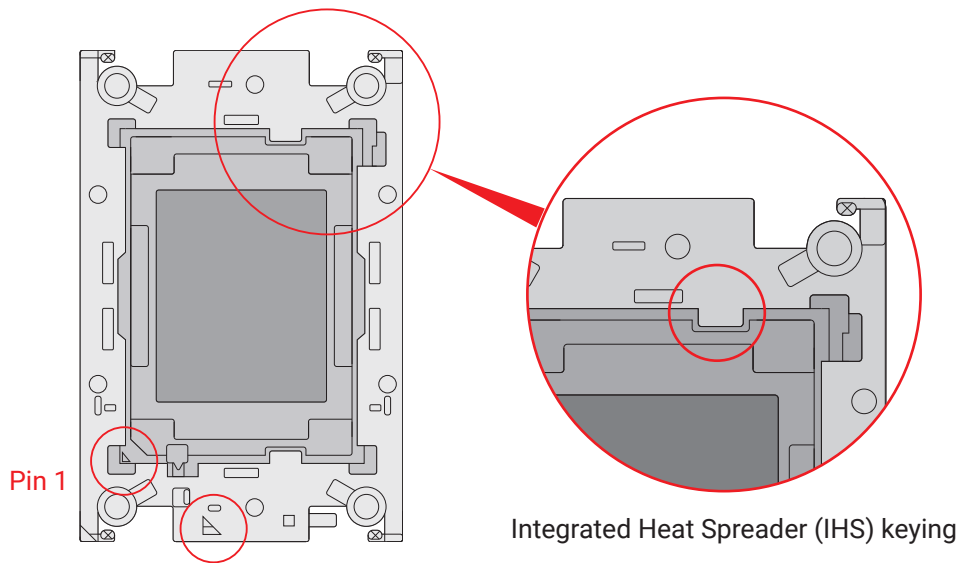

- ④ Attach the heat sink onto the CPU carrier. Hook the corners of the CPU carrier to the back side of the heat sink.

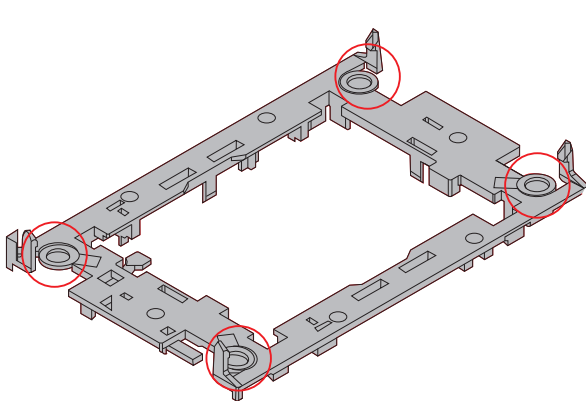

CPU carrier

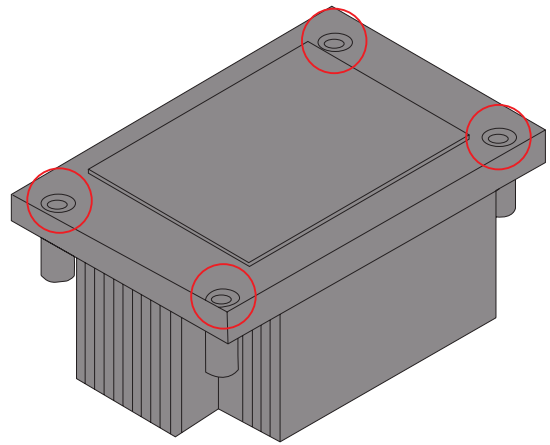


Heatsink back side


- ⑤ Install the assembled heat sink and CPU carrier onto the CPU socket. Please use a T-30 torque driver to tighten the nuts in the four corners of the heat sink labeled in the order 1 → 2 → 3 → 4.

**CAUTION**


Failure to tighten the heat sink screws in the specified order may cause damage to the processor socket assembly. Heat sink screws is recommended to be tightened to 8 in-lbs torque, but can be tightened to 12 in-lbs torque according to the indicated order on the top of the heatsink label.

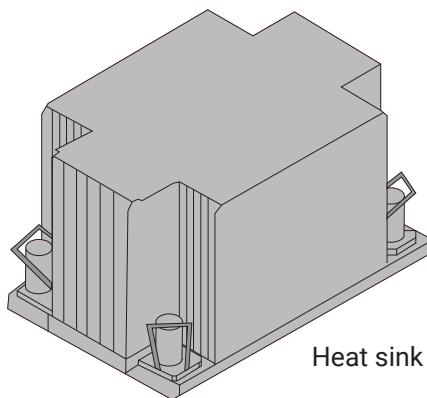

Heat sink with carrier


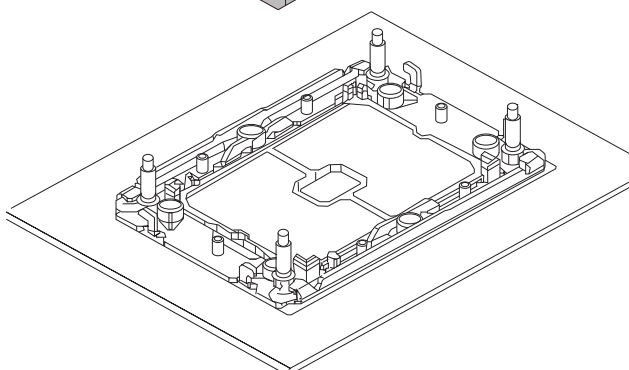


CPU socket

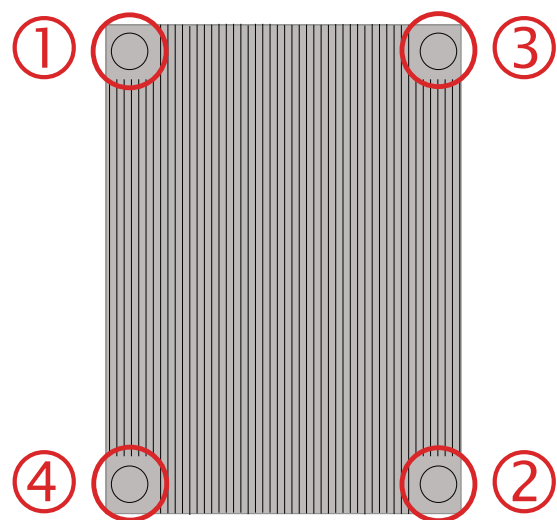

Screw tightening order

- ⑥ Press the rotating wire located on the four corners of the heat sink to latch position to secure the heat sink.

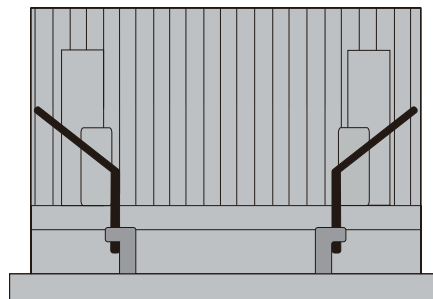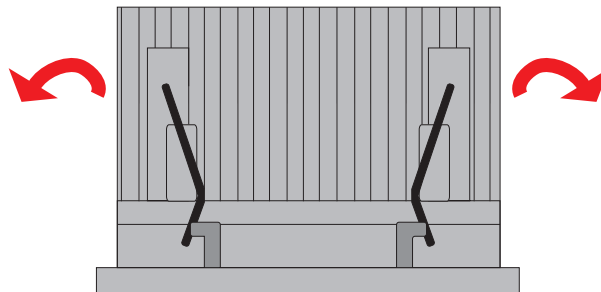

Latched position



This information is provided for professional technicians only.


2.2 System Memory

2.2.1 Placement

The DIMMs are displayed on the Tucana board as JDIMM1/JDIMM2/JDIMM3/JDIMM4/JDIMM5/JDIMM6/JDIMM7/JDIMM8/JDIMM9/JDIMM10/JDIMM11/JDIMM12/JDIMM13/JDIMM14/JDIMM15/JDIMM16

To ensure satisfactory performance, you need to:

- ☑ Verify the DIMM type:
 - This product supports DDR4 RDIMM/LRDIMM
- ☑ Verify if all of the DIMMs installed are of the same DIMM type to avoid memory failure and loss of performance speed.

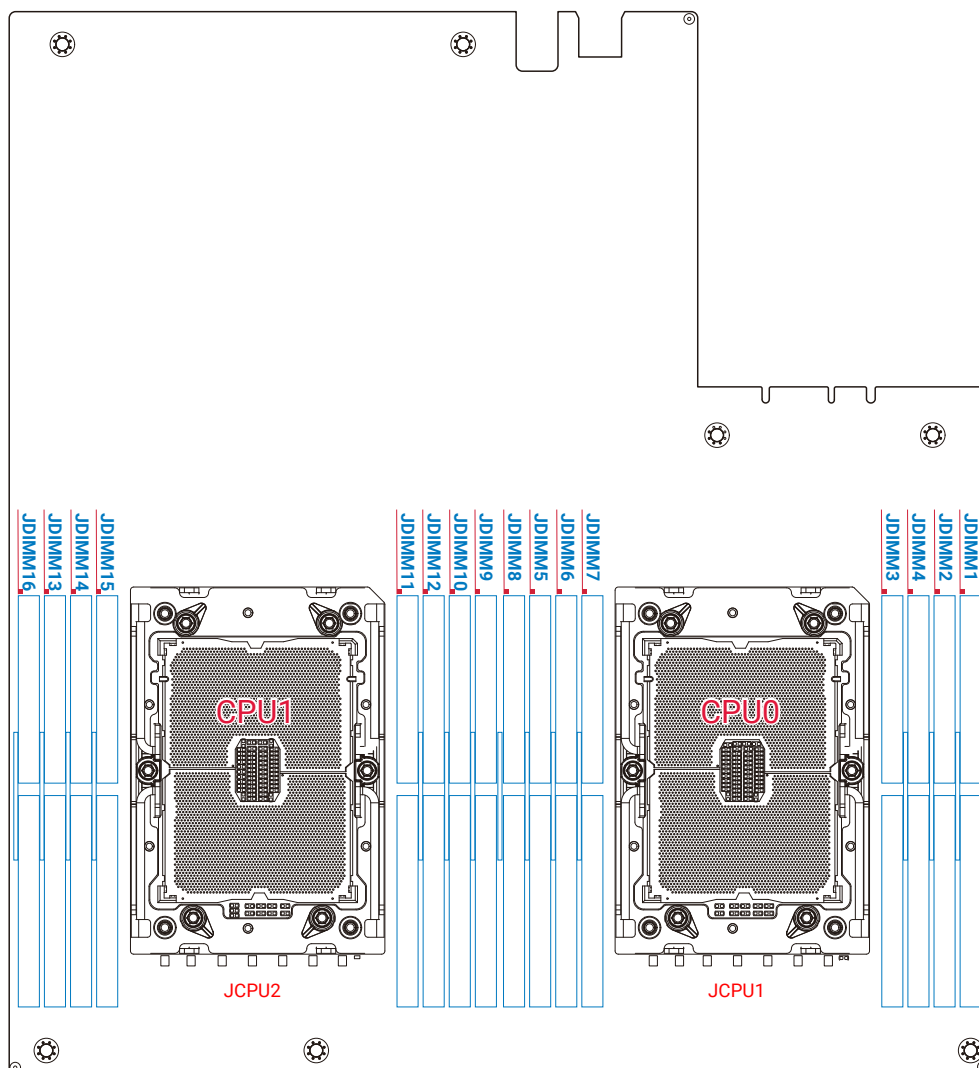

2.2.2 DIMM Population



NOTE

Rules to abide by before installation:

- Must install at least one DDR4 DIMM per socket.
- If only one DIMM is populated in a channel, you must install it in the slot furthest away from the CPU.
- Must populate DIMM0 before DIMM1.



The symbol # in the graph below indicates that the DIMM slot is populated.

1 CPU Configuration

| Placement | | DIMM Number | | | | |
|-----------|--------|-------------|---|---|---|---|
| | | 1 | 2 | 4 | 6 | 8 |
| CPU0 | JDIMM1 | | # | # | # | # |
| | JDIMM2 | # | | | # | # |
| | JDIMM4 | | | | # | # |
| | JDIMM3 | | | # | | # |
| | JDIMM7 | | | # | | # |
| | JDIMM6 | | | | # | # |
| | JDIMM5 | | # | # | # | # |
| | JDIMM8 | | | | # | # |

2 CPU Configurations


| Placement | | DIMM Number | | | | |
|-----------|---------|-------------|---|---|---|---|
| | | 1 | 2 | 4 | 6 | 8 |
| CPU0 | JDIMM1 | | # | # | # | # |
| | JDIMM2 | # | | | # | # |
| | JDIMM4 | | | | # | # |
| | JDIMM3 | | | # | | # |
| | JDIMM7 | | | # | | # |
| | JDIMM6 | | | | # | # |
| | JDIMM5 | | # | # | # | # |
| | JDIMM8 | | | | # | # |
| Placement | | 1 | 2 | 4 | 6 | 8 |
| CPU1 | JDIMM9 | | # | # | # | # |
| | JDIMM10 | # | | | # | # |
| | JDIMM12 | | | | # | # |
| | JDIMM11 | | | # | | # |
| | JDIMM15 | | | # | | # |
| | JDIMM14 | | | | # | # |
| | JDIMM13 | | # | # | # | # |
| | JDIMM16 | | | | # | # |

2.2.3 Installation


Step 1 Unlock the DIMM socket by pressing the retaining clip outward.



Step 2 Insert the memory module into the slot. Make sure that the DIMM notch is accurately positioned.

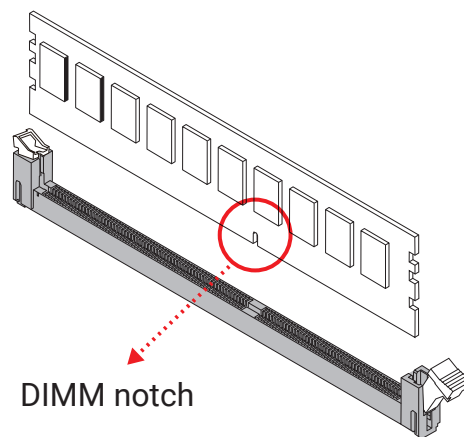


Step 3 Close the retaining clip to complete installation.

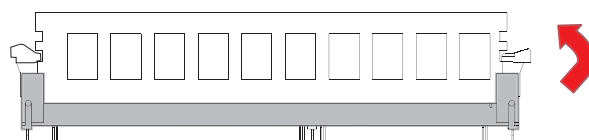

2.3 Top Cover



The server consists of three covers: cover front, middle, and rear cover.

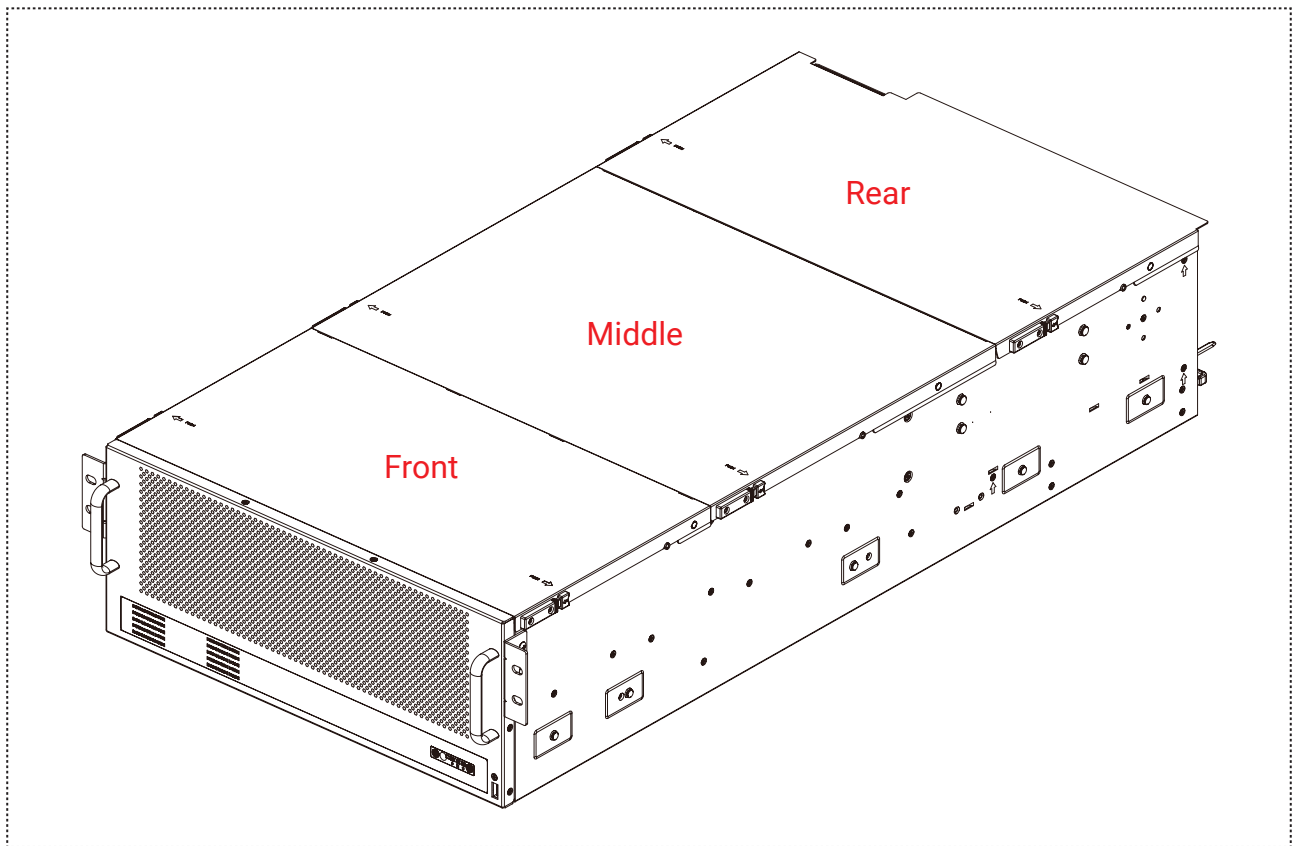

This information is provided for professional technicians only.


Front and Middle Top Cover

- ① Press the eject button on both sides of the top cover and simultaneously push the cover towards the **front panel**.
- ② Lift upward to remove the cover.

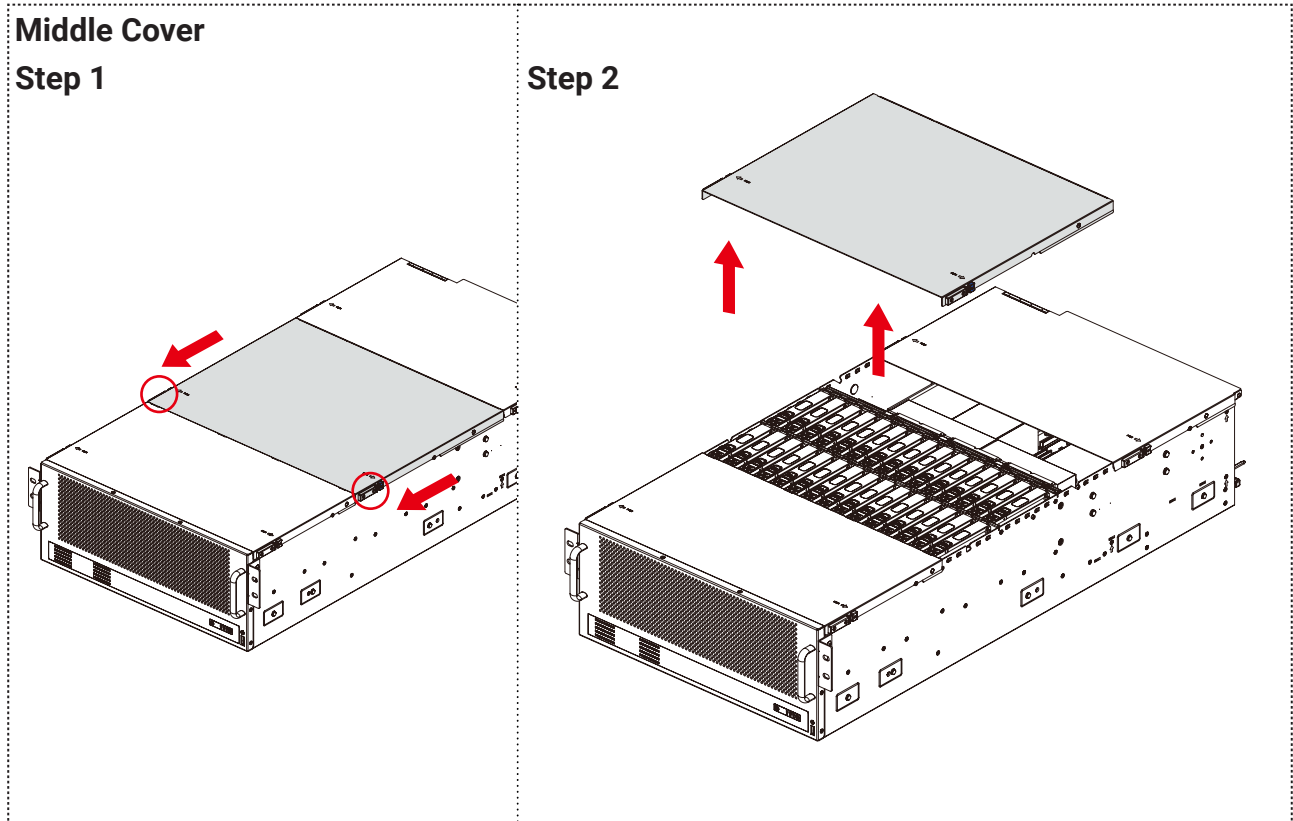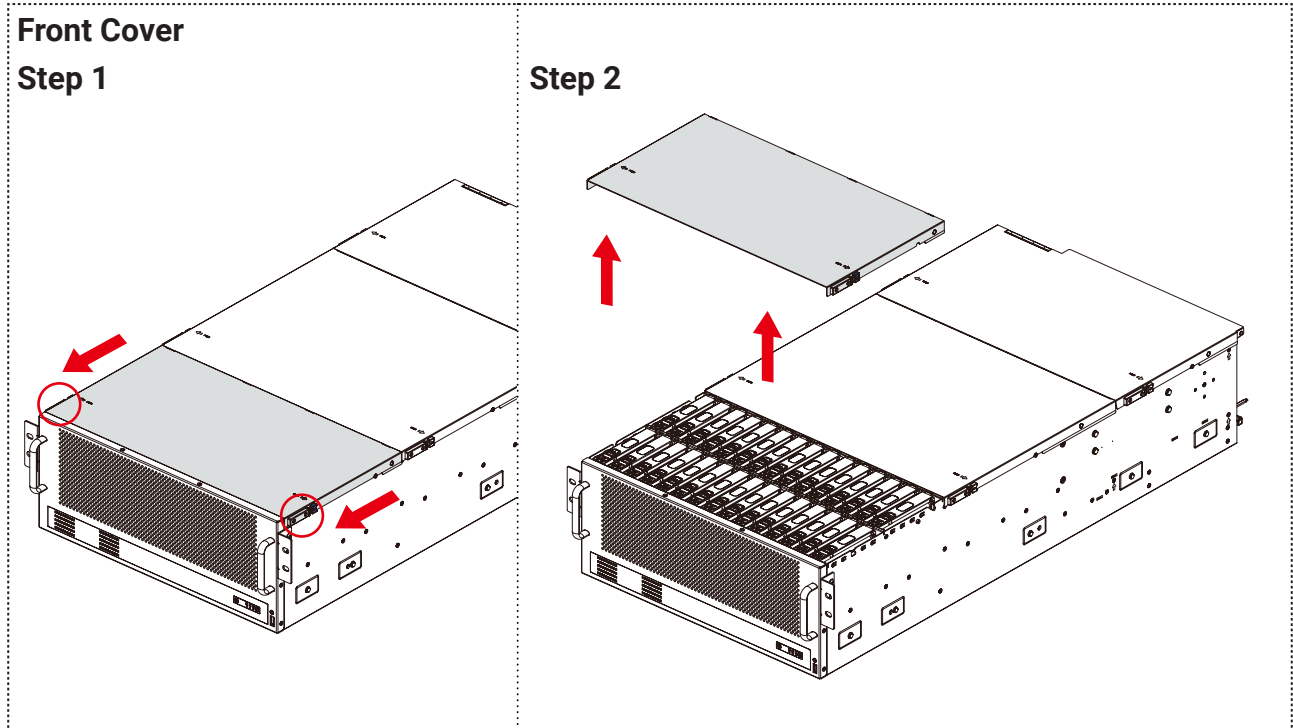

Rear Top Cover

- ① Press the eject button on both sides of the top cover and simultaneously push the cover towards the **front panel**.
- ② Lift upward to remove the cover.

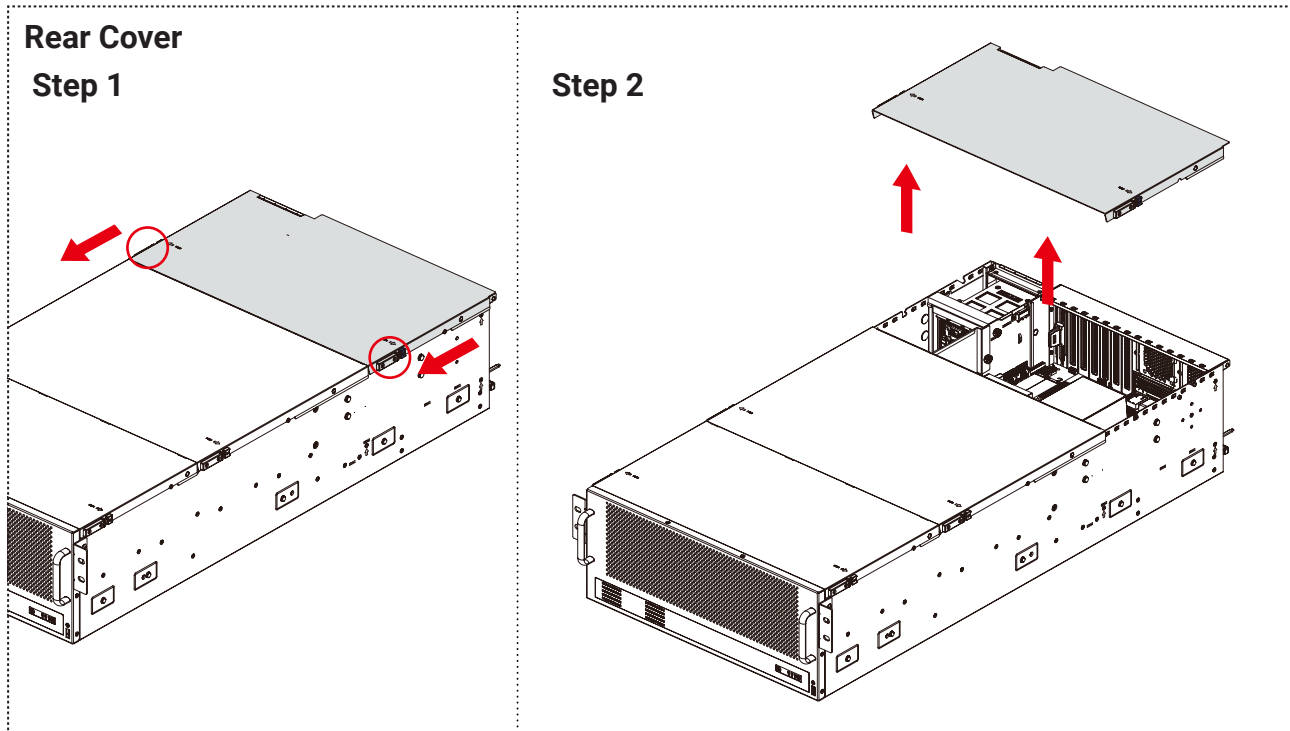


This information is provided for professional technicians only.

2.4 Power Supply Unit

2.4.1 Installation

- ① Press the ejector to release the module.
- ② Pull the handle to remove the module out of the chassis.
- ③ Push the replaced power supply unit into the chassis. Ensure that the module is hooked into the cage.

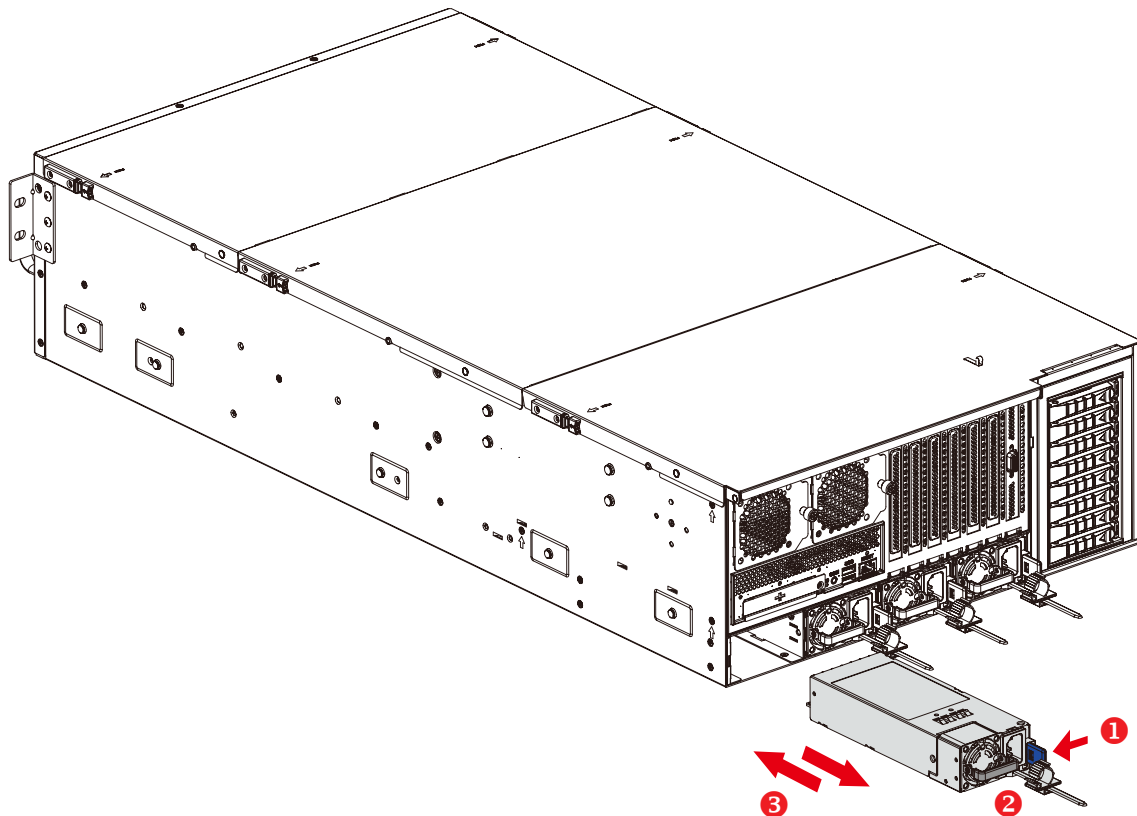

2.4.2 LED Indicator


| Color | Behavior | Description |
|-------|---------------|--|
| Green | Solid | Output on and working normally. |
| | Blinking, 1Hz | Only 12Vsb on (PS off) or PSU is in cold redundant state. |
| Amber | Solid | Power supply critical event causing a shutdown; AC cord unplugged or AC power lost, failure, OCP, OVP, fan fail. |
| | Blinking, 1Hz | Power supply warning events where the power supply continues to operate high temp, high power, high current, slow fan. |




This information is provided for professional technicians only.

2.5 Fan

- ① Remove the top cover from the chassis. Please refer to [Section 2.3 Top Cover](#).
- ② Lift the air duct to reveal the fan.
- ③ Unplug the fan cables and connectors from the server board.
- ④ Pull the top fan out of the chassis.

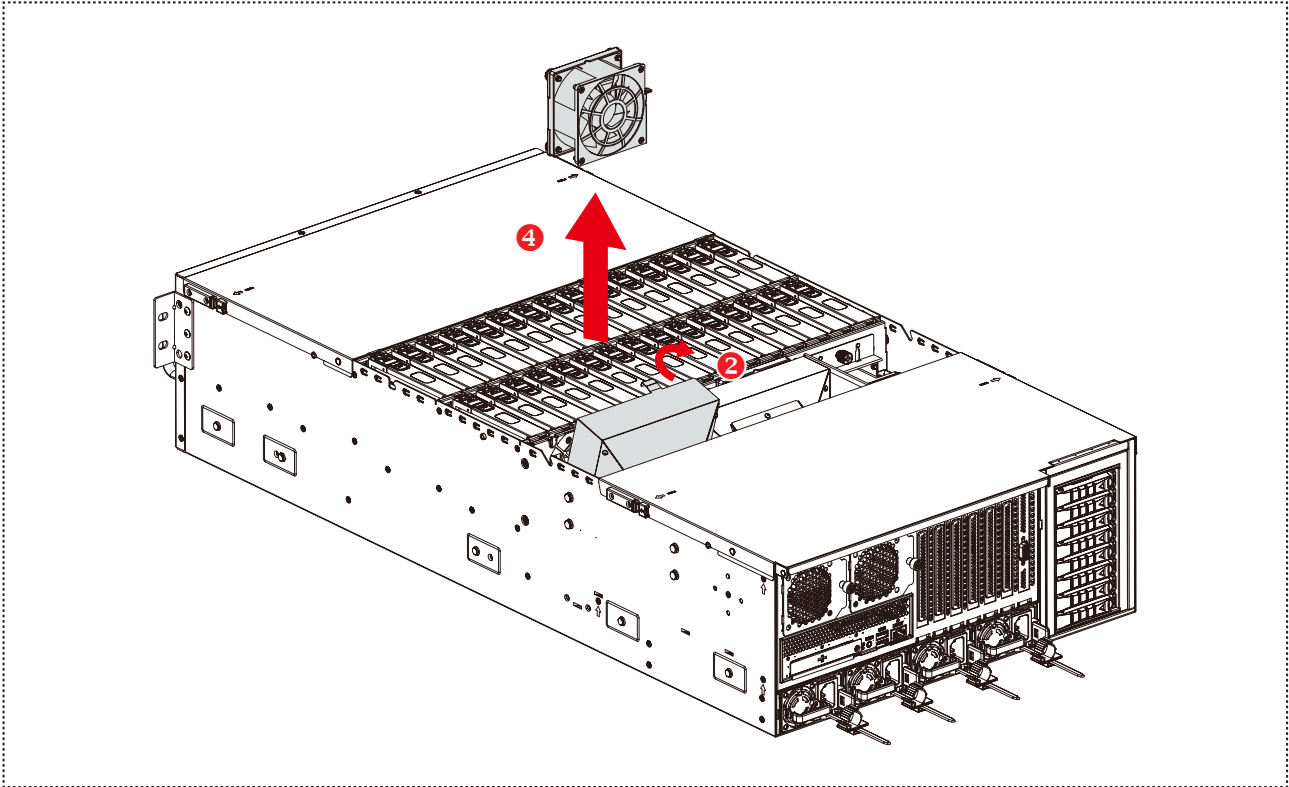

- ① Dislodge the captive screw on the bracket securing the fan.
- ② Unplug the fan cables and connectors from the server board.
- ③ Pull the top fan out of the chassis.

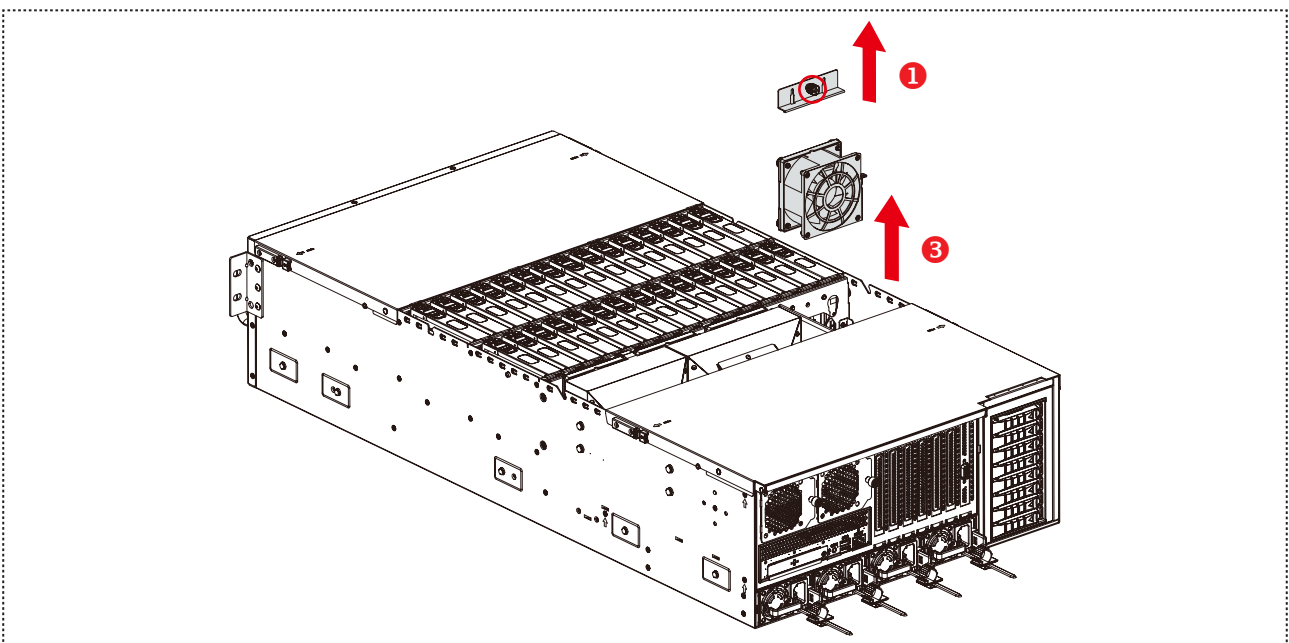


This information is provided for professional technicians only.


2.6 Disk Drive

2.6.1 Disk Drive: 2.5-inch

- ① Press the ejector on the tray to release the handle.
- ② Pull the tray handle completely outward.
- ③ Pull the drive tray out of the chassis.

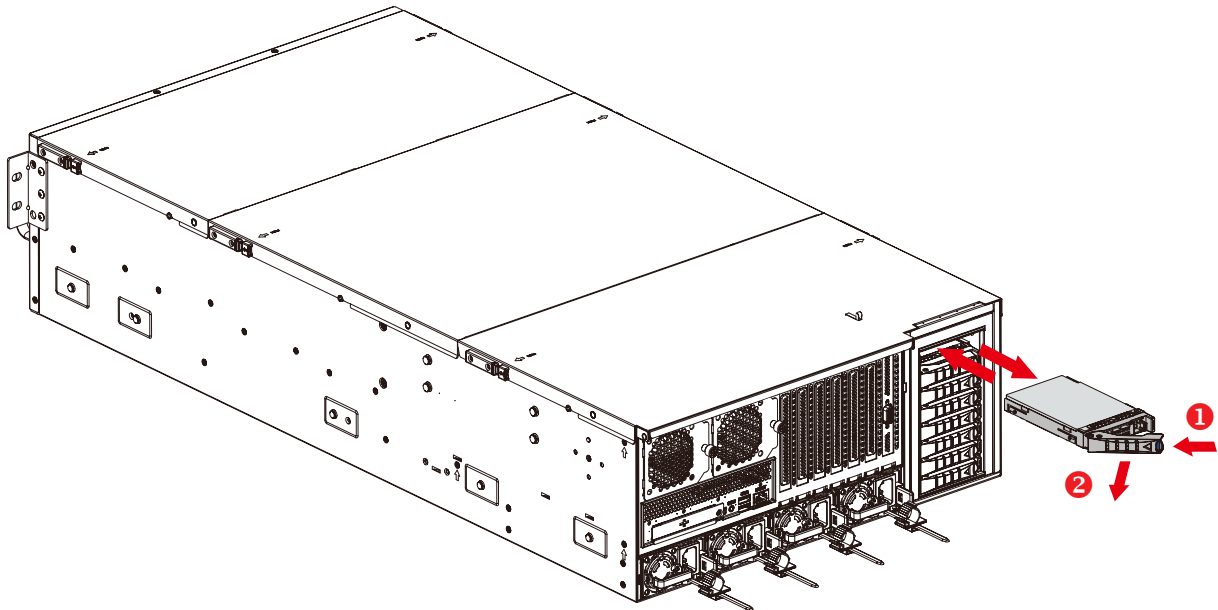

- ④ Insert the disk drive into the tray. Ensure that the dimples on the tray match the disk drive. For additional assurance, fasten the screws * 4 on the tray to secure the disk drive.

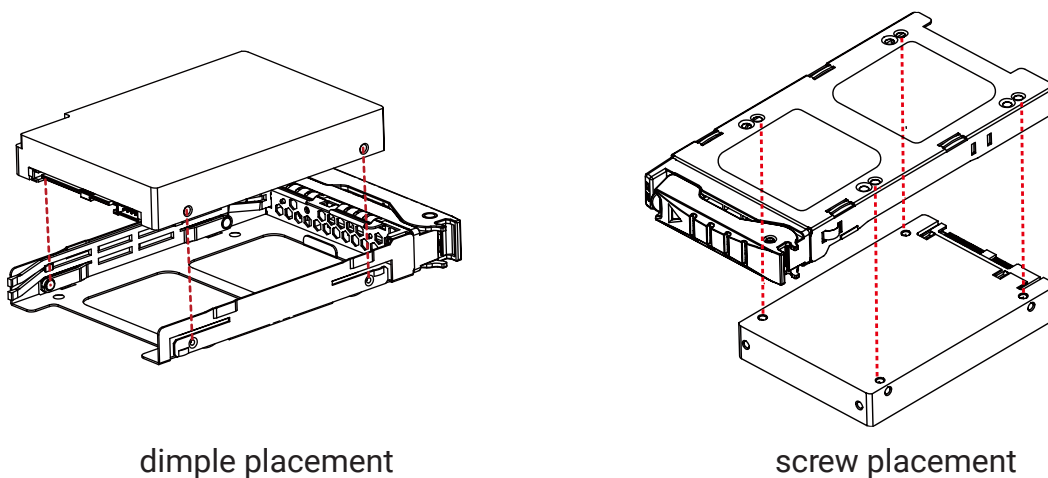


dimple placement

screw placement


- ⑤ Push the tray with the installed disk drive into the end of the drive slot in the chassis.
- ⑥ Close the tray handle.

2.6.2 Disk Drive: 3.5-inch

- ① Press the ejector on the tray to release the handle.
- ② Pull the tray handle completely outward.
- ③ Pull the drive tray out of the chassis.

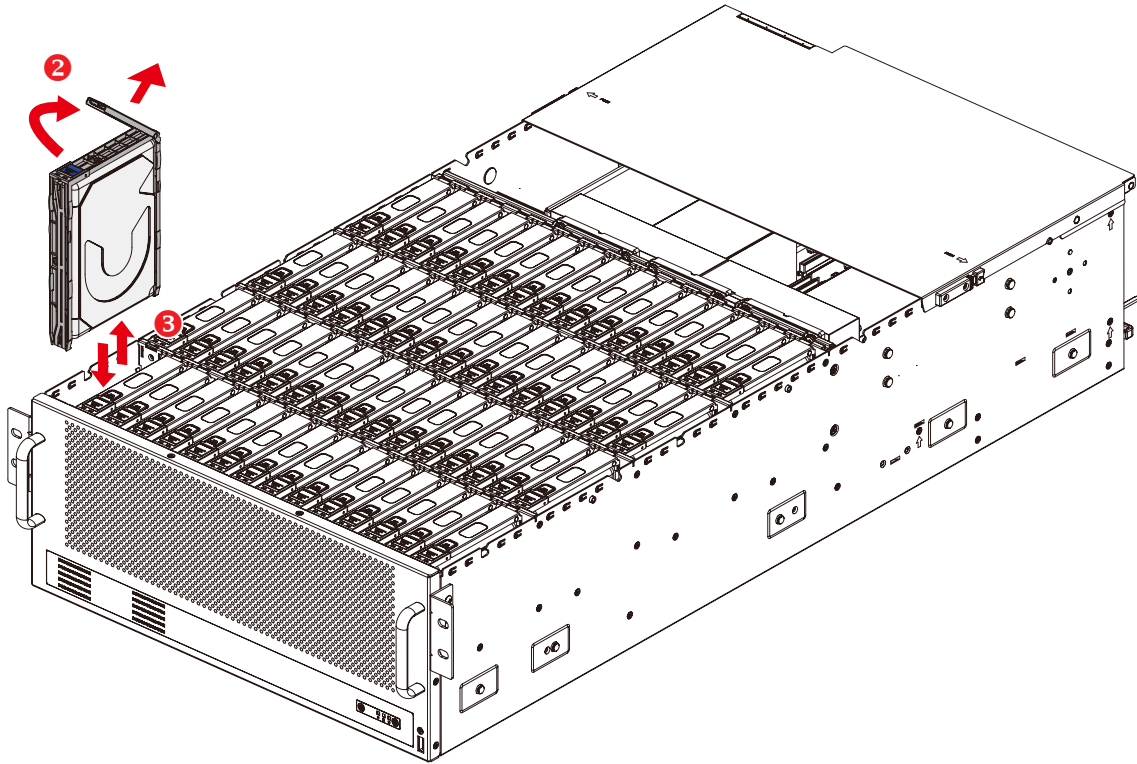

- ④ Match the dimples on the HDD with the tool-less tray.
- ⑤ Align the HDD with the tray by placing it against each other.
- ⑥ Insert the HDD into the tool-less tray in the suggested order above. Make certain to attach the side of the tray with the larger dimples to the HDD first and the side with the smaller dimples last for easier installation.

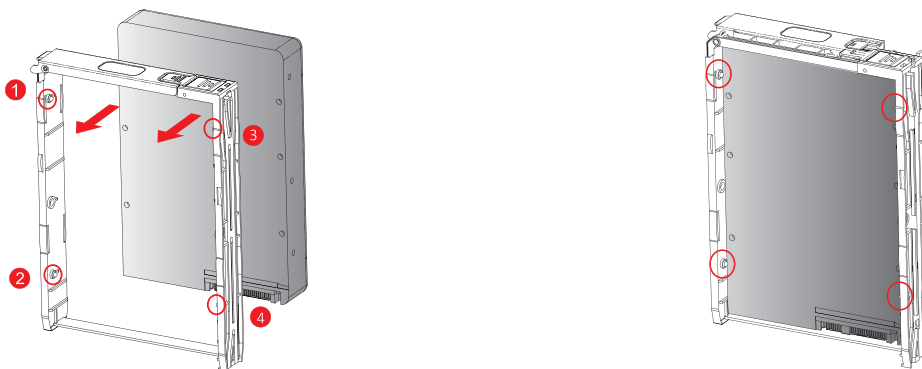


- ⑦ Complete the installation. Pull the sides of the tray to remove the HDD. Make certain to pull the tray with smaller dimples first away from the HDD and the larger dimples last for easier removal.

Optional (2.5-inch Adapter)

Use an adapter to install a 2.5-inch disk drive into a 3.5-inch tray.

- ① Align the 2.5-inch disk drive with the holes on the adapter and fasten the screws to fix the position.
- ② Insert the adapter carrying the disk drive into the tray.
- ③ Fasten the screws to complete the installation.

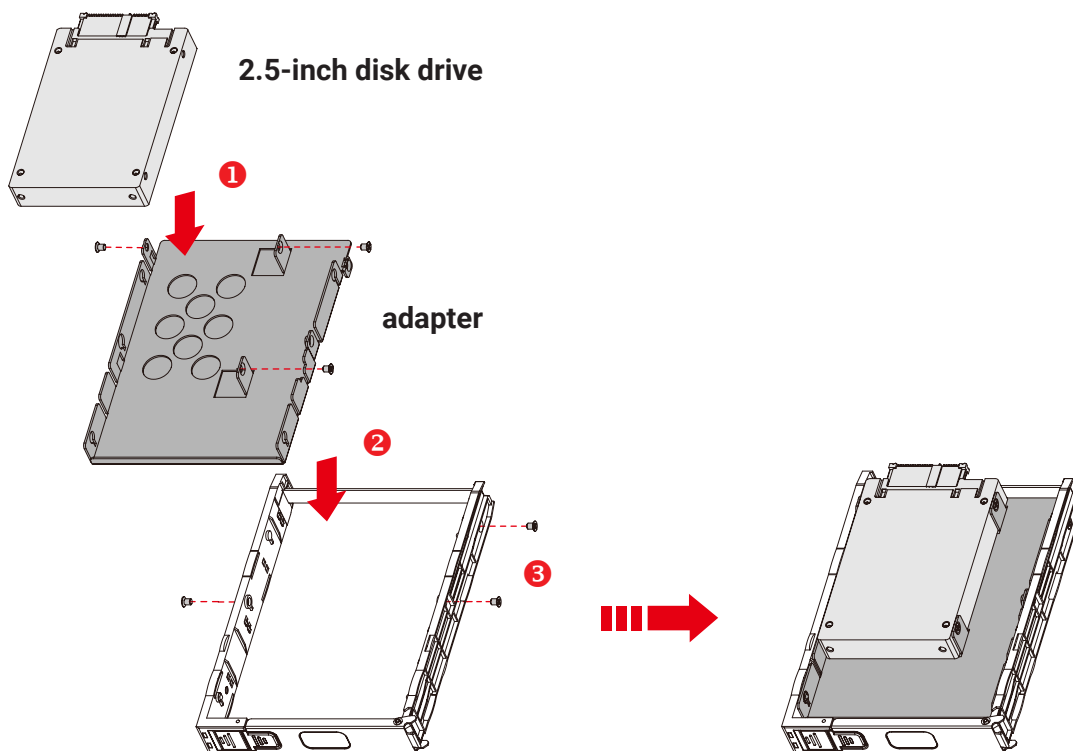

This information is provided for professional technicians only.

2.6.3 LED Indicator

3.5-inch Hard Disk Drive


| Indicator | Color | Behavior | Description |
|---------------|-------|----------|--|
| HDD Activity | Blue | On | HDD is present. |
| | | Blinking | HDD Activity is detected. |
| | --- | Off | HDD is not connected or the system power is off. |
| HDD Fail LEDs | Red | On | HDD Fault |
| | --- | Off | Normal |

2.5-inch NVMe (Rear)


| Indicator | Color | Behavior | Description |
|-----------------|--------|----------|--|
| HDD Activity | Blue | On | HDD is present. |
| | | Blinking | HDD Activity is detected. |
| | --- | Off | HDD is not connected or the system power is off. |
| HDD Locate LEDs | Green | On | HDD is located. |
| | --- | Off | --- |
| HDD Fail LEDs | Yellow | On | HDD Fault |
| | --- | Off | Normal |

2.6.4 Drive Slot Map

Rear Panel with NVMe drive

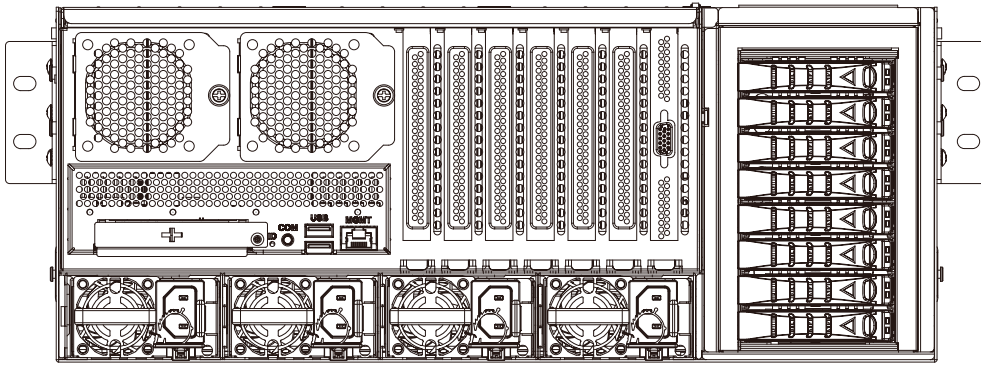

| Drive Slot Number |
|-------------------|
| NVMe 8 |
| NVMe 7 |
| NVMe 6 |
| NVMe 5 |
| NVMe 4 |
| NVMe 3 |
| NVMe 2 |
| NVMe 1 |

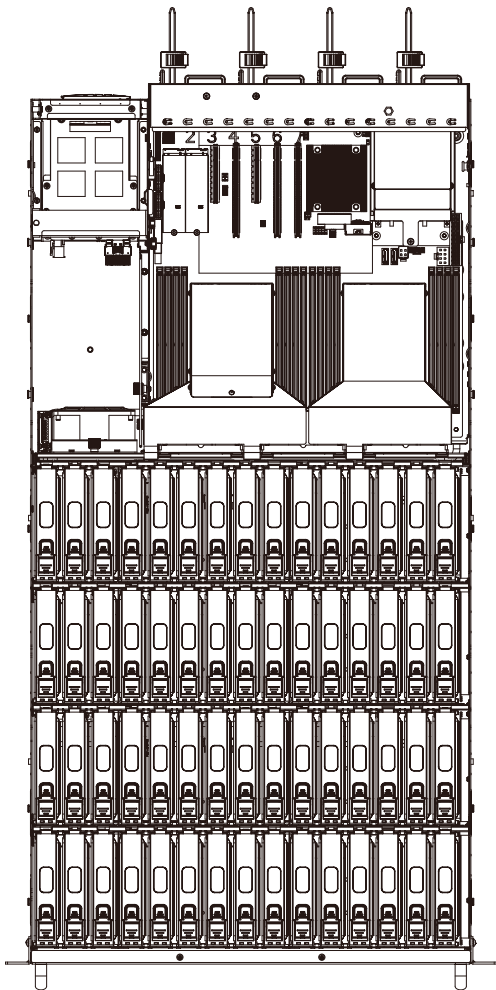


Top view

| Drive Slot Number | | | | | | | | | | | | | | |
|-------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 |
| 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |

| HBA card | | | | | | | | | | | | | | |
|----------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 |
| 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |

2.7 HBA Card


- ① Remove the rear top cover from the chassis. Please refer to [Section 2.3 Top Cover](#).
- ② Align the HBA card with an available X8 PCIe slot.
- ③ Press down the HBA card and fasten the screw to insert the HBA card correctly.

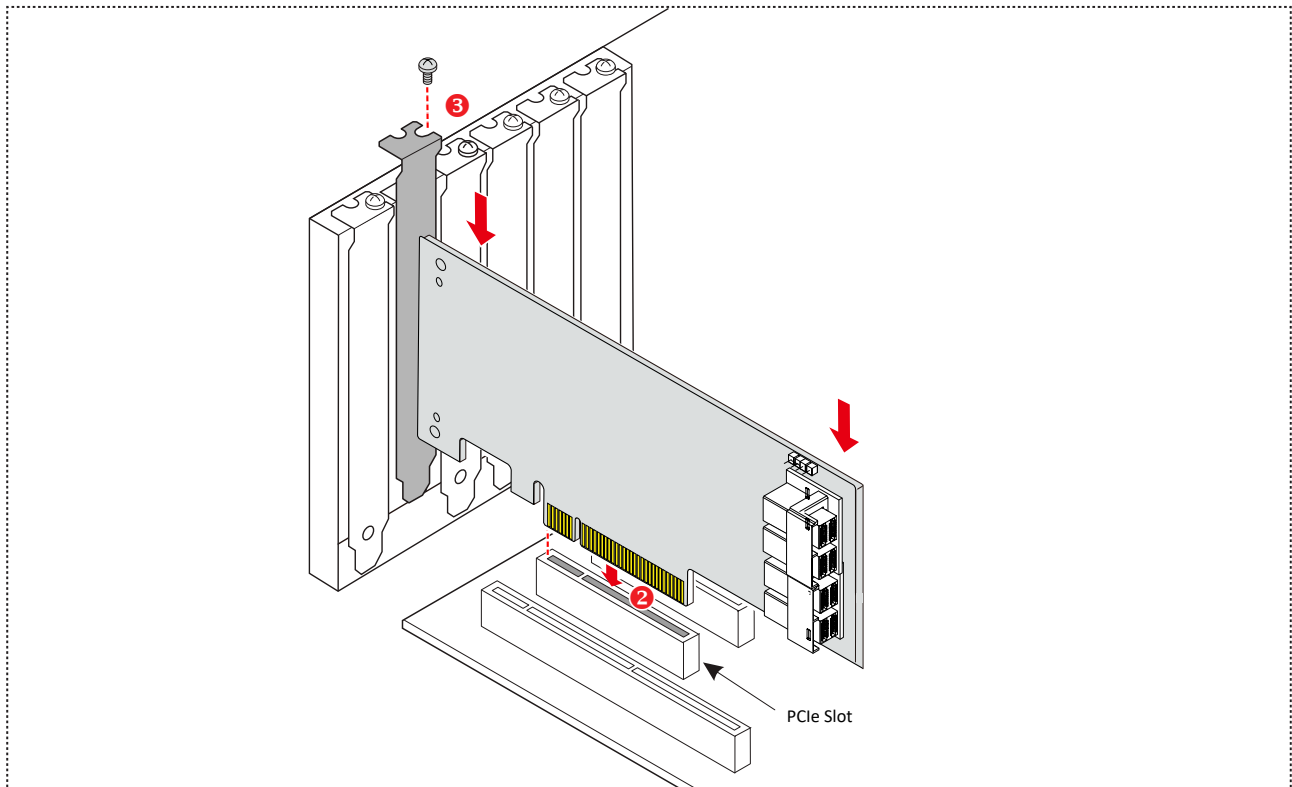

2.7.1 Cable routing

HBA card to EOB backplane.

| HBA | BP |
|-----|------------------|
| C0 | (Front) slimline |
| C1 | (Rear) slimline |

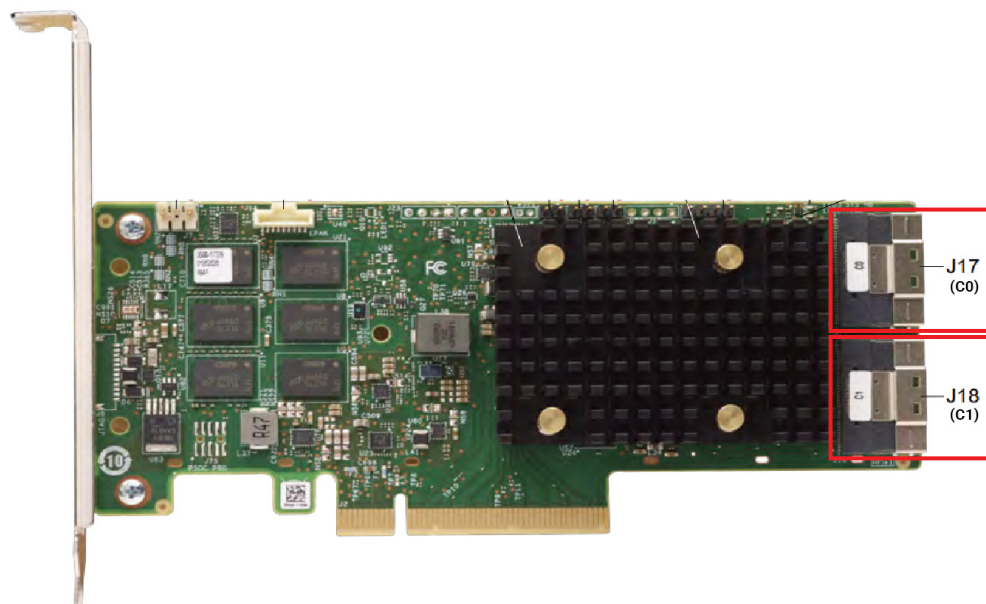

2.8 OCP Card




CAUTION

Make sure that all server power cords are disconnected from their power sources before performing this procedure.


Attention:


- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

- ① Turn off the power of server. Remove the metal cover of OCP 3.0 slot.

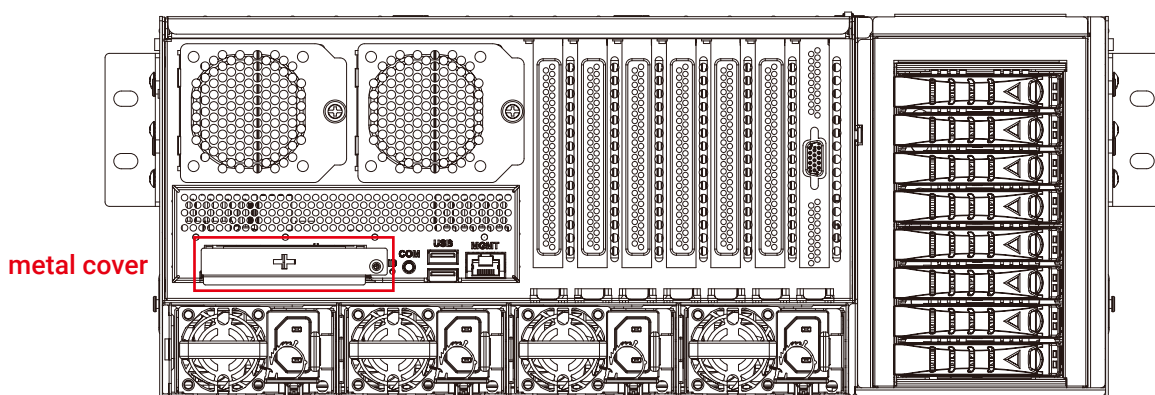


- ② Loosen the thumb screw and pull the OCP card out of the chassis.
- ③ Align the holes on the mezzanine card (m3808) with the guide pins and secure the card onto the OCP card by using screws.
- ④ Push the OCP card with mezzanine card into the chassis.

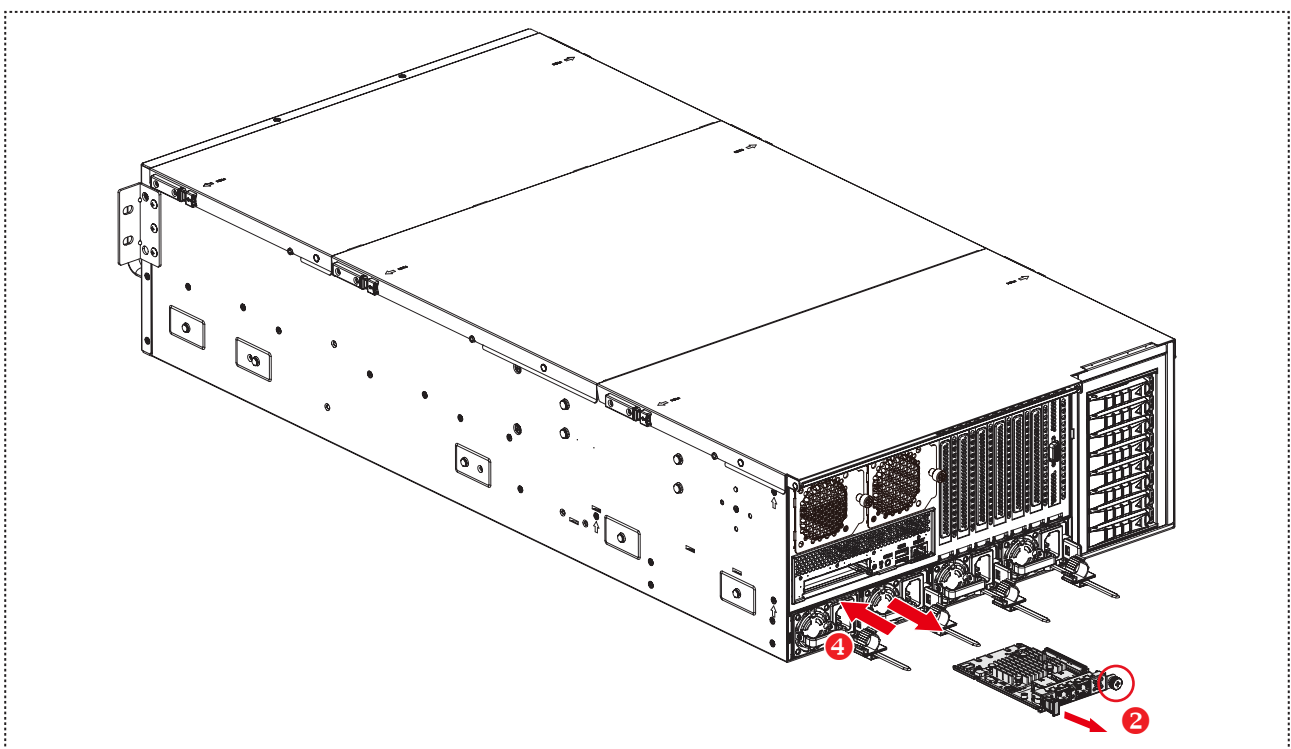


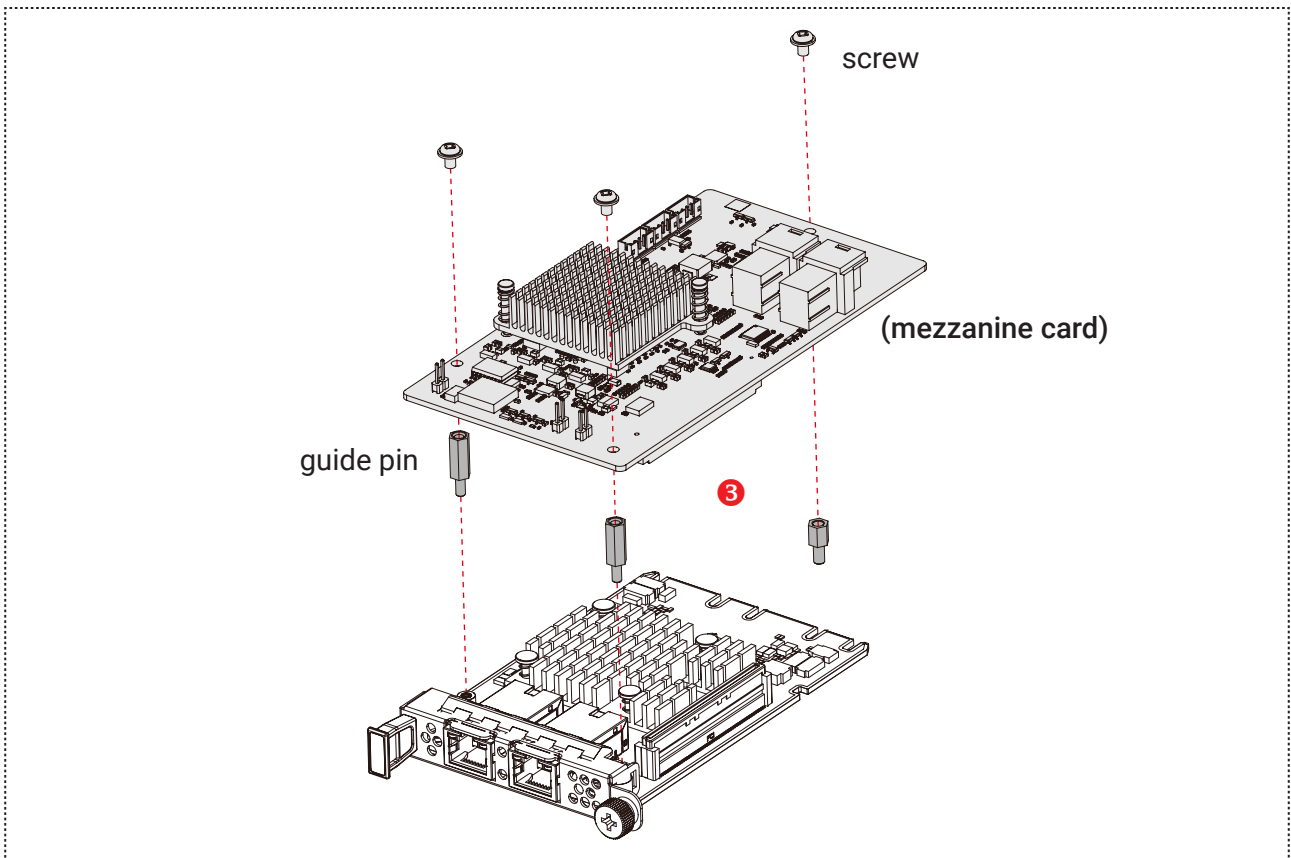

- ⑤ Put the sponge (marked in blue) on the side of the Mezzanine card near the chassis to prevent the OCP card from overheating.

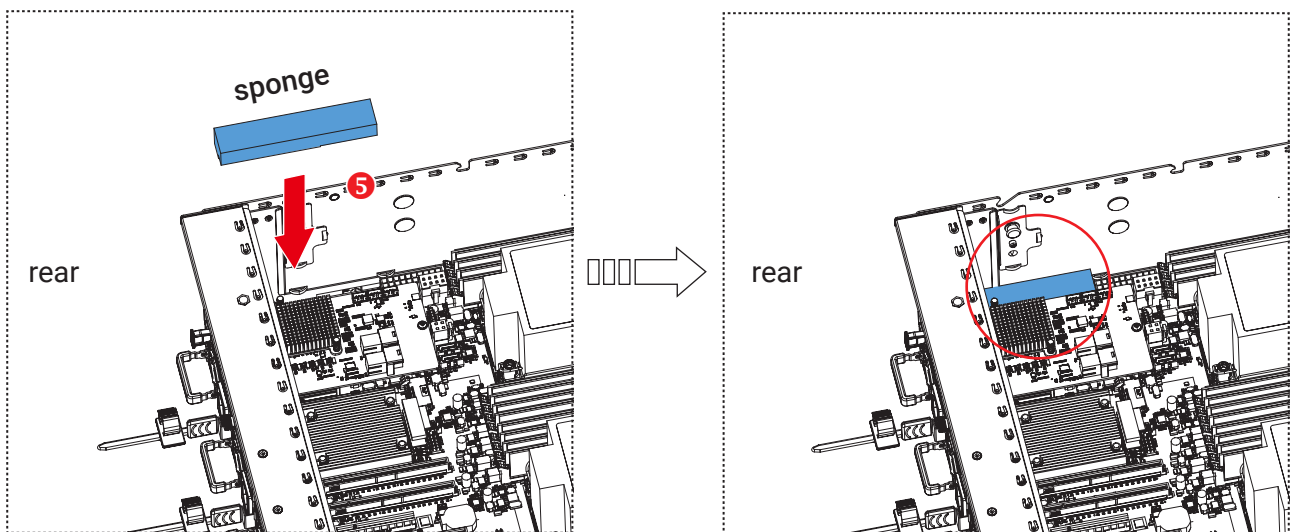

- ⑥ Connect the cables to the OCP 3.0 Ethernet adapter.
- ⑦ Change PCIe setting in BIOS setup.
 Depend on the OCP card then setting its root port's bifurcation.
 Set Socket configuration → IIO configuration → Socket0 configuration → IOU0 (IIO PCIe port 1) to x8x8 or x4x4x4x4 or keeping the default x16

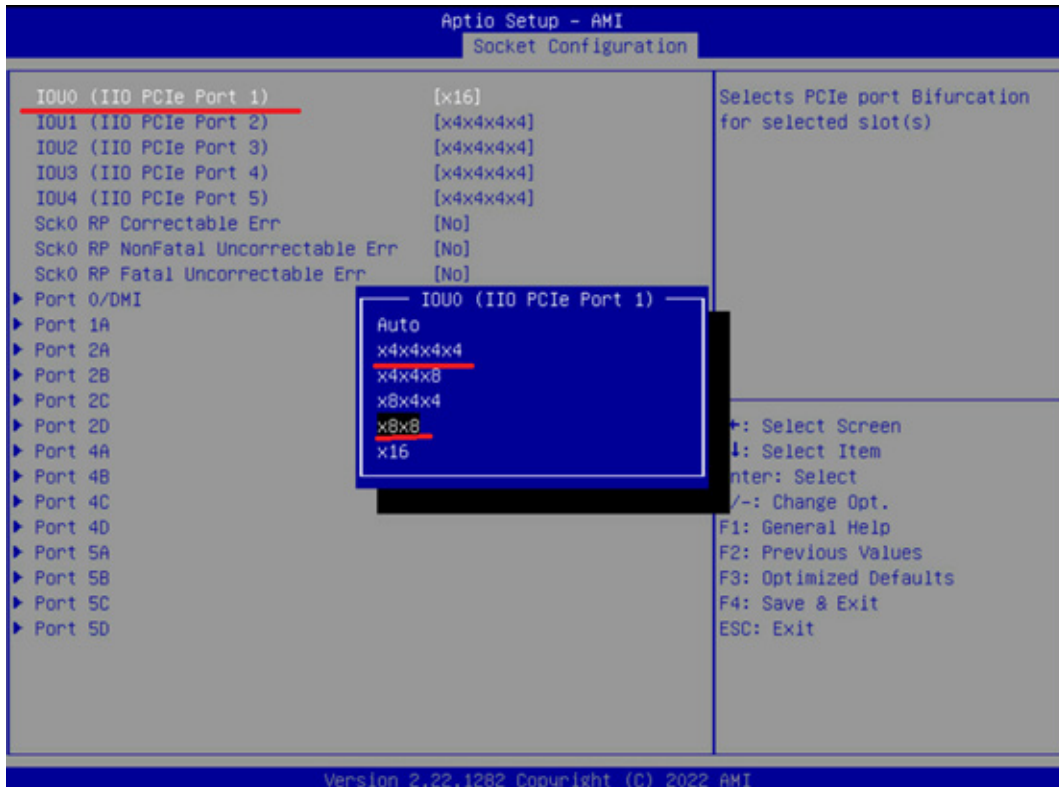


| 10G | | PN |
|------------|-----------------|-----------------|
| OCP module | M04-1399-016X02 | M06-1399-009X01 |
| HBA card | DB-A00000273 | |

| 25G | | PN |
|------------|-----------------|-----------------|
| OCP module | M04-1399-010X02 | M06-1399-010X01 |
| HBA card | DB-A00000273 | |

2.8.1 Cable routing

OCP card to EOB backplane.


| OCP | BP |
|-----|------------------|
| C0 | (Front) slimline |
| C1 | (Rear) slimline |

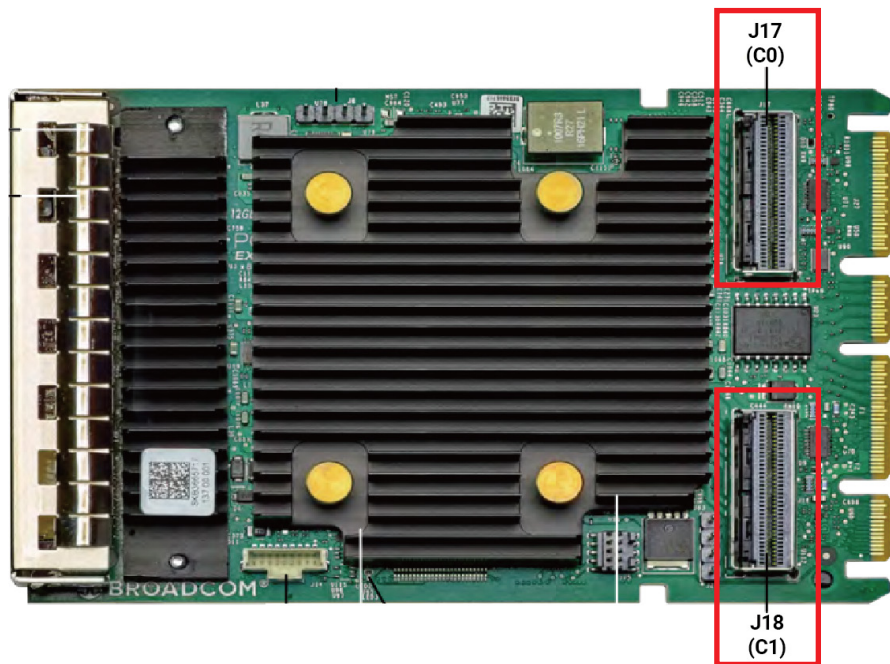

This information is provided for professional technicians only.


2.9 M.2 SSD (NGFF) Card

- ① Remove the rear top cover from the chassis. Please refer to [Section 2.3 Top Cover](#).
- ② Align and insert the M.2 card into the socket. Ensure the size of your M.2 card match the corresponding standoff on the serverboard.
- ③ Fasten the screw to complete setup.

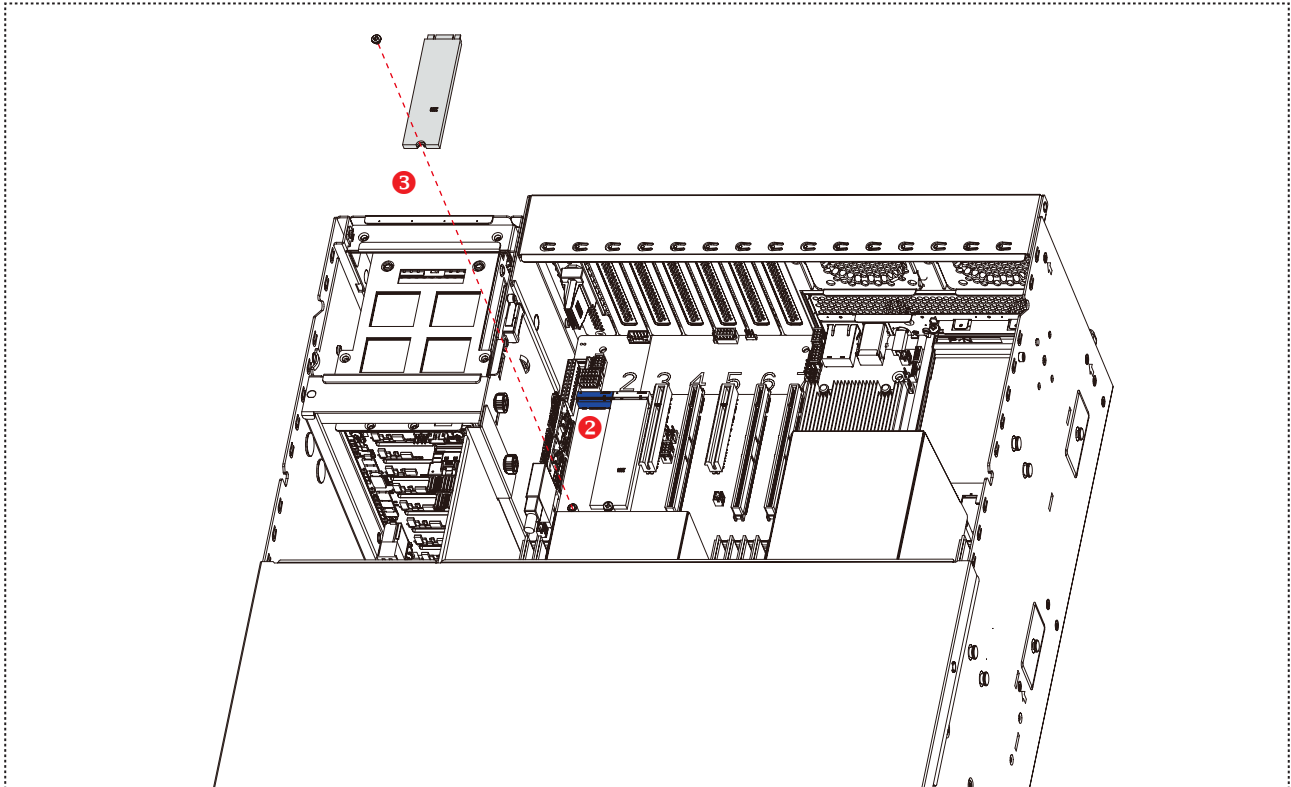


2.10 Motherboard (easy maintenance)

- ① Remove the rear top cover from the chassis. Please refer to [Section 2.3 Top Cover](#).
- ② Dislodge the screws and loosen the captive screw to release the motherboard tray.
- ③ Pull the motherboard tray outward.

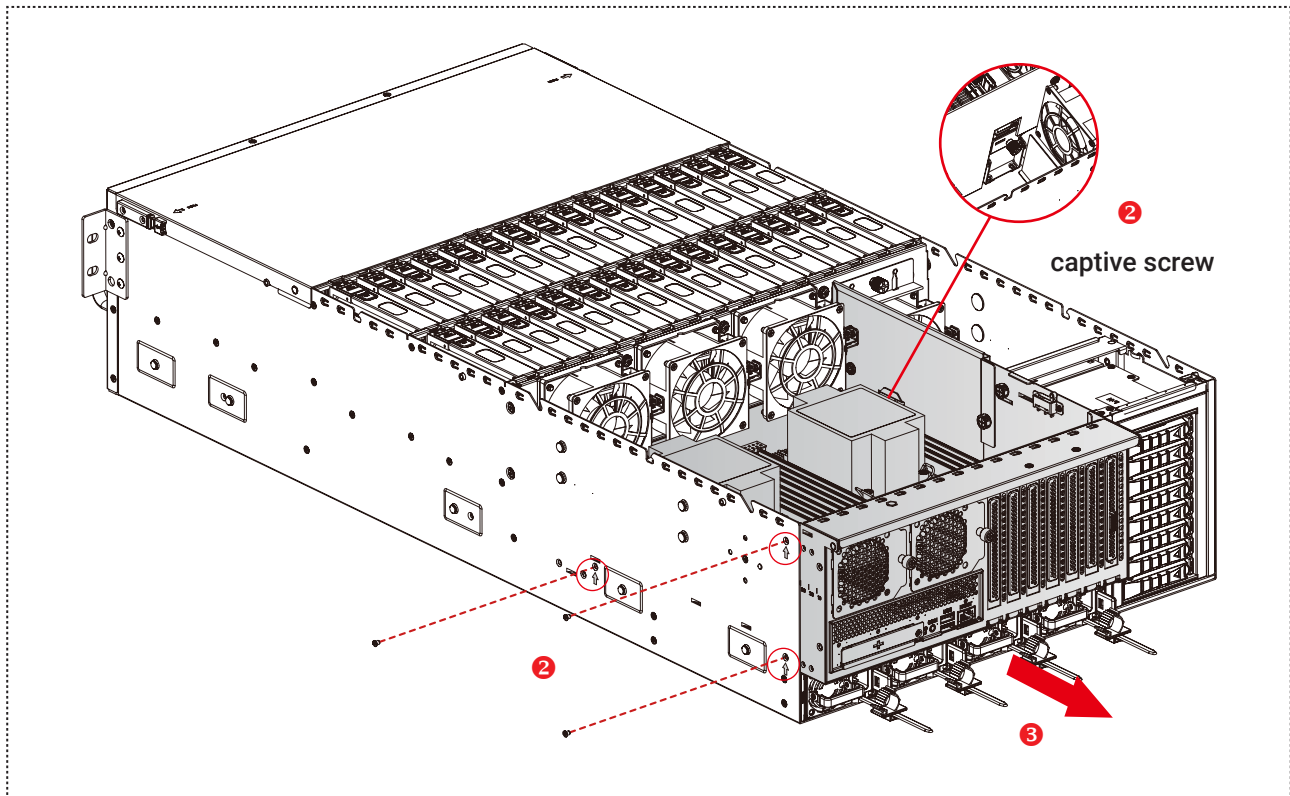

NOTE

You can change the direction of the positioning bracket to stable the motherboard tray in three different length (10/20/30mm). The pre-installed position is at 0mm.

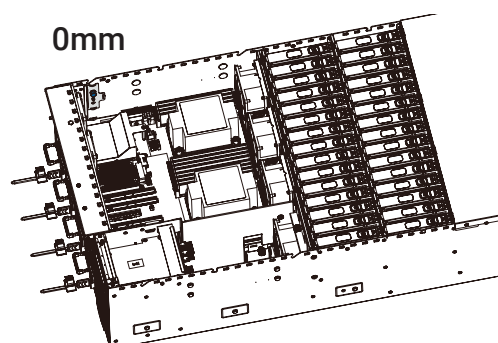

2.11 Slide Rail



NOTE

This section provides a basic instruction for mounting the slide rail onto the system. Tool-less rails vary per order. The rail in this manual may not exactly match the rail for your system. Please refer to the specifications or quick installation guide that came with your purchased product.




CAUTION


The rack may tilt and fall due to incorrect installation or placed on uneven grounds. The rack must be placed in a flat surface before you begin to slide the system barebone in for servicing.

| Slide rail | Length | Elongation length | Available cabinet rack (without CMA) |
|------------|-----------|-------------------|--------------------------------------|
| option 1 | 932.8 mm | 611.8 mm | 1000mm |
| option 2 | 1006.4 mm | 611.8 mm | 1100mm |


1. Pull the inner rail out of the slide rail until it clicks.
2. Detach the inner rail completely from the slide rail by pulling the white tab forward.

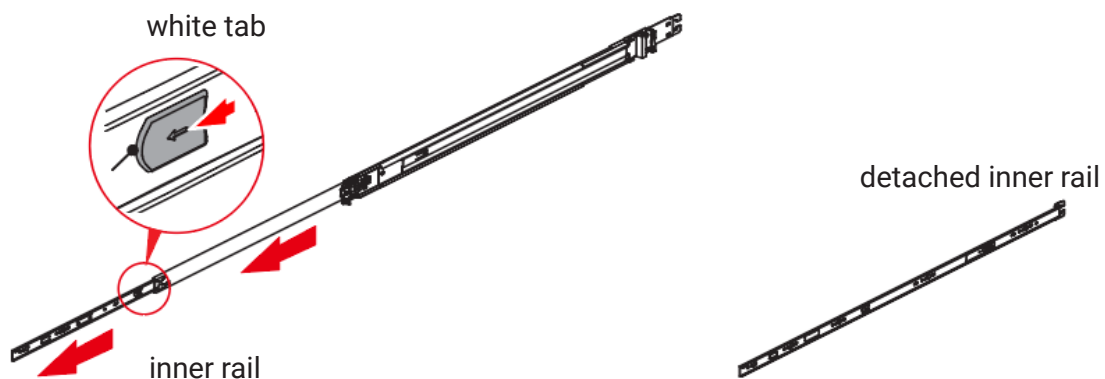


3. After the inner rail is dislodged, adjust the middle rail back to its original position by pushing the tab on the middle rail.

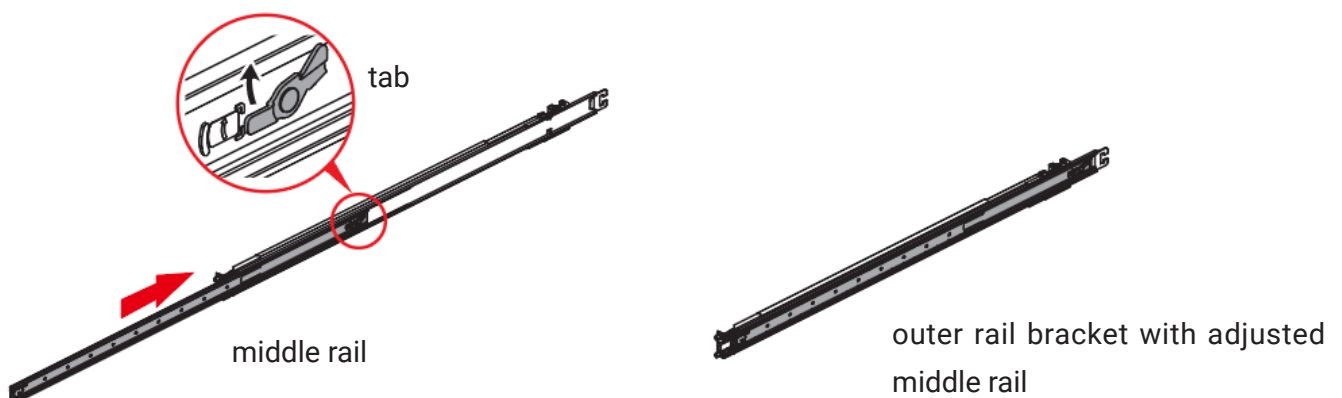

4. Install the inner rail onto the system barebone. Lock the keyholes and secure the screws on sides of the system.

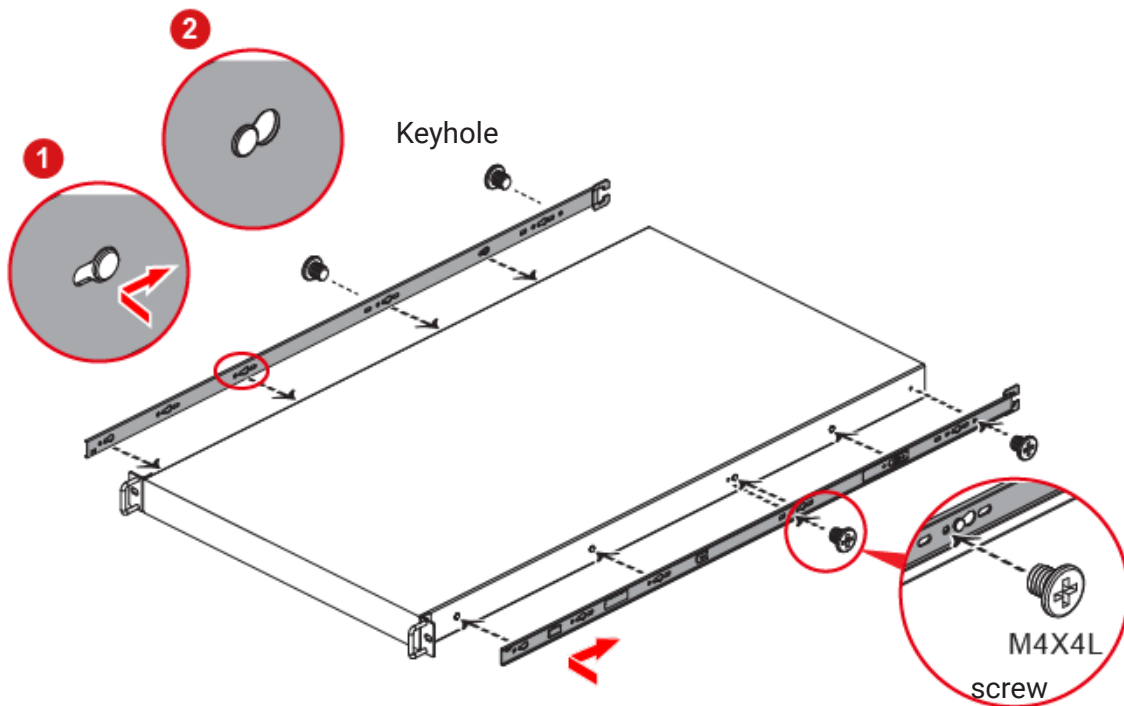


5. Continue installing the outer rail bracket to the mounting frame. Attach the outer rail assembling to the frame and press the bracket to form a rack on both ends. Repeat to fully mount the bracket assembly on the other side.

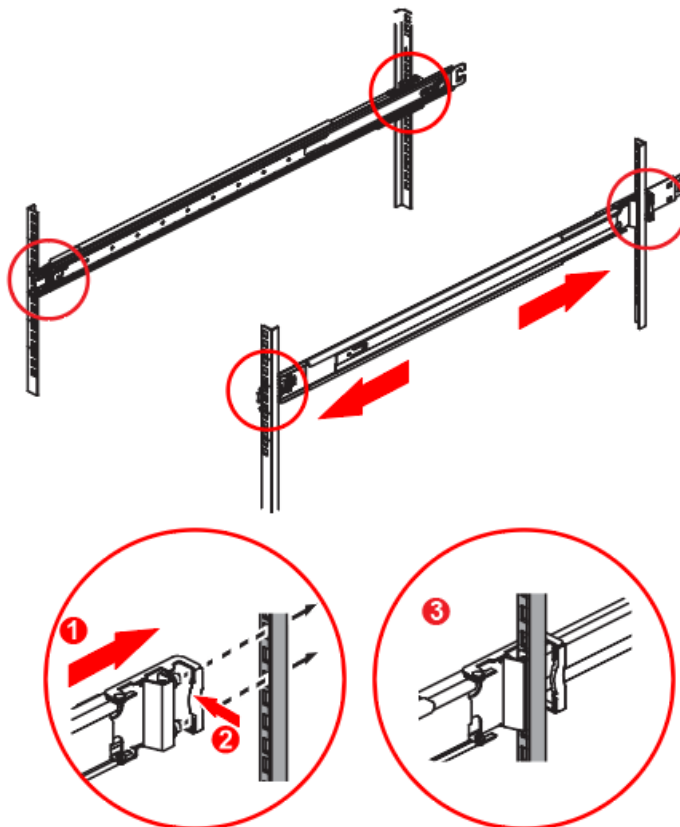

Attach and press bracket.


bracket secured.

6. Pull out the middle channel until the ball bearing retainer is locked forward.

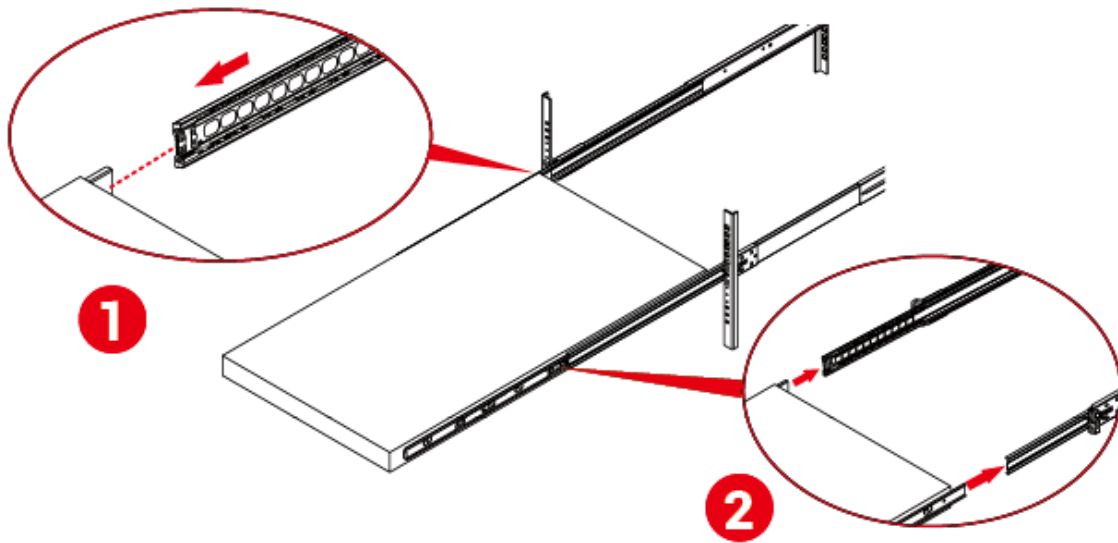**NOTE**

Verify ball bearing retainer is locked forward.

7. Slide the release tab and push barebone into rack. Make sure the barebone is completely installed onto the rack.

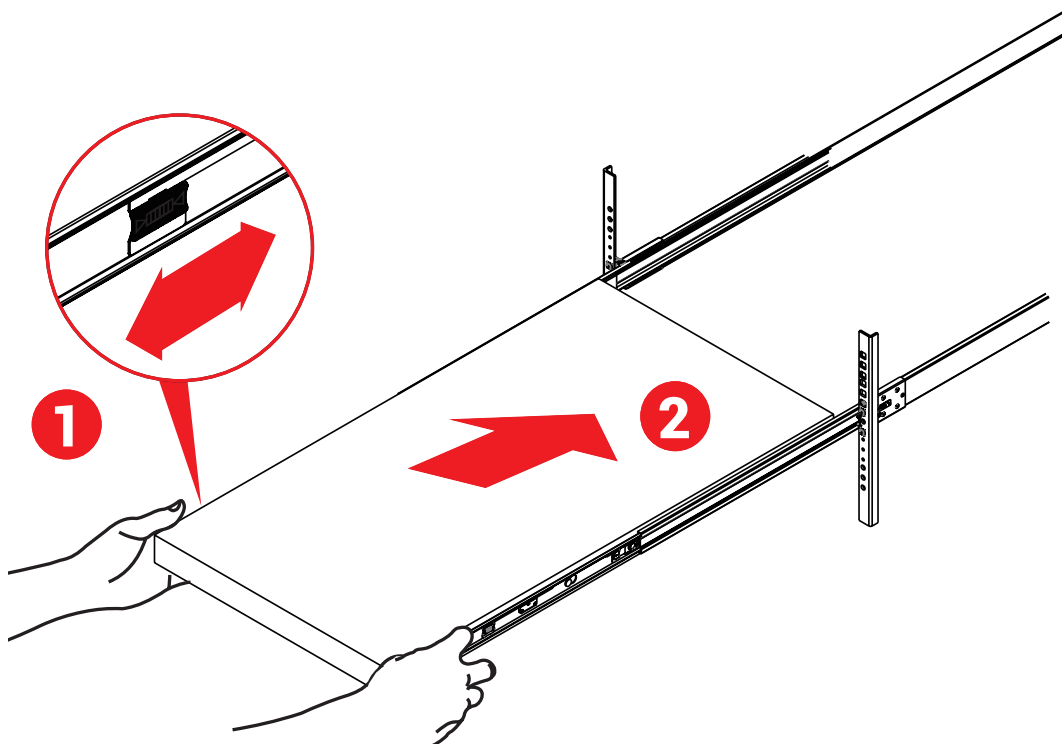


This information is provided for professional technicians only.


Chapter 3. Hardware Settings

This section provides illustrations that display the internal jumpers, connectors, and system LED indicators on the Tucana motherboard. The motherboard layout and essential connectors are listed below for your reference.

3.1 Block Diagram

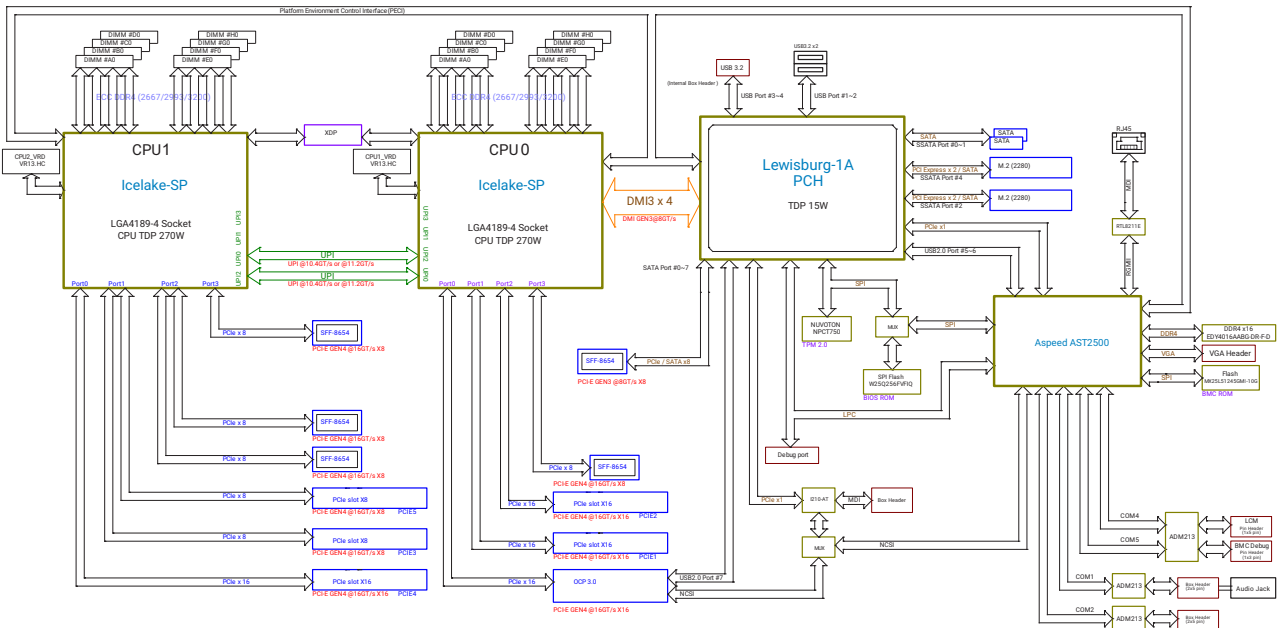

3.2 Placement

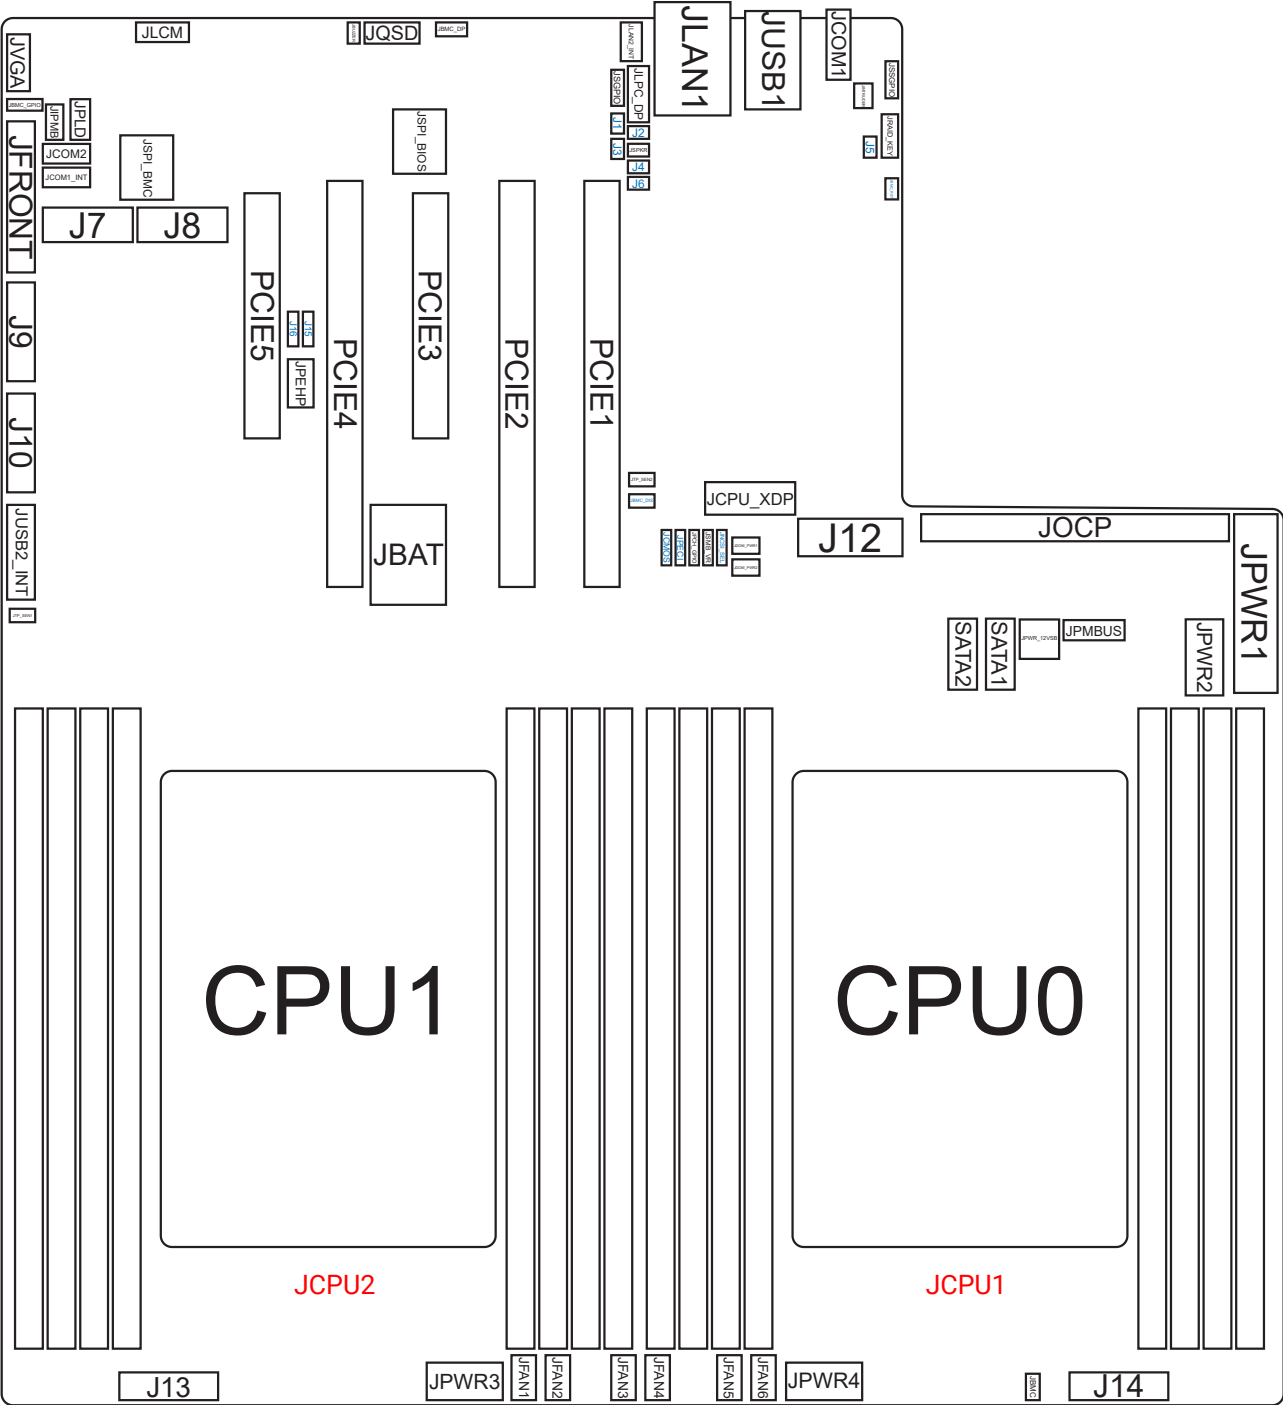


3.3 Content List

| Port/Slot/Socket | | Port/Slot/Socket | |
|--|-------------------------|----------------------------------|--|
| RJ45 Port | JLAN1 | Battery | JBAT |
| USB 3.0 Type A Port | JUSB1 | SPI BMC Socket | JSPI_BMC |
| COM Port | JCOM1 | COM Port Header | JCOM1_INT JCOM2 |
| PCIE 4.0 Slot | PCIE1 PCIE2 PCIE4 | VGA Connector | JVGA |
| PCIE 4.0 Slot | PCIE3 PCIE5 | OCP 3.0 Connector | JOCP |
| SPI BIOS Socket | JSPI_BIOS | | |
| Connector | Placement | Connector | Placement |
| LCM Header | JLCM | Power Supply Connector | JPWR1 |
| BMC Buzzer | JBUZZER | SATA Connector | SATA1 SATA2 |
| PLD QSD Header | JQSD | Power Supply Connector | JPWR_12VSB |
| BMC Debug Port Header | JBMC_DP | PMBUS Header | JPMBUS |
| I210 MDI Header | JLAN2_INT | Power Supply Connector | JPWR2 JPWR3 JPWR4 |
| PCH SGPIO Header | JSSGPIO JSGPIO | BMC I2C10 Header | JBMC |
| Chassis Intrusion | JINTRUDER | Fan Connector | JFAN1 JFAN2 JFAN3 JFAN4 JFAN5 JFAN6 |
| LPC Debug Port Header | JLPC_DP | Front I/O USB Header | JUSB2_INT |
| Speaker | JSPKR | CPU PCIe Hot Plug Header | JPEHP |
| VROC Key Header | JRAID_KEY | SFF-8654 Connector (PCIe 4.0) | J9 J10 J13 J14 |
| External Thermal Sensor Header | JTP_SEN1 JTP_SEN2 | Front Panel Header | JFRONT |
| CPU XDP Header | JCPU_XDP | M.2 (2280) Connector | J7 J8 |
| PCH GPIO Header | JPCH_GPIO | IPMB Header | JIPMB |
| VRM SMB Header | JSMB_VR | PLD Download Header | JPLD |
| SATA DOM Power Header | JDOM_PWR1 JDOM_PWR2 | BMC GPIO Header | JBMC_GPIO |
| SFF-8654 Connector (PCIe 3.0/SATA3) | J12 | | |

| Jumper | Placement | Jumper | Placement |
|---|------------------|---------------------------|------------------|
| J12 SSD1 PCIE/SATA Select Jumper | J15 | BIOS Recovery Mode Jumper | J6 |
| J12 SSD2 PCIE/SATA Select Jumper | J16 | BMC Reset Jumper | JBMC_RST |
| No Reboot (Watch Dog) Jumper | J1 | BMC ARM Disable Jumper | JBMC_DIS |
| BMC Debug Port Select Jumper | J2 | CMOS Jumper | JCMOS |
| ME Force Recovery Mode Jumper | J3 | PECI Master Select Jumper | JPECI |
| BMC SoC Flash Configuration Jumper | J4 | BMC NCSI Select Jumper | JNCSI_SEL |
| Flash Descriptor Security Override Jumper | J5 | | |

3.4 External Port

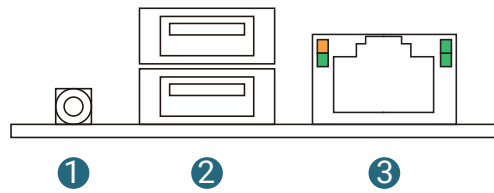

| Item | |
|------|-------------------------|
| 1 | COM by Phone Jack |
| 2 | 2 * USB 3.2 Gen1x1 |
| 3 | RJ45 for BMC management |

LAN LED Indicator





| Item | Color | Behavior |
|-------------------|------------------|-----------------------------------|
| Activity/Link LED | Green (blinking) | Activity detected. |
| | Off | Not active, LAN cable no connect. |
| | On | Link. |
| Speed LED | Off | 10M bps connection or no link. |
| | Green | 100M bps connection. |
| | Orange | 1G bps connection. |

3.5 Connector Definition

LCM Header (JLCM)

This is a 5-pin header that supports the LCM(LCD Module).



| | |
|---|-------------|
| 1 | SW_PWR_BTN# |
| 2 | SW_RST_BTN# |
| 3 | TXD |
| 4 | RXD |
| 5 | GND |

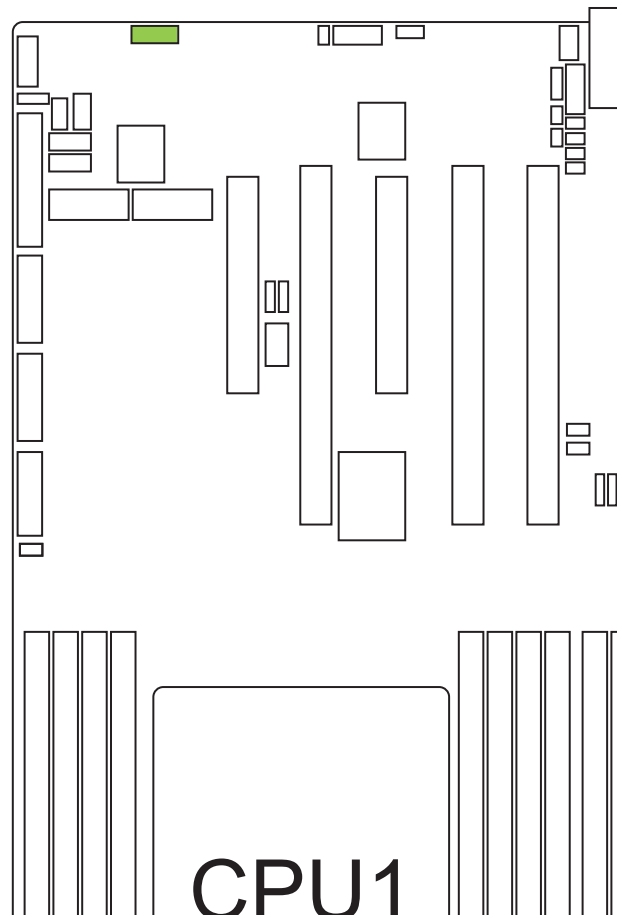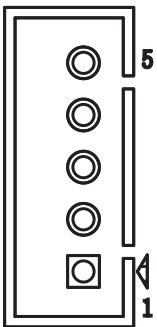

PLD QSD Header (JQSD)

This is a 2x5-pin header that supports PLD(Programmable Logical Device) debug.



| | | | |
|-------------|----|---|---------|
| +3.3V_DUAL | 2 | 1 | QSD_CLK |
| GND | 4 | 3 | QSD_LD# |
| SMB_SCL | 6 | 5 | QSD_DI |
| SMB_SDA | 8 | 7 | QSD_DO |
| MCU_PRSENT# | 10 | 9 | GND |

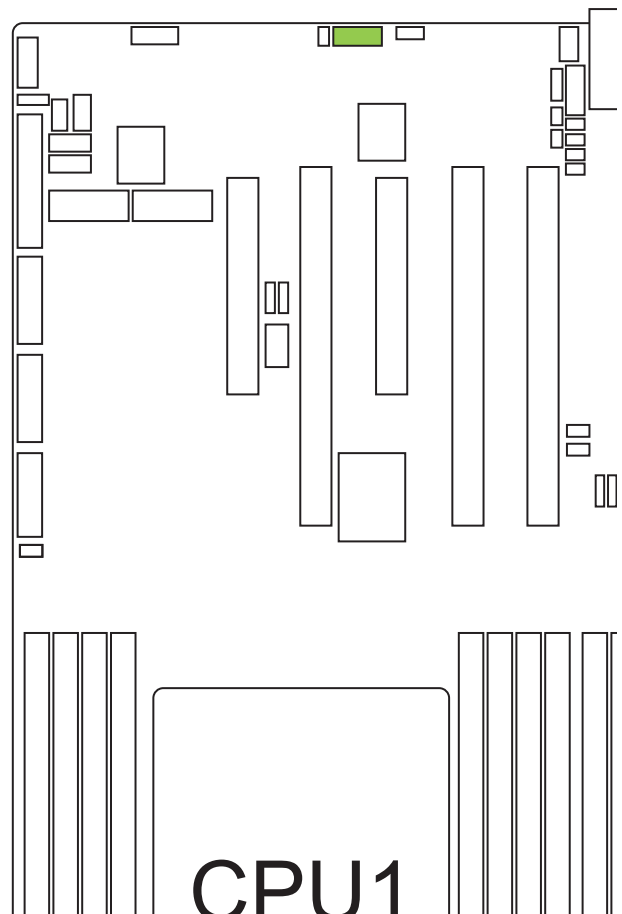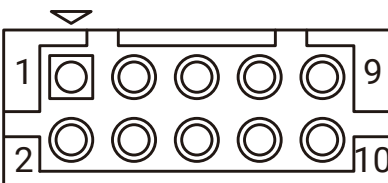

BMC Debug port Header (JBMC_DP)

This is a 3-pin connector that supports BMC debug.



| | |
|---|---------|
| 1 | SPE_TXD |
| 2 | SPE_RXD |
| 3 | GND |

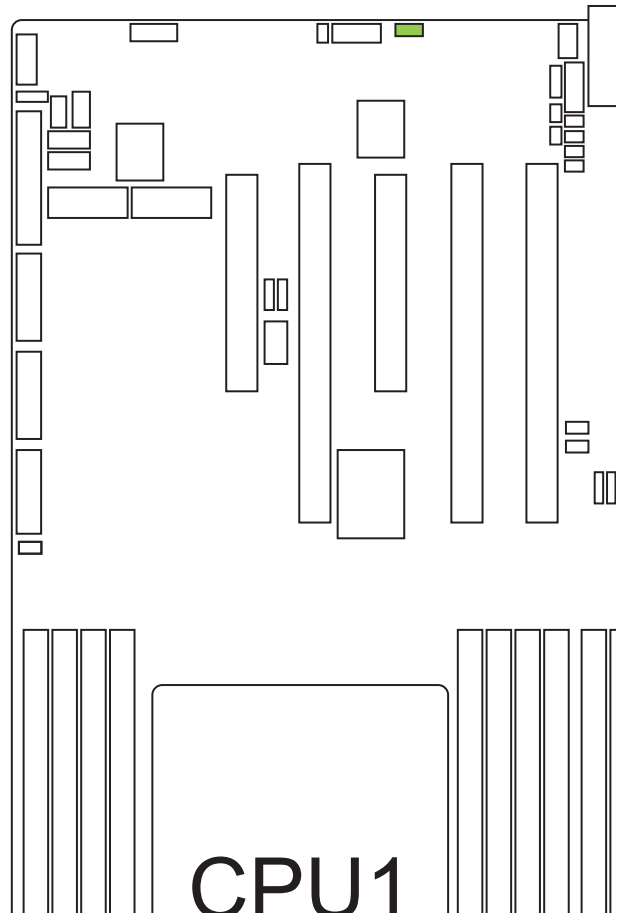

I210 MDI Header (JLAN2_INT)

This 2x4-pin header is used to provide I210 MDI(Media Dependent Interface) functionality.



| | | | |
|---------|---|---|---------|
| MDI_DN2 | 2 | 1 | MDI_DP3 |
| MDI_DP2 | 4 | 3 | MDI_DN3 |
| MDI_DN1 | 6 | 5 | MDI_DP0 |
| MDI_DP1 | 8 | 7 | MDI_DN0 |

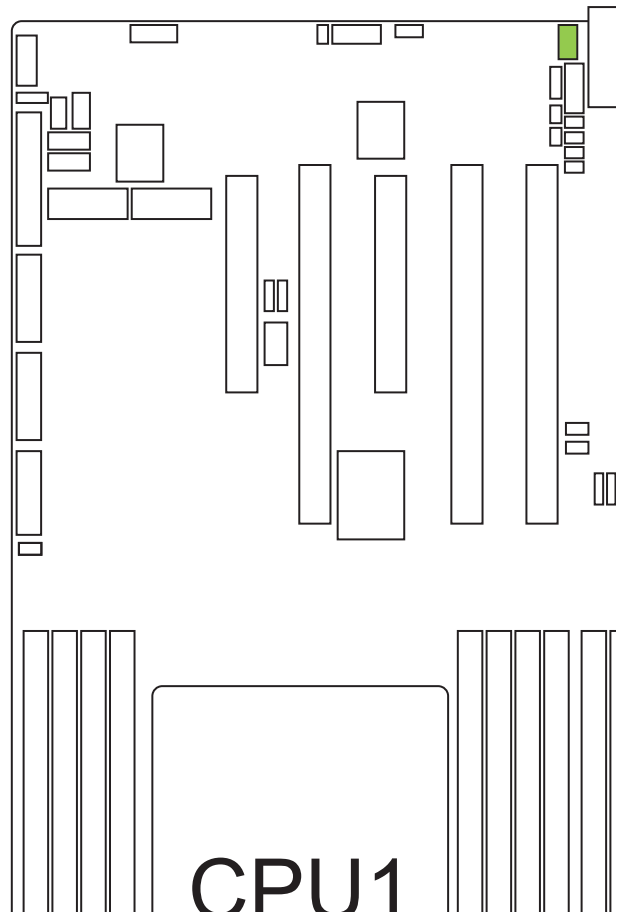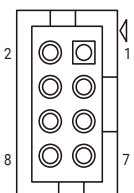

PCH SGPIO Header (JSSGPIO & JSGPIO)

This is a 6-pin connector that is used to control general device data.



| | |
|---|-------|
| 1 | GND |
| 2 | DATA1 |
| 3 | DATA0 |
| 4 | LOAD |
| 5 | CLOCK |
| 6 | +3.3V |

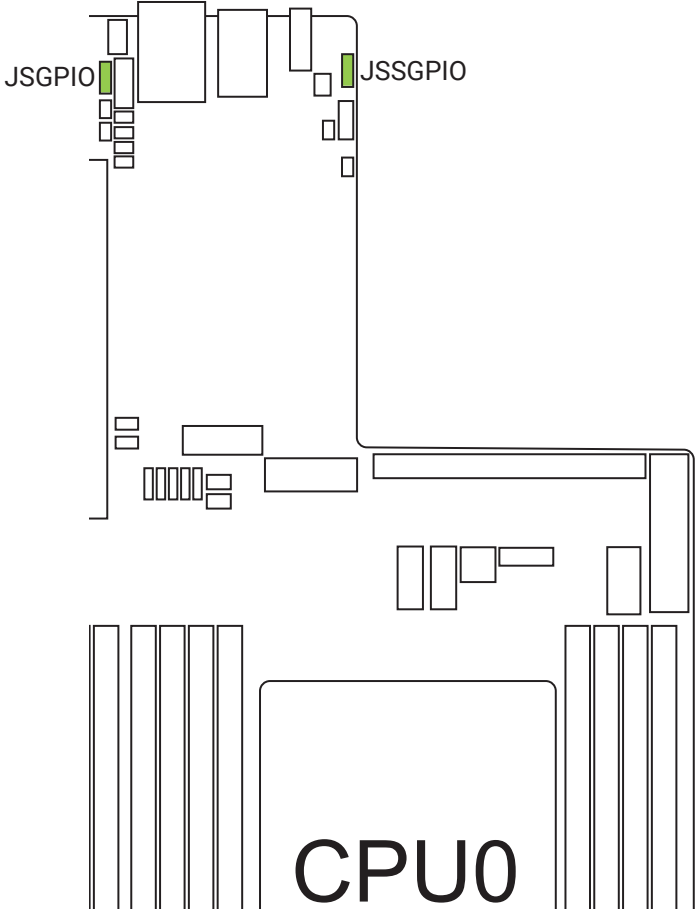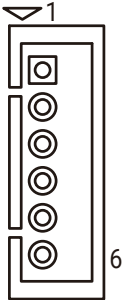

Chassis Intrusion (JINTRUDER)

This is a 2-pin connector that supports chassis security.



| JINTRUDER | Setting | |
|-----------|-----------|---------|
| Short | Case open | |
| Open | Enable | Default |

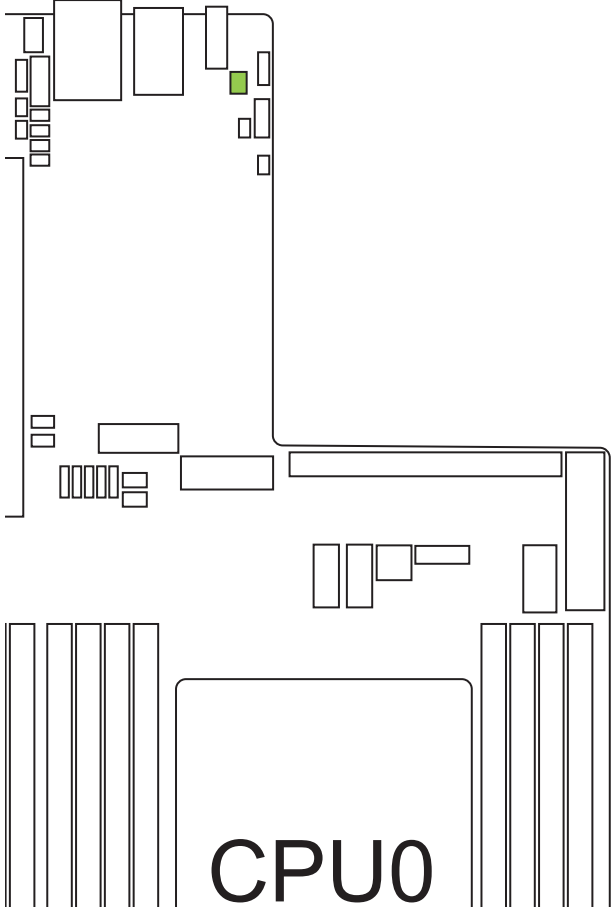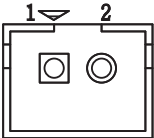

LPC Debug Port Header (JLPC_DP)

This is a 2x6-pin header for low pin count debug.



| | | | |
|----------|----|----|--------|
| CLK_24M | 2 | 1 | GND |
| LFRAME_N | 4 | 3 | PIRQA |
| PLTRST_N | 6 | 5 | SERIRQ |
| LAD3 | 8 | 7 | LAD2 |
| +3.3V | 10 | 9 | LAD1 |
| LAD0 | 12 | 11 | GND |

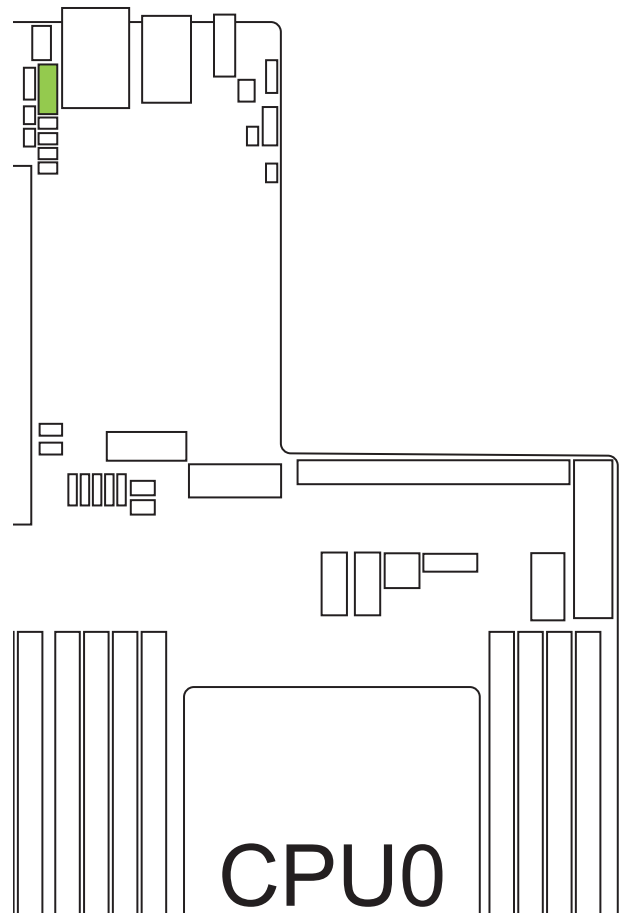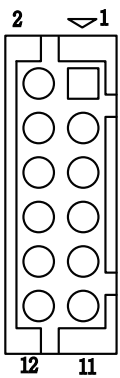

VROC Key Header (JRAID_KEY)

This is a 4-pin key that supports VROC (Intel® Virtual RAID on CPU), specifically used for NVMe SSDs.



| | |
|---|-------------|
| 1 | GND |
| 2 | +3.3V_DUAL |
| 3 | GND |
| 4 | PCH_GPP_C10 |

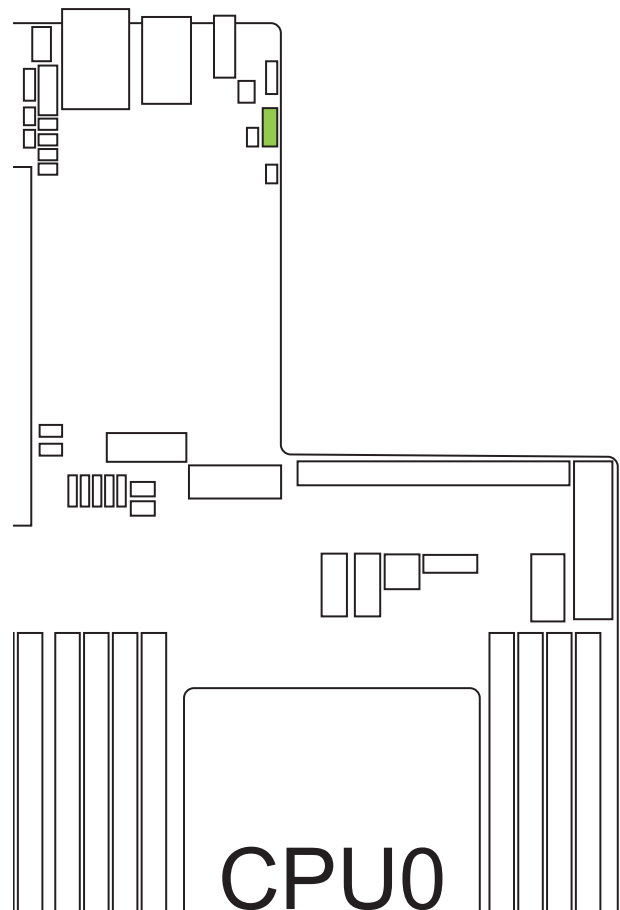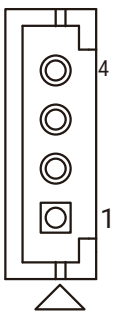

PCH GPIO Header (JPCH_GPIO)

This is a 3-pin header defines an input and output signal to the platform controller hub.



| | |
|---|-------------|
| 1 | PCH_GPP_C16 |
| 2 | PCH_GPP_C17 |
| 3 | GND |

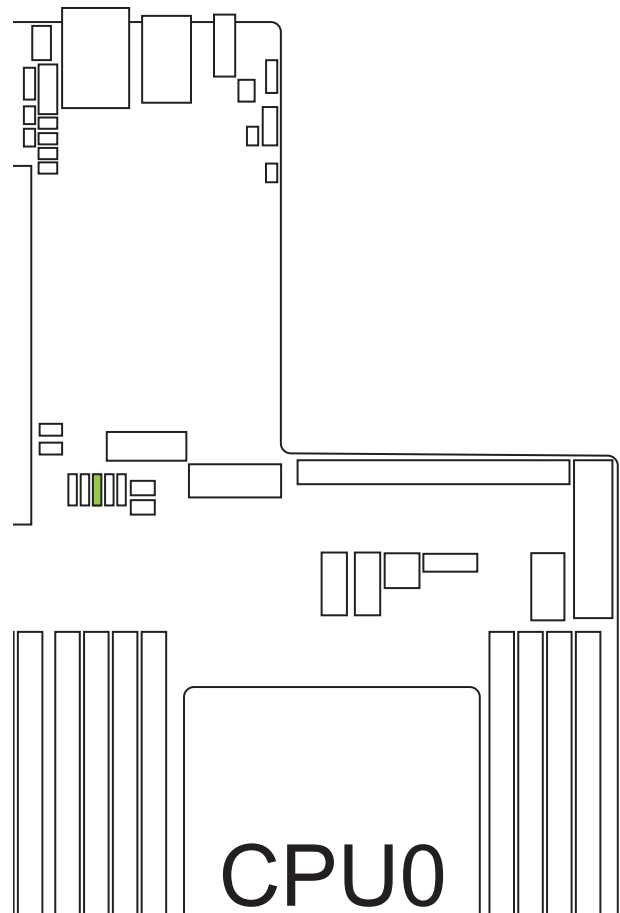

VRM SMB Header (JSMB_VR)

This is a 3-pin SMBus header that supports VRM (Voltage Regulator Module).



| | |
|---|------------|
| 1 | SMB_VR_DAT |
| 2 | GND |
| 3 | SMB_VR_CLK |

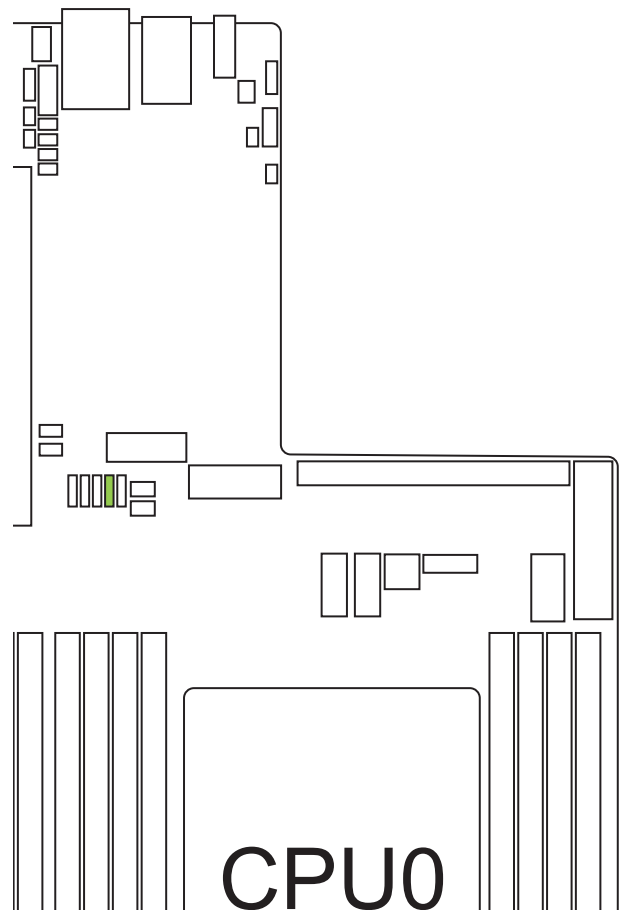

**SATA DOM Power Header
(JDOM_PWR1 & JDOM_PWR2)**

This is a 2-pin header that supplies power to SATA DOM.



| | |
|---|-----|
| 1 | GND |
| 2 | +5V |

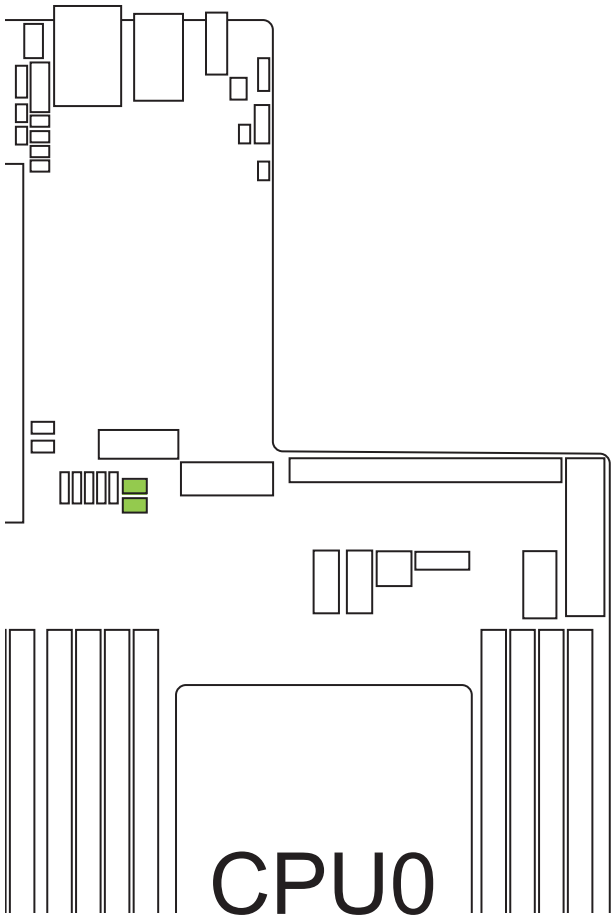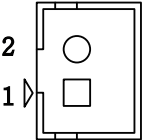

Power Supply Connector (2x10-pin) (JPWR1)

This is a 2x10-pin connector that provides the motherboard with power.



| | | | |
|-------|----|----|-------|
| +3.3V | 11 | 1 | +3.3V |
| N.C. | 12 | 2 | +3.3V |
| GND | 13 | 3 | GND |
| PSON | 14 | 4 | +5V |
| GND | 15 | 5 | GND |
| GND | 16 | 6 | +5V |
| GND | 17 | 7 | GND |
| N.C. | 18 | 8 | PWR0K |
| +5V | 19 | 9 | +5VSB |
| +5V | 20 | 10 | +12V |

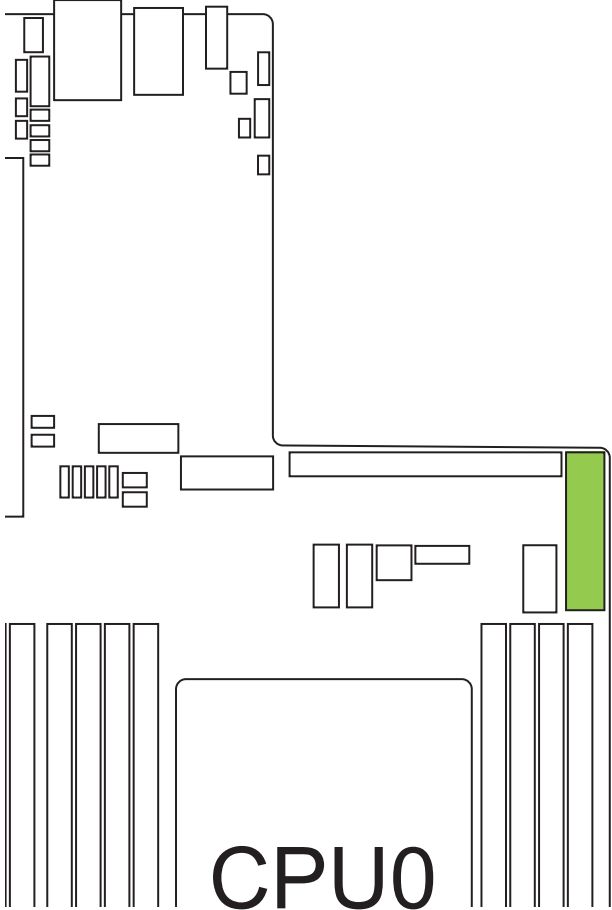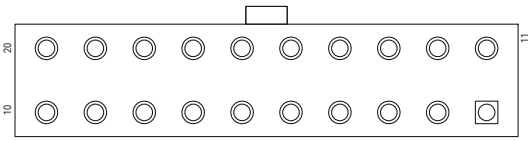

Power Supply Connector (2x2-pin) (JPWR_12VSB) (option)

This is a 2x2-pin connector that provides the motherboard with power.



| | | | |
|--------|---|---|-----|
| +12VSB | 3 | 1 | GND |
| +12VSB | 4 | 2 | GND |

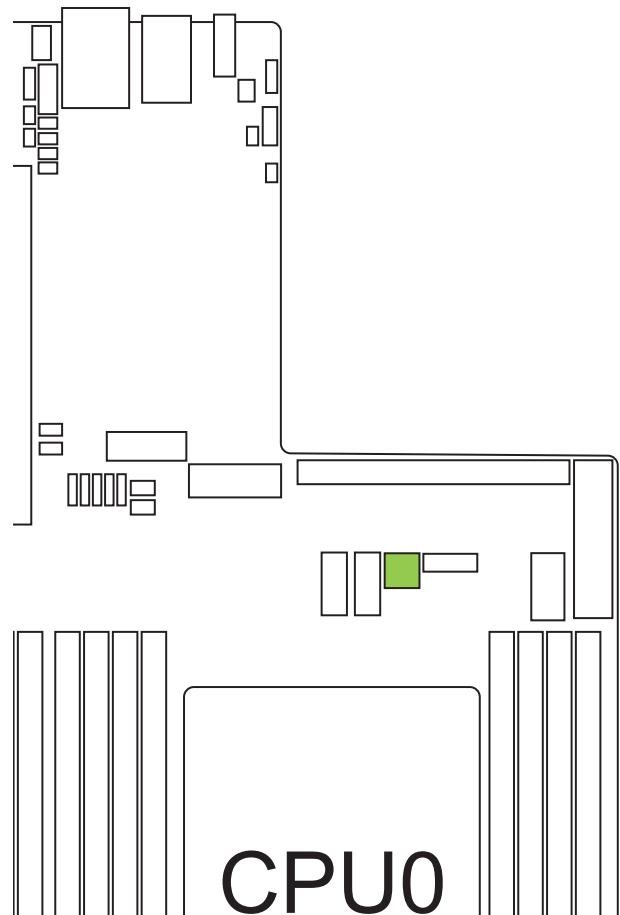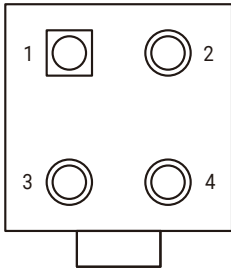

PMBUS Header (JPMBUS)

This is a 5-pin header that is used to control power supplies.



| | |
|---|----------------|
| 1 | SMB_PMBUS_CLK |
| 2 | SMB_PMBUS_DATA |
| 3 | PMBUS_ALERT_N |
| 4 | GND |
| 5 | 5VSB |

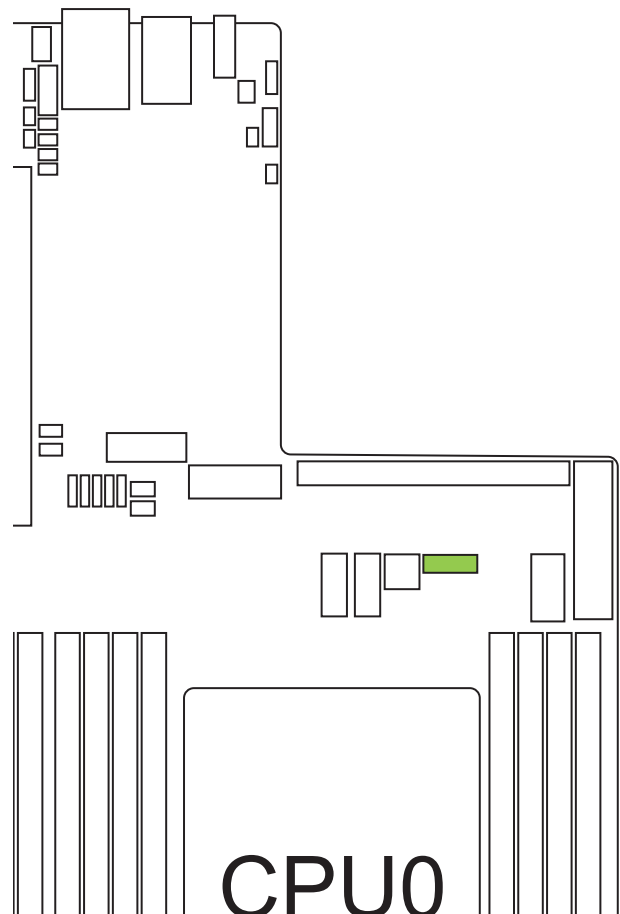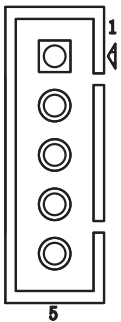

**Power Supply Connector (2x4-pin)
(JPWR2, JPWR3 & JPWR4)**

This is a 2x4-pin connector that provides the motherboard with power.



| | | | |
|------|---|---|-----|
| +12V | 5 | 1 | GND |
| +12V | 6 | 2 | GND |
| +12V | 7 | 3 | GND |
| +12V | 8 | 4 | GND |

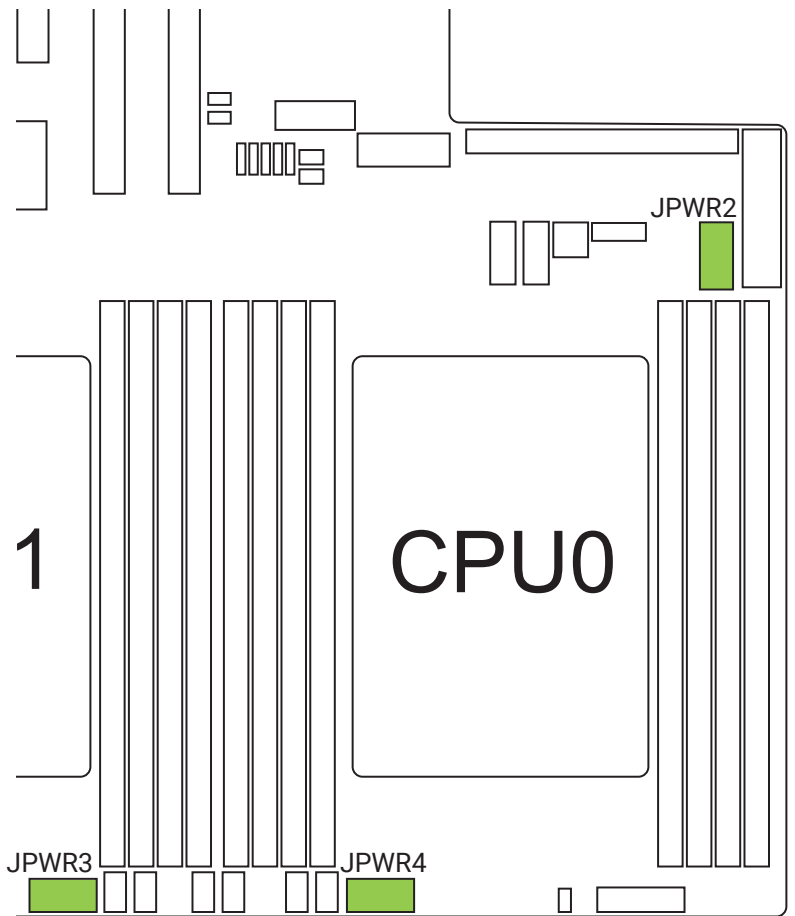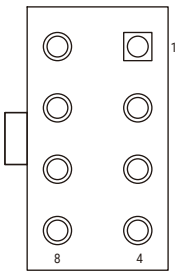

BMC I2C10 Header (JBMC)

This 1 x 3 Pin header is used to provide BMC I2C10 functionality.



| | |
|---|-----------|
| 1 | I2C10_SCL |
| 2 | I2C10_SDA |
| 3 | GND |

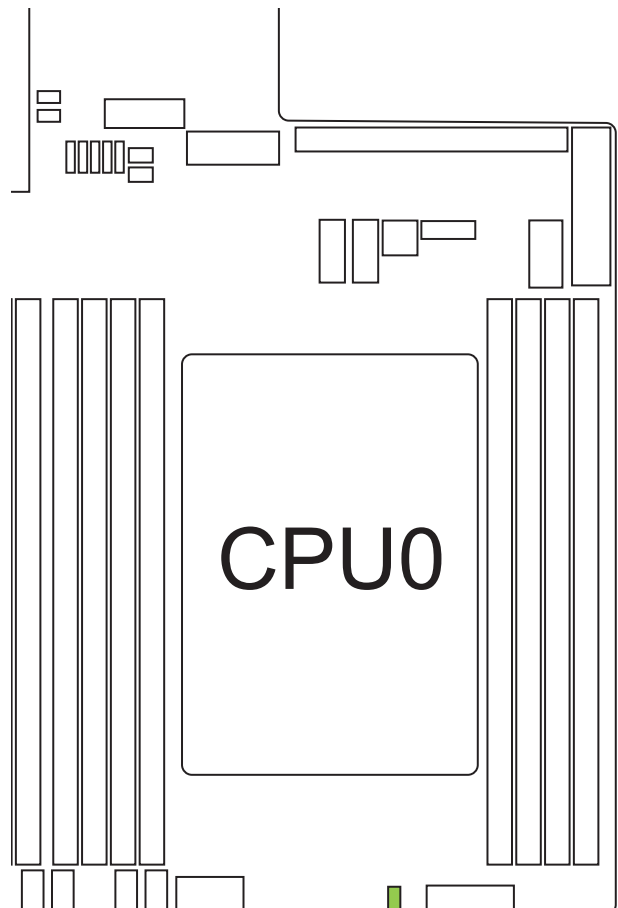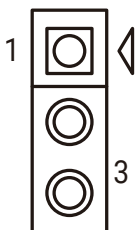

Fan Header (JFAN1~6)

This is a 4-pin connector that connects fan to motherboard.



| | |
|---|------|
| 1 | GND |
| 2 | +12V |
| 3 | TACH |
| 4 | PWM |

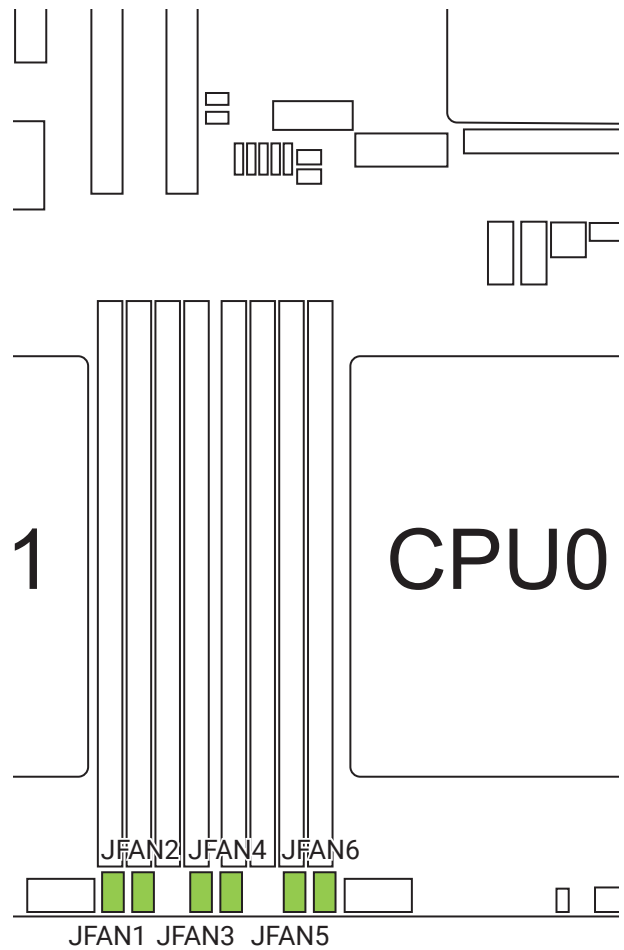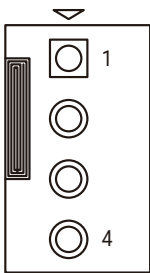

Front I/O USB Header (JUSB2_INT)

This is a 2x10-pin header that supports USB in the front panel.



| | | | |
|------------------|----|----|------------------|
| KEY (no pin) | 20 | 1 | +5V |
| +5V | 19 | 2 | USB3_P03_ESD_RXN |
| USB3_P04_ESD_RXN | 18 | 3 | USB3_P03_ESD_RXP |
| USB3_P04_ESD_RXP | 17 | 4 | GND |
| GND | 16 | 5 | USB3_P03_ESD_TXN |
| USB3_P04_ESD_TXN | 15 | 6 | USB3_P03_ESD_TXP |
| USB3_P04_ESD_TXP | 14 | 7 | GND |
| GND | 13 | 8 | USB2_P03_ESD_DN |
| USB2_P04_ESD_DN | 12 | 9 | USB2_P03_ESD_DP |
| USB2_P04_ESD_DP | 11 | 10 | USB2_OC2_N |

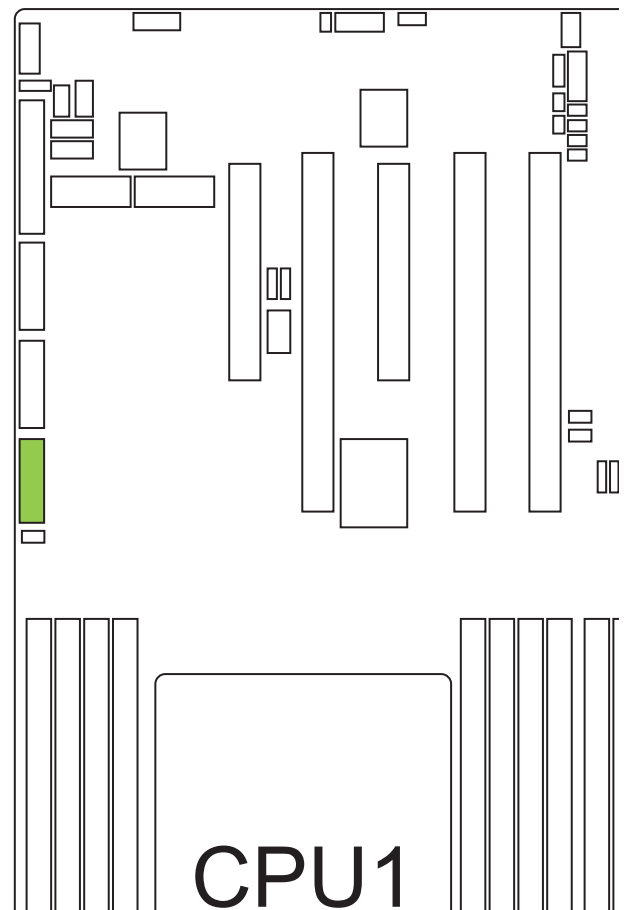

CPU PCIe Hot Plug Header (JPEHP)

This is a 2x4-pin header that provides CPU PCIe hot plug.



| | | | |
|-----------------|---|---|-----------------|
| SMB_CPU1_SDA | 2 | 1 | SMB_CPU0_SDA |
| GND | 4 | 3 | GND |
| SMB_CPU1_SCL | 6 | 5 | SMB_CPU0_SCL |
| SMB_CPU1_ALERT# | 8 | 7 | SMB_CPU0_ALERT# |

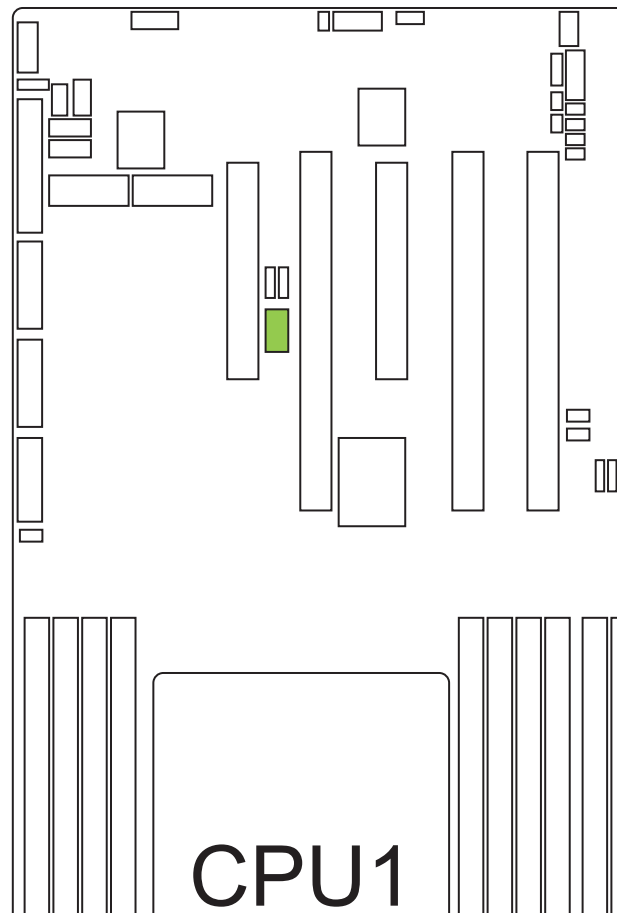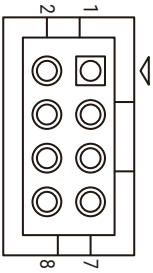

Front Panel Header (JFRONT)

This is a 2x12-pin header that supports the management of switches and controls from the front panel.



| | | | |
|--------------|----|----|--------------|
| +3.3V_DUAL | 2 | 1 | PWR_LED+ |
| +5VSB | 4 | 3 | KEY (no pin) |
| UID_LED# | 6 | 5 | PWR_LED- |
| SYS_HEALTH#2 | 8 | 7 | +3.3V |
| SYS_HEALTH#1 | 10 | 9 | HDD_LED# |
| LAN1_LINK_UP | 12 | 11 | SW_PWR_BTN# |
| LAN1_TRAFFIC | 14 | 13 | GND |
| I2C8SDA | 16 | 15 | SW_RST_BTN# |
| I2C8SCL | 18 | 17 | GND |
| INTRUDER# | 20 | 19 | UID_SW_IN# |
| LAN2_LINK_UP | 22 | 21 | +3.3V_DUAL |
| LAN2_TRAFFIC | 24 | 23 | FP_NMI_BTN |

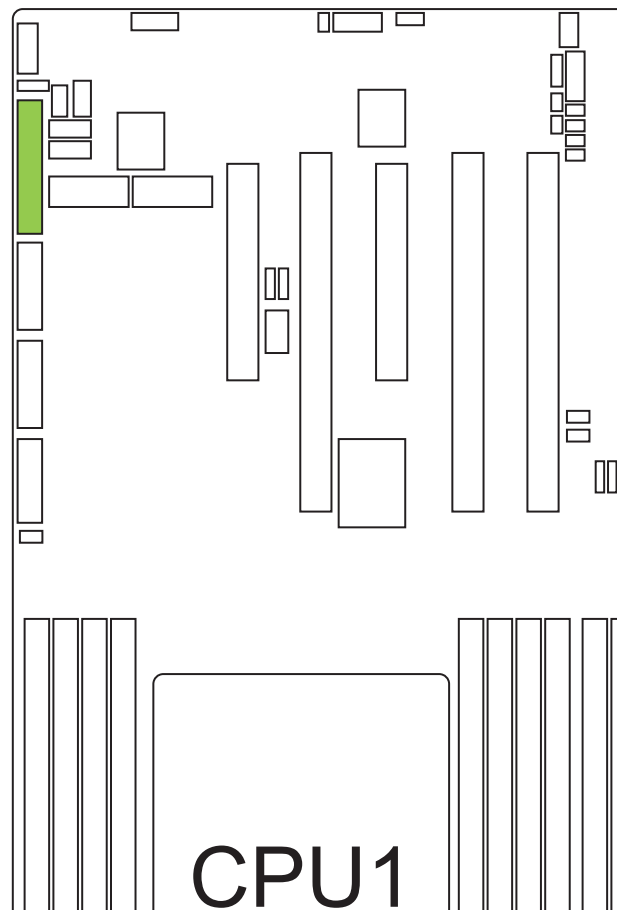

IPMB Header (JIPMB)

This is a 1x4-pin header is used to provide IPMB functionality.



| | |
|---|----------|
| 1 | IPMB_SDA |
| 2 | GND |
| 3 | IPMB_SCL |
| 4 | N.C. |

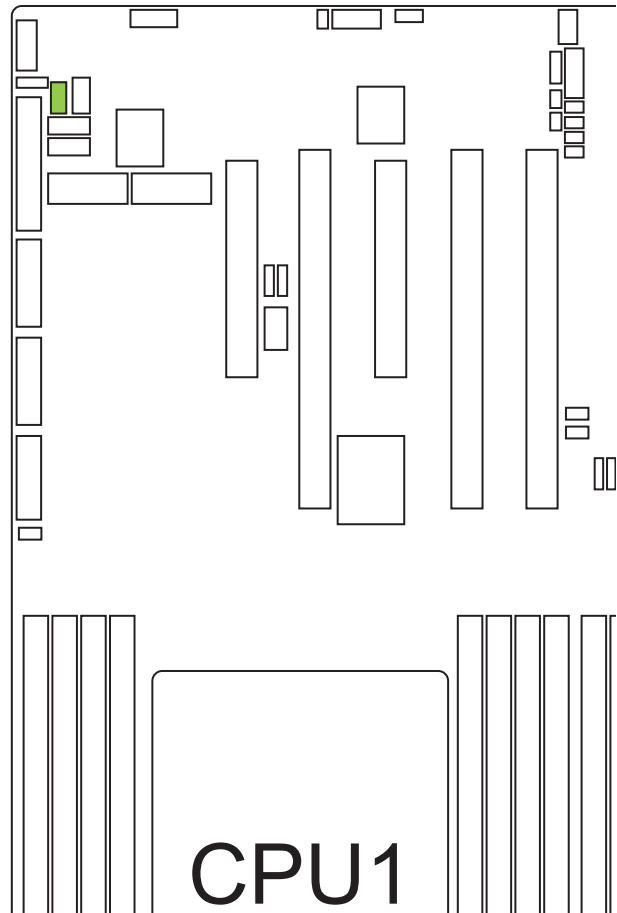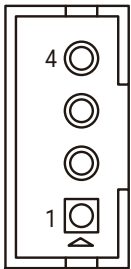

PLD Download Header (JPLD)

This 2x4-pin header is that supports PLD(Programmable Logical Device) download cable.



| | | | |
|------------|---|---|----------|
| GND | 2 | 1 | JTAG_TCK |
| +3.3V_DUAL | 4 | 3 | JTAG_TDO |
| JTAG_EN | 6 | 5 | JTAG_TMS |
| FORCE_EN | 8 | 7 | JTAG_TDI |

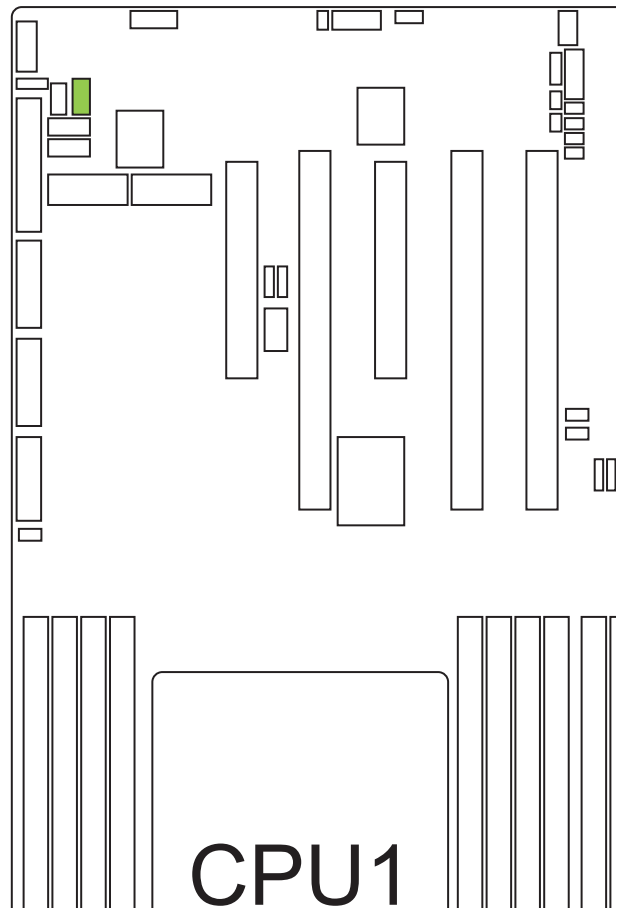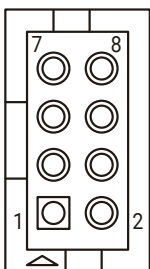

BMC GPIO Header (JBMC_GPIO)

This is a 1x6-pin header is used to provide BMC GPIO(General Purpose Input and Output).

| | |
|---|----------|
| 1 | EXTRST# |
| 2 | BMC_GPY1 |
| 3 | BMC_GPY0 |
| 4 | I2C9SDA |
| 5 | I2C9SCL |
| 6 | GND |

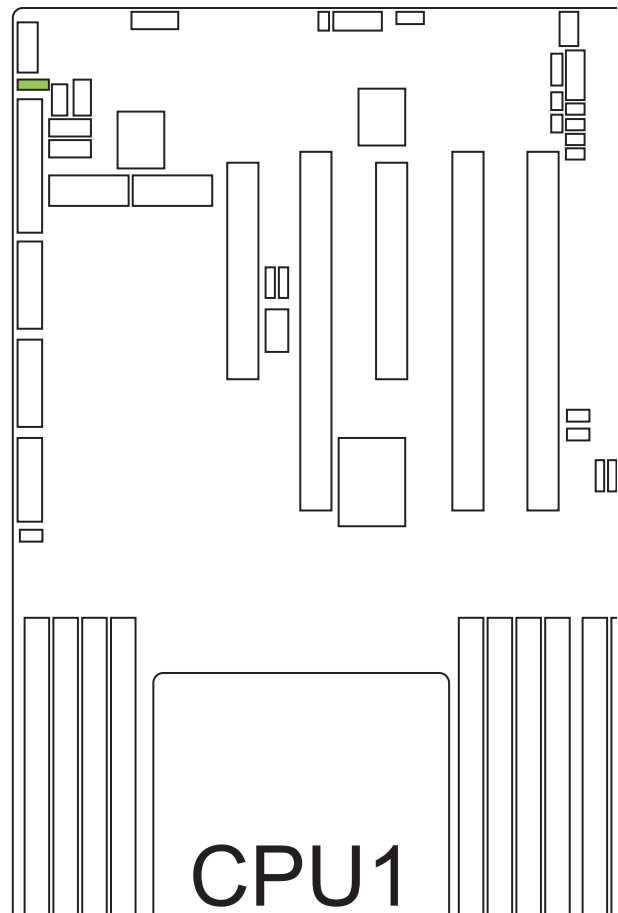
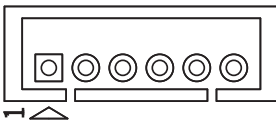


3.6 Jumper Definition

J12 SSD1 PCIE/SATA Select Jumper (J15)

This is a 3-pin jumper that configures PCIE/SATA SSD1.



| J15 | Setting | |
|--------|---------|---------|
| Pin1-2 | SATA | Default |
| Pin2-3 | PCle X4 | |

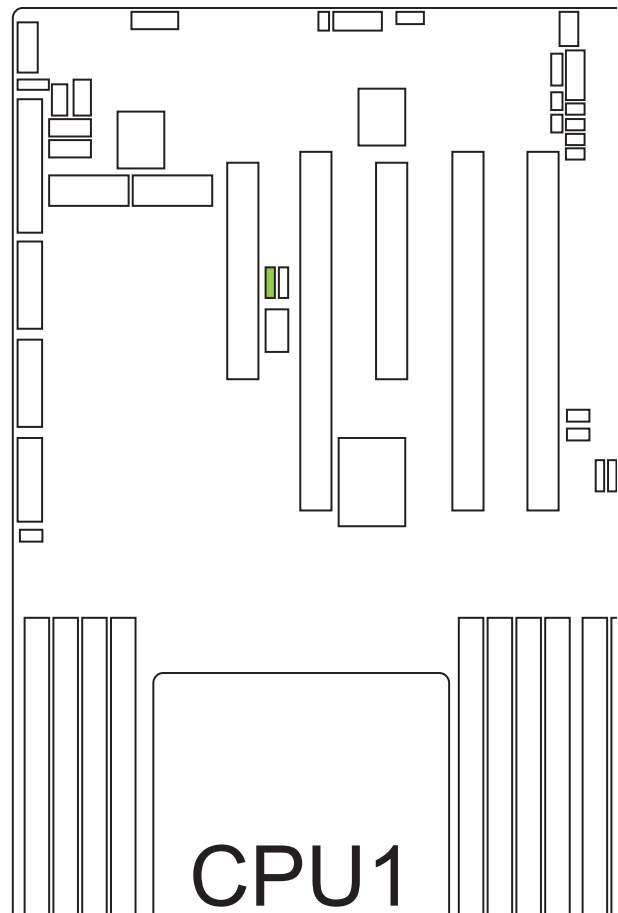

J12 SSD2 PCIE/SATA Select Jumper (J16)

This is a 3-pin jumper that configures PCIE/SATA SSD2.



| J16 | Setting | |
|--------|---------|---------|
| Pin1-2 | SATA | Default |
| Pin2-3 | PCle X4 | |

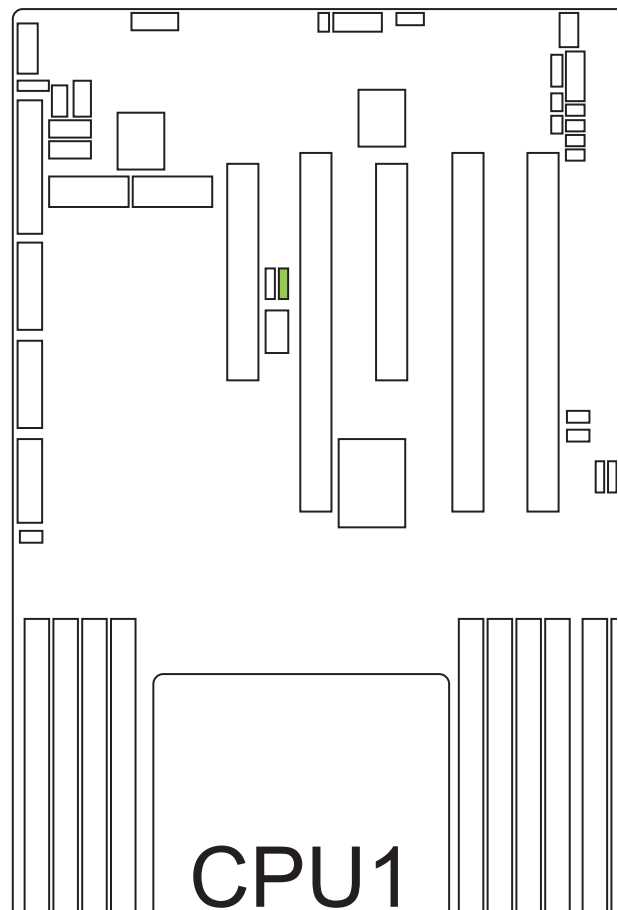

No Reboot (Watch Dog) Jumper (J1)



This is a 2-pin jumper that enables the watchdog timer without reboot.

| J1 | Setting | |
|-------|---------|---------|
| Short | Enable | |
| Open | Disable | Default |

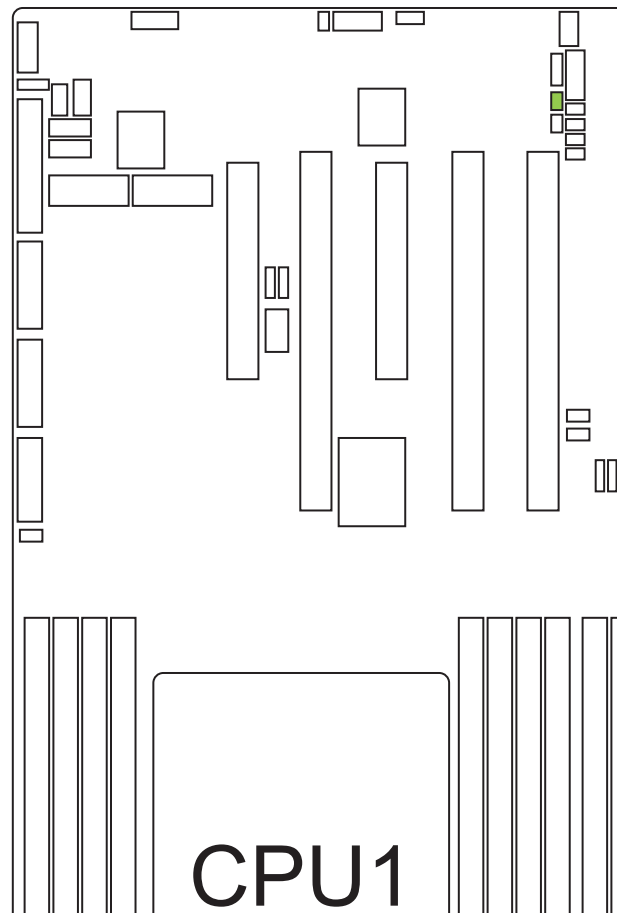**BMC Debug Port Select Jumper (J2)**

This is a 2-pin jumper that configures BMC debug port.



| J2 | Setting | |
|-------|---------|---------|
| Short | JCOM1 | |
| Open | JBMC_DP | Default |

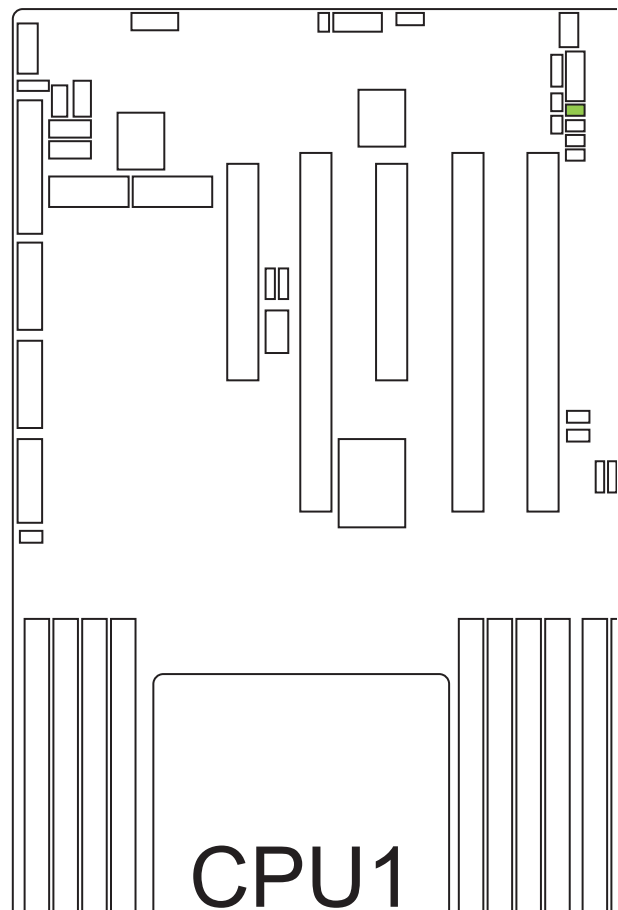

ME Force Recovery Mode Jumper (J3)


This is a 2-pin jumper that enables ME firmware to recovery mode.

| J3 | Setting | |
|-------|------------------|---------|
| Short | ME Recovery Mode | |
| Open | Normal | Default |

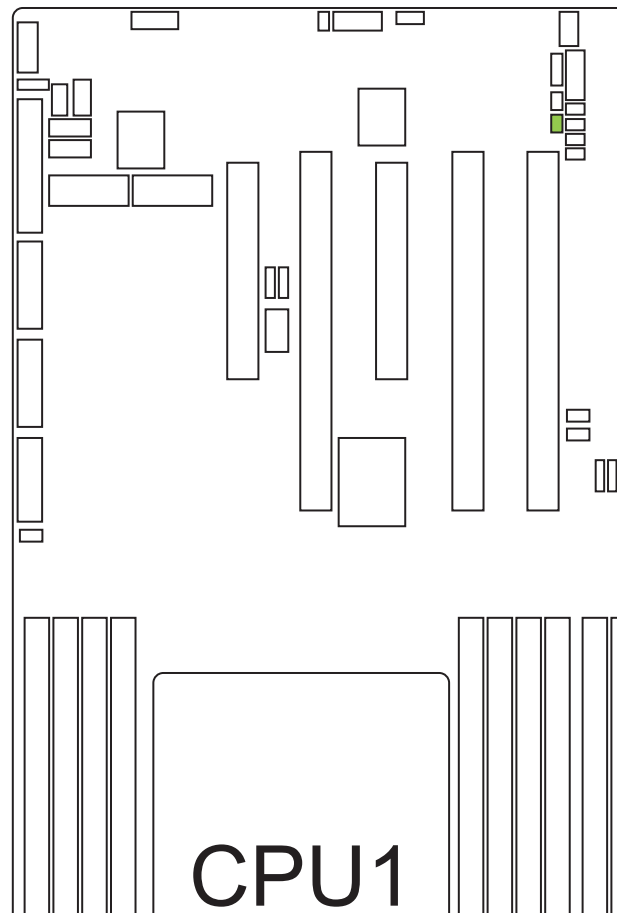**BMC SoC Flash Configuration Jumper (J4)**

This is a 2-pin jumper that enables BMC SOC Flash.


| J4 | Setting | |
|-------|---------|---------|
| Short | Enable | |
| Open | Disable | Default |

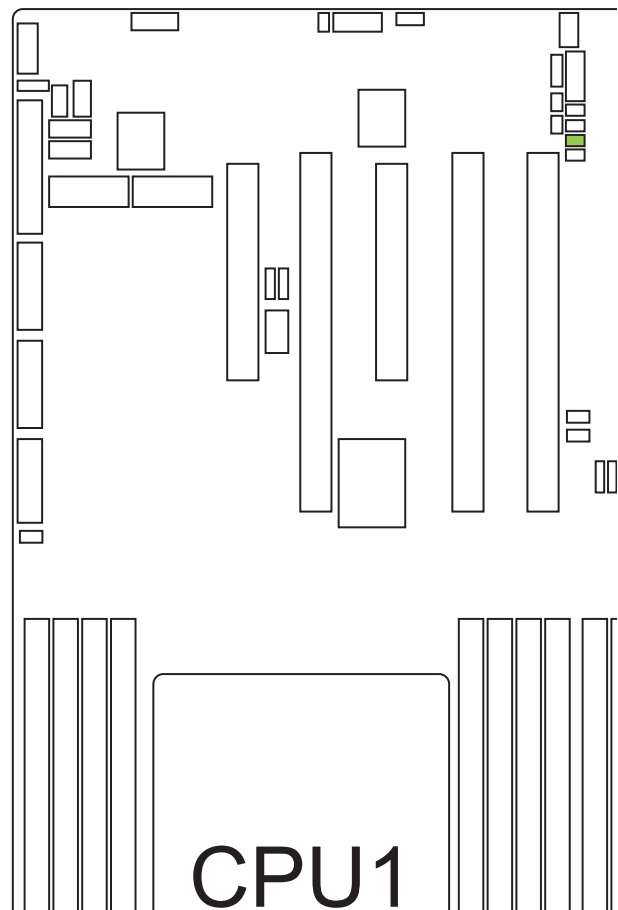

Flash Descriptor Security override Jumper (J5)

This is a 2-pin jumper that enables the override of flash descriptor.


| J5 | Setting | |
|-------|-------------------------|---------|
| Short | Flash Security override | |
| Open | Normal | Default |

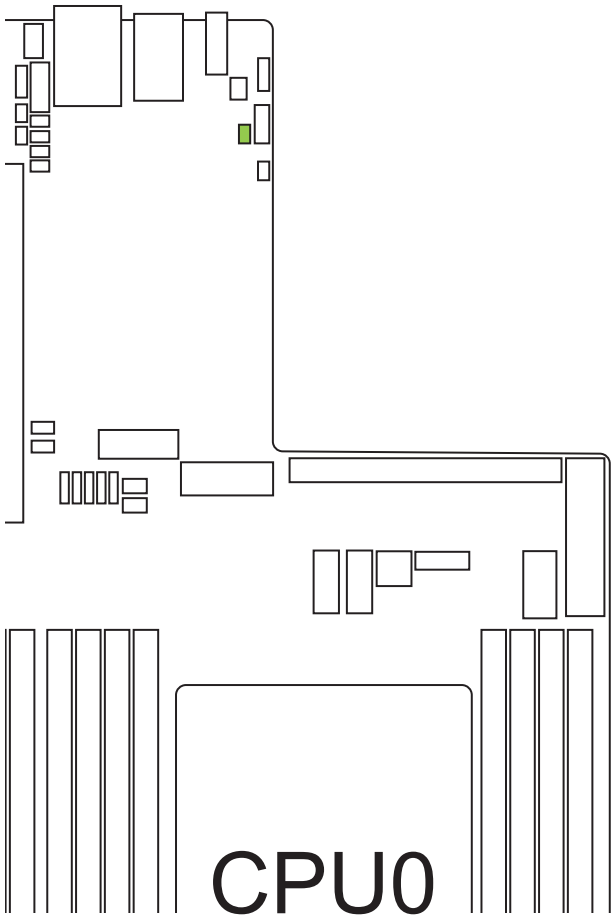

BIOS Recovery Mode Jumper (J6)

2-pin jumper that enables the recovery of the last functional version of BIOS.



| J6 | Setting | |
|-------|--------------------|---------|
| Short | BIOS Recovery Mode | |
| Open | Normal | Default |

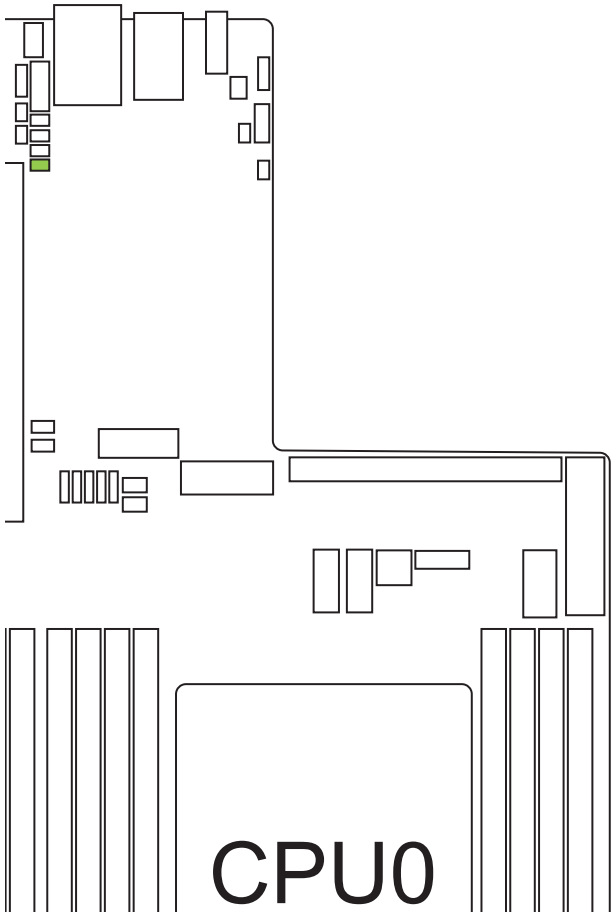

BMC Reset Jumper (JBMC_RST)


This is a 2-pin jumper that reboots the BMC.

| JBMC_RST | Setting | |
|----------|-----------|---------|
| Short | Reset BMC | |
| Open | Normal | Default |

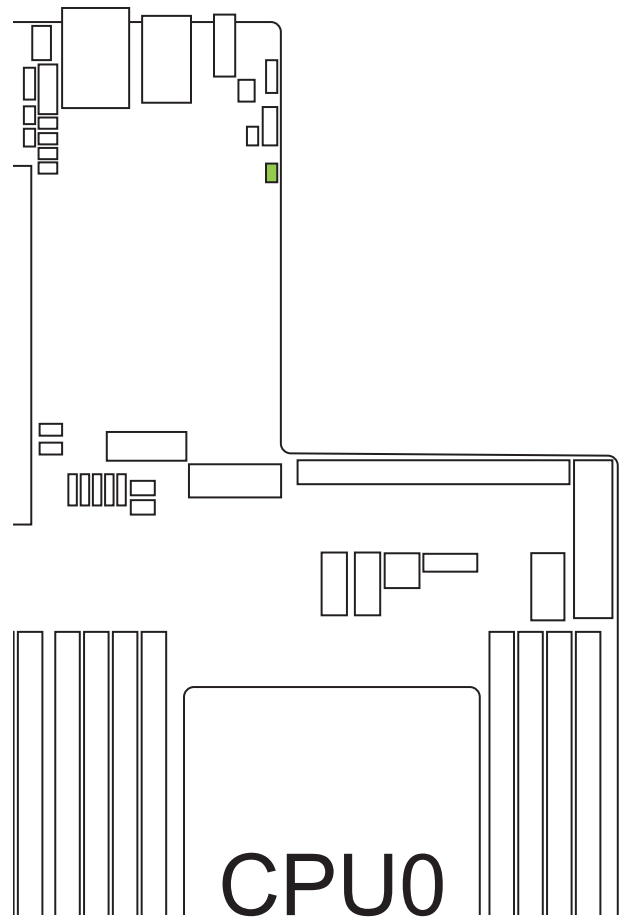**BMC ARM Disable Jumper (JBMC_DIS)**

This is a 2-pin jumper that disables BMC ARM support.



| JBMC_DIS | Setting | |
|----------|---------|---------|
| Short | Disable | |
| Open | Normal | Default |

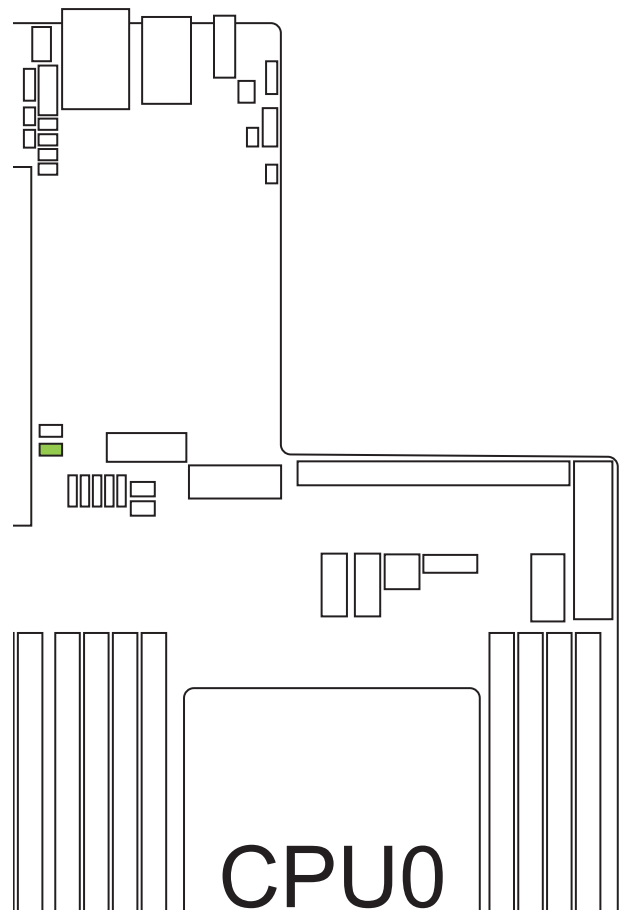

CMOS Jumper (JCMOS)

This is a 3-pin jumper that resets BIOS changes to default value.



| JCMOS | Setting | |
|--------|------------|---------|
| Pin1-2 | Normal | Default |
| Pin2-3 | Clear CMOS | |

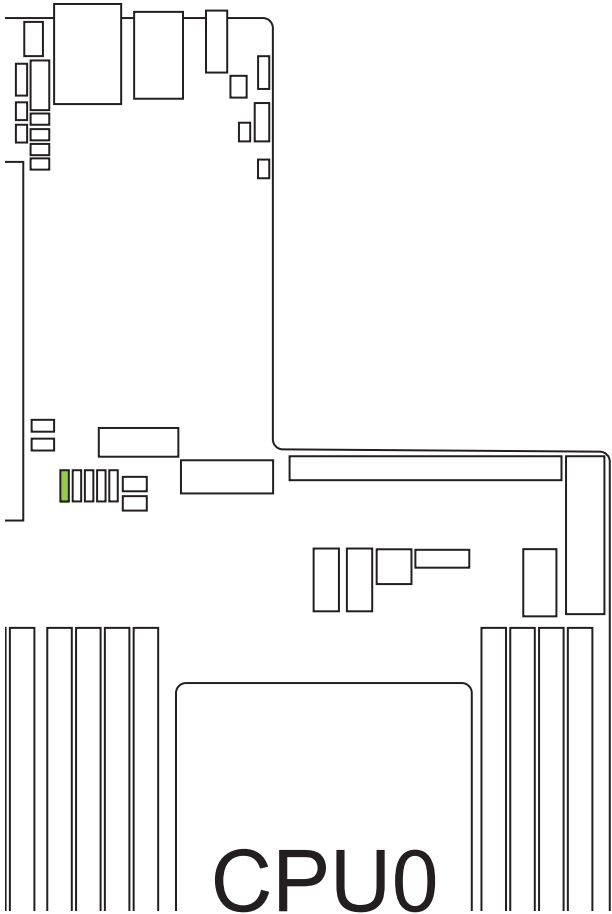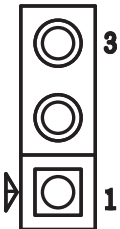

PECI Master Select Jumper (JPECI)

This is a 3-pin jumper that enables PECI access to BMC for DTS (Digital Thermal Sensor).



| JPECI | Setting | |
|--------|---------|---------|
| Pin1-2 | PCH | Default |
| Pin2-3 | BMC | |

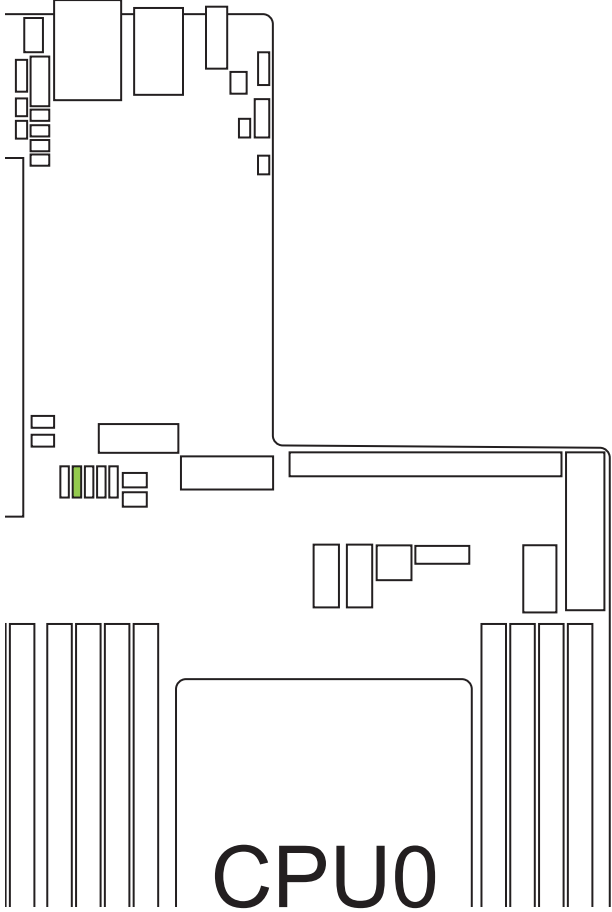


BMC NCSI Select Jumper (JNCSI_SEL)

This is a 3-pin jumper that enables connection between BMC and other NICs.

| JNCSI_SEL | Setting | |
|-----------|---------|---------|
| Pin 1-2 | I210 | Default |
| Pin 2-3 | OCP | |

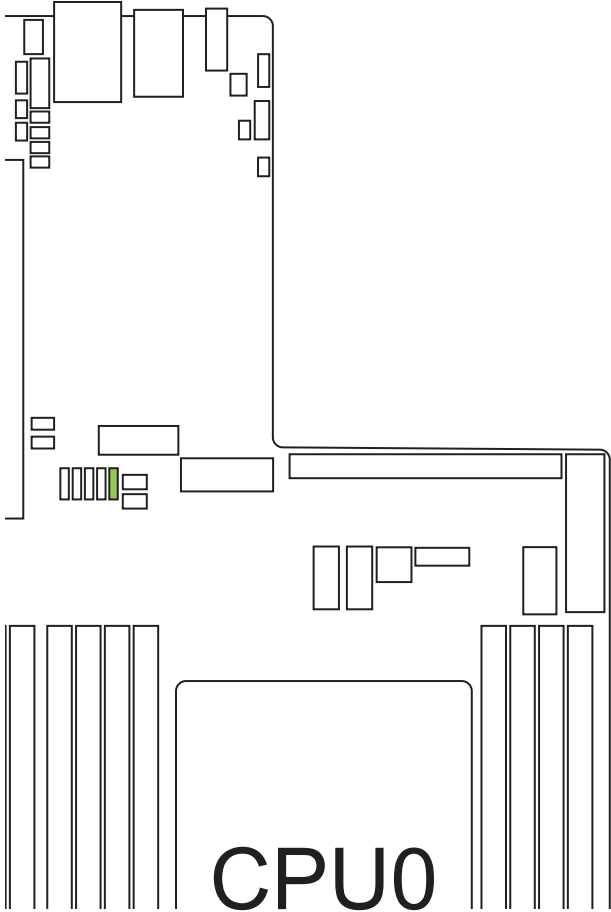

3.7 Internal LED

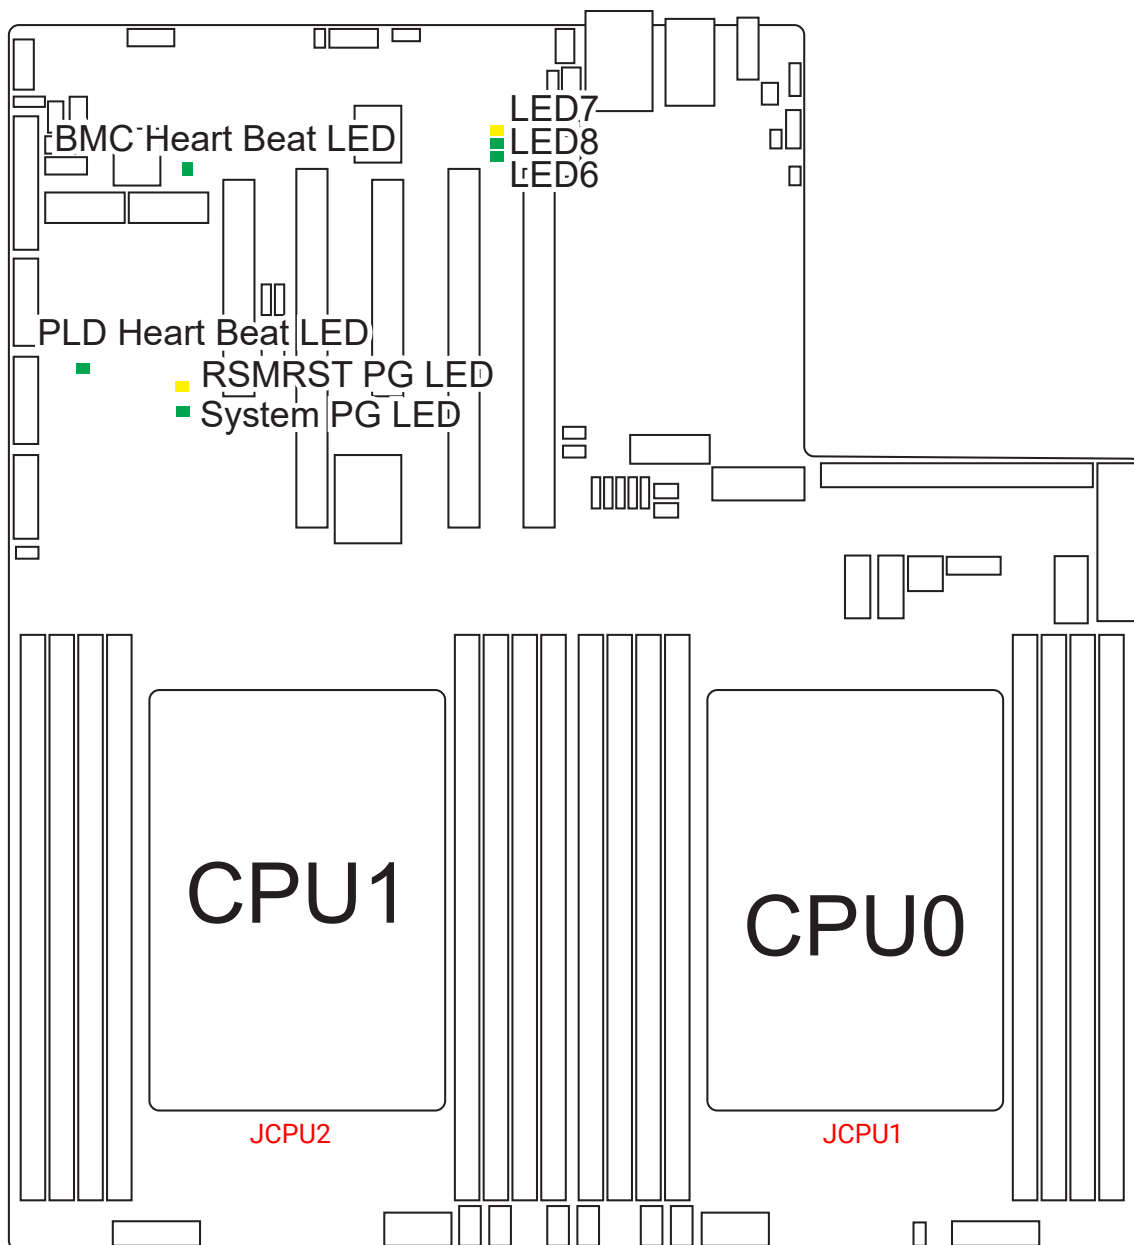


| Item | Color | Behavior |
|--------------------|------------------|---------------------------------|
| BMC HEART BEAT LED | Green (Blinking) | BMC activity is detected. |
| | Green | BMC is not active. |
| PLD HEART BEAT LED | Green (Blinking) | PLD activity is detected. |
| | Green | PLD is not active. |
| SYSTEM PG LED | Green | System power good is ready. |
| | Off | System power good is not ready. |
| RSMRST PG LED | Yellow | Resume Well Reset is ready. |
| | Off | Resume Well Reset is not ready. |
| LAN2 (I210) LED | Yellow (LED7) | Link speed: 1G. |
| | Green (LED8) | Link speed: 100M. |
| | Green (LED6) | LAN is active. |

3.8 Drive Backplane: 8 Bay


3.8.1 Placement

Top view

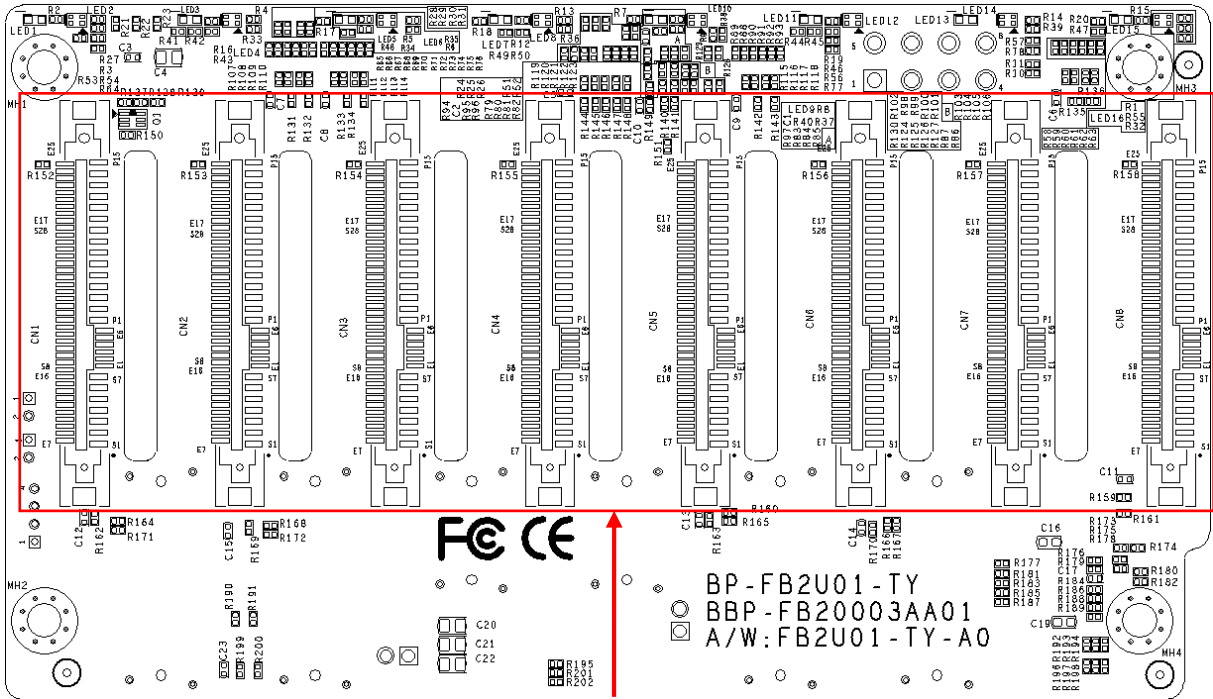

8BAYU.2/SAS Receptacle Connector

Bottom view

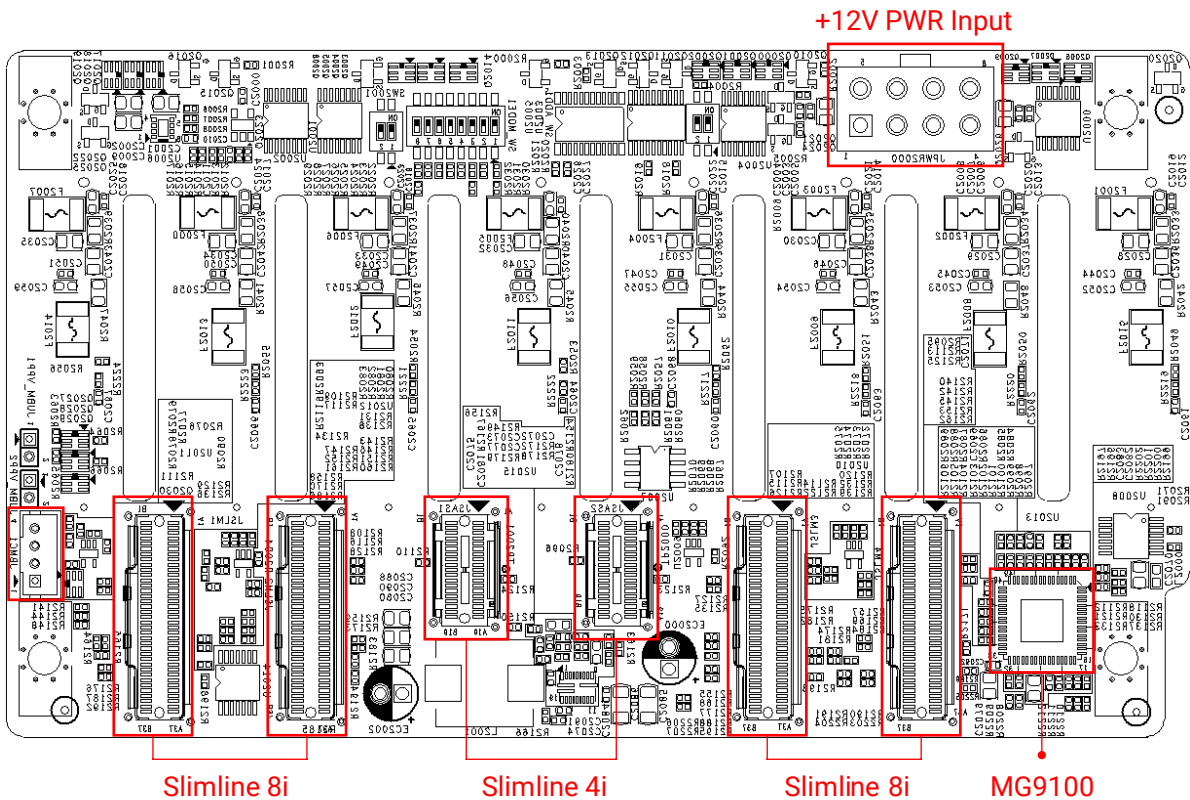

External I2C

Slimline 8i


Slimline 4i

Slimline 8i


MG9100

3.8.2 Connector

Top view

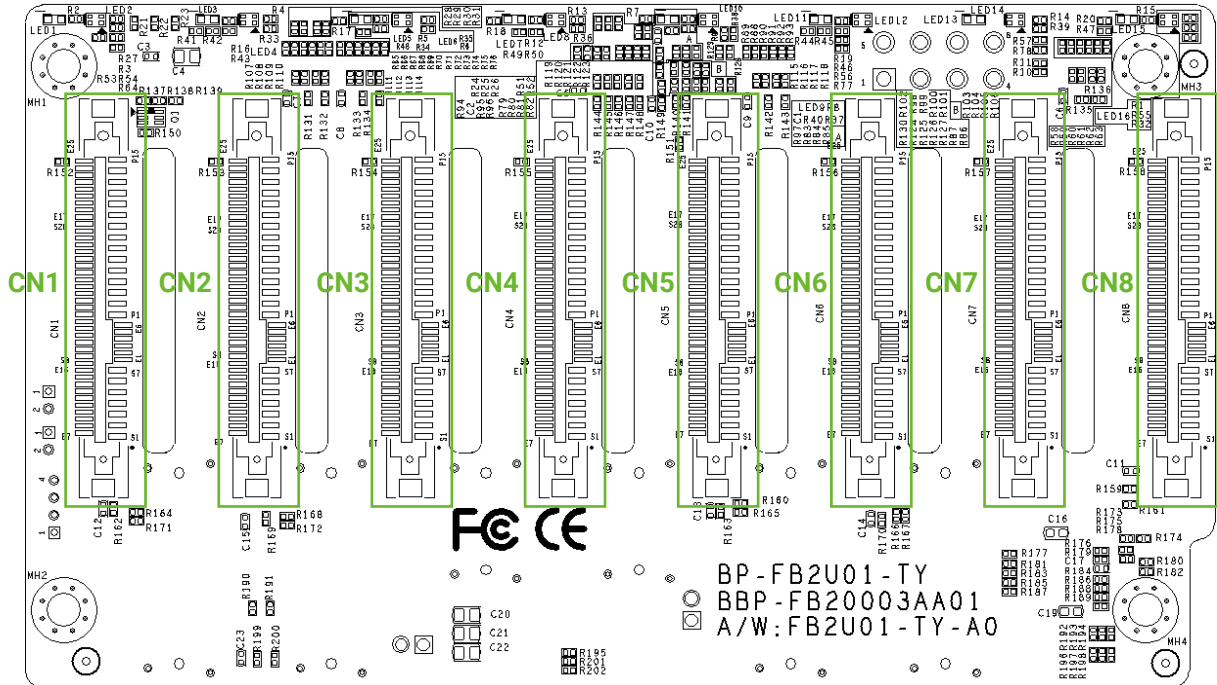


Bottom view

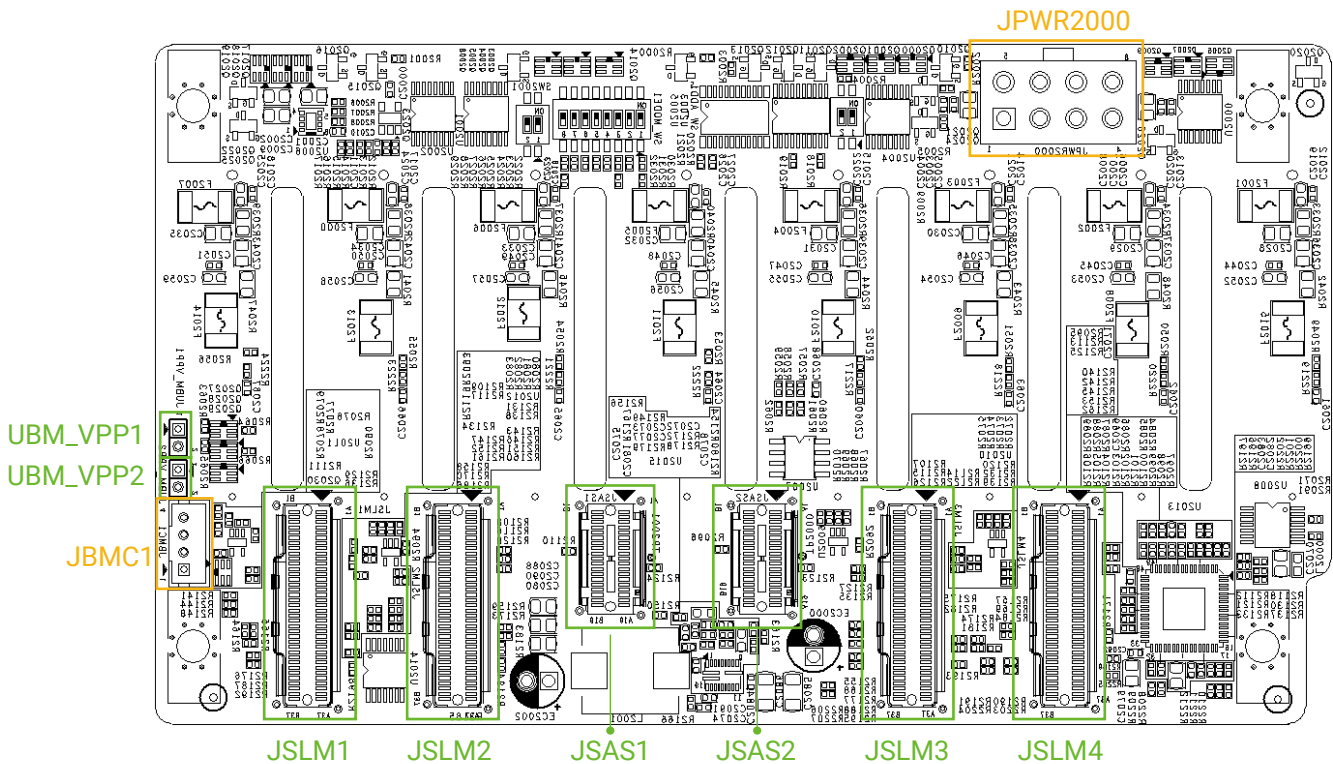

Power Supply (JPWR 2000)


1x4 power connector, PH5.5 / +12V power in, 7A per pin

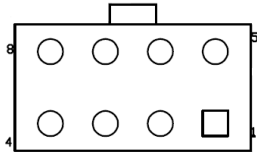

| | | | |
|------|---|---|-----|
| +12V | 5 | 1 | GND |
| +12V | 6 | 2 | GND |
| +12V | 7 | 3 | GND |
| +12V | 8 | 4 | GND |


External I2C (JBMC1)

2x4 pin box header, PH2.0

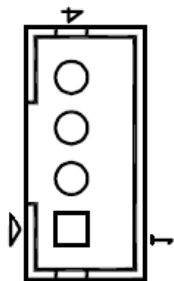


| | | | |
|------------|---|---|-------------|
| BP_BMC_SDA | 3 | 1 | SMB_ALARM_N |
| BP_BMC_SCL | 4 | 2 | GND |

JUMB_VPP1

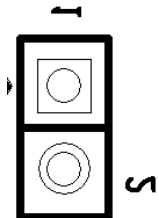

| | |
|-------|------------------------|
| Open | VPP Operation(default) |
| Short | UBM Operation |

JUBM_VPP2

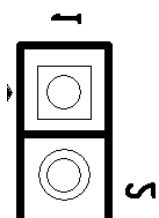


| | |
|-------|------------------------|
| Open | VPP Operation(default) |
| Short | UBM Operation |

- Device Mapping

| | | |
|-------|-----|-----------|
| JSLM1 | CN1 | NVMe HDD1 |
| | CN2 | NVMe HDD2 |
| JSLM2 | CN3 | NVMe HDD3 |
| | CN4 | NVMe HDD4 |
| JSLM3 | CN5 | NVMe HDD5 |
| | CN6 | NVMe HDD6 |
| JSLM4 | CN7 | NVMe HDD7 |
| | CN8 | NVMe HDD8 |
| JSAS1 | CN1 | SAS HDD1 |
| | CN2 | SAS HDD2 |
| | CN3 | SAS HDD3 |
| | CN4 | SAS HDD4 |
| JSAS2 | CN5 | SAS HDD5 |
| | CN6 | SAS HDD6 |
| | CN7 | SAS HDD7 |
| | CN8 | SAS HDD8 |

3.8.3 LED Indicator


Top view

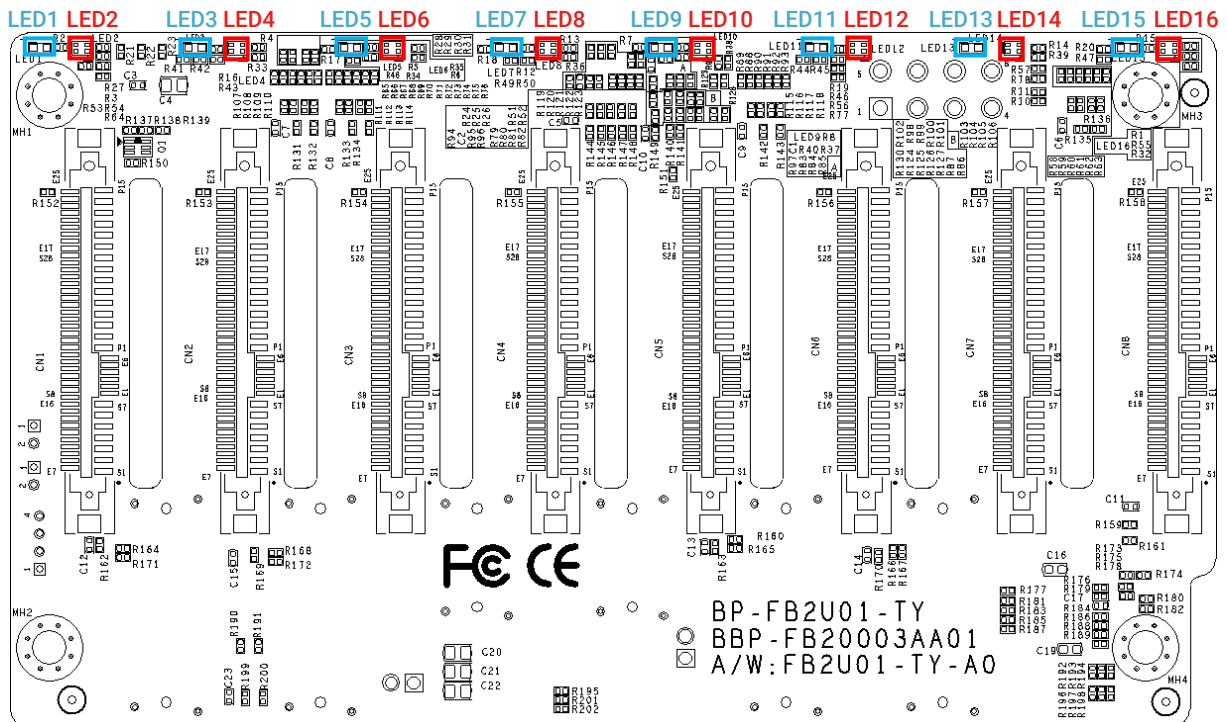

| Indicator | | Color | Behavior |
|------------------------|-----|----------------------|---|
| HDD1-8 Activity LED | LED | Blue (On) | HDD present |
| | 1 | | |
| | 3 | Blue (Blinking) | HDD activity is detected or External control. |
| | 5 | | |
| | 7 | | |
| | 9 | Off | HDD is not connected. |
| | 11 | | |
| 13 | | | |
| 15 | | | |
| HDD1-8 Fail LED | LED | Yellow (On) | HDD Fault |
| | 2 | | |
| | 4 | Yellow (Blinking) | HDD Rebuild |
| | 6 | | |
| | 8 | | |
| | 10 | Off | Normal |
| | 12 | | |
| 14 | | | |
| 16 | | | |
| HDD1-8 Locate LED | LED | GEN (On) | HDD Locate |
| | 2 | | |
| | 4 | | |
| | 6 | | |
| | 8 | Off | Normal |
| | 10 | | |
| | 12 | | |
| 14 | | | |
| 16 | | | |

3.8.4 DIP-Switch

Bottom view

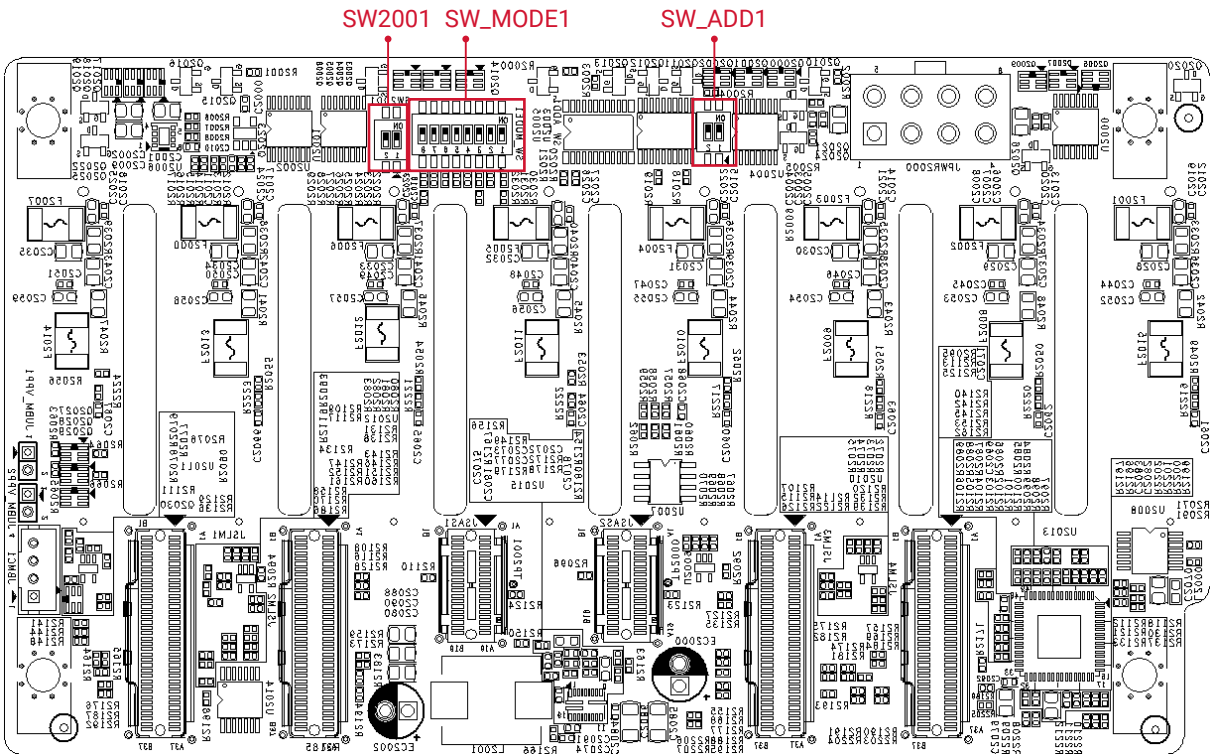

SW2001




| Pin1 | Pin2 | 9100 BMC Address |
|------|------|------------------|
| off | off | 0xC6h |
| on | off | 0xC4h |
| off | on | 0xC2h |
| on | on | 0xC0h (Default) |

SW_ADD1



| Pin1 | Pin2 | PCA9548 Address | LM75 Address |
|------|------|-----------------|-----------------|
| off | off | 0xE6h | 0x96h |
| on | off | 0xE4h | 0x94h |
| off | on | 0xE2h | 0x92h |
| on | on | 0xE0h (Default) | 0x90h (Default) |

SW502

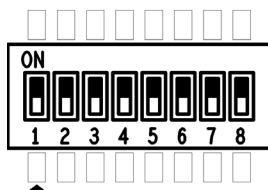

| SHP0 ID & SHP1 ID Configuration Settings for AMD Mode | | | | | | | |
|---|------|------|-----------------------|------|------|------|-----------------------|
| Pin1 | Pin2 | Pin3 | SHP0 SMBUS Address | Pin4 | Pin5 | Pin6 | SHP1 SMBUS Address |
| off | off | off | 0x50h/0x52h (Default) | off | off | off | 0x50h/0x52h (Default) |
| on | off | off | 0x54h/0x56h | on | off | off | 0x54h/0x56h |
| off | on | off | 0x58h/0x5Ah | off | on | off | 0x58h/0x5Ah |
| on | on | off | 0x5Ch/0x5Eh | on | on | off | 0x5Ch/0x5Eh |
| off | off | on | 0x60h/0x62h | off | off | on | 0x60h/0x62h |
| on | off | on | 0x64h/0x66h | on | off | on | 0x64h/0x66h |
| off | on | on | 0x68h/0x6Ah | off | on | on | 0x68h/0x6Ah |
| on | on | on | 0x6Ch/0x6Eh | on | on | on | 0x6Ch/0x6Eh |


| VPP ID & VPP1 ID Configuration Settings for INTEL Mode | | | | | |
|--|------|-----------------------|------|------|-----------------------|
| Pin1 | Pin2 | VPP0 SMBUS Address | Pin3 | Pin4 | VPP1 SMBUS Address |
| off | off | 0x40h/0x42h (Default) | off | off | 0x40h/0x42h (Default) |
| on | off | 0x44h/0x46h | on | off | 0x44h/0x46h |
| off | on | 0x48h/0x4Ah | off | on | 0x48h/0x4Ah |
| on | on | 0x4Ch/0x4Eh | on | on | 0x4Ch/0x4Eh |

| Vendor ID Configuration Settings | | |
|----------------------------------|------|-----------------|
| Pin7 | Pin8 | Vendor |
| off | off | UMB Only |
| on | off | AVAGO |
| off | on | AMD |
| on | on | INTEL (Default) |


3.8.5 Cable routing

Motherboard to tri-mode backplane.

| MB | BP |
|-----|----|
| J14 | P1 |
| J13 | P2 |
| J10 | P3 |
| J9 | P4 |

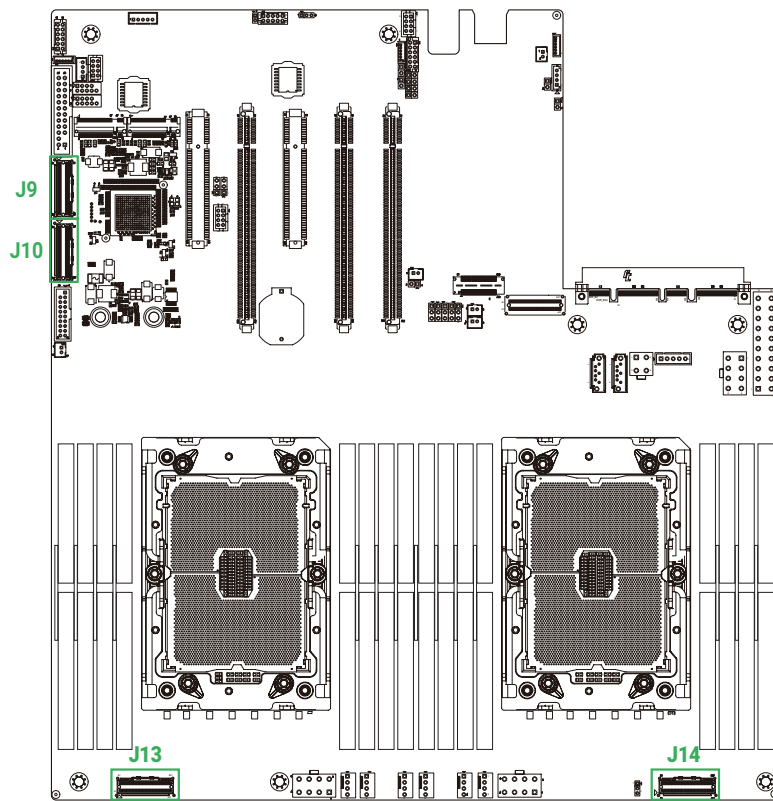

Motherboard

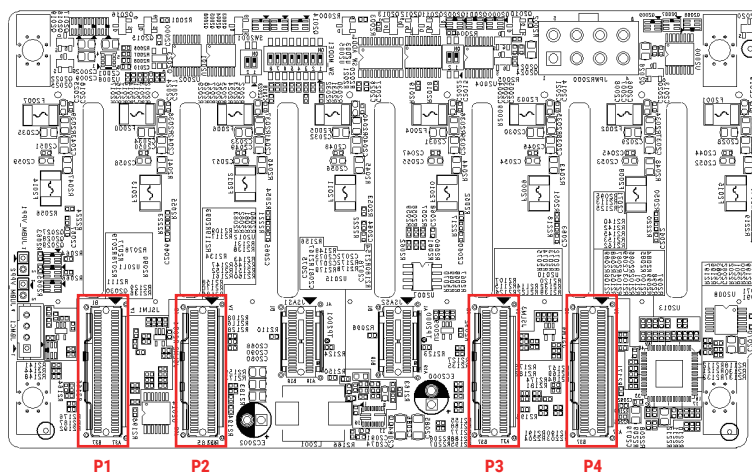


Backplane

3.9 Drive Backplane: 30 Bay


3.9.1 Placement

Top view

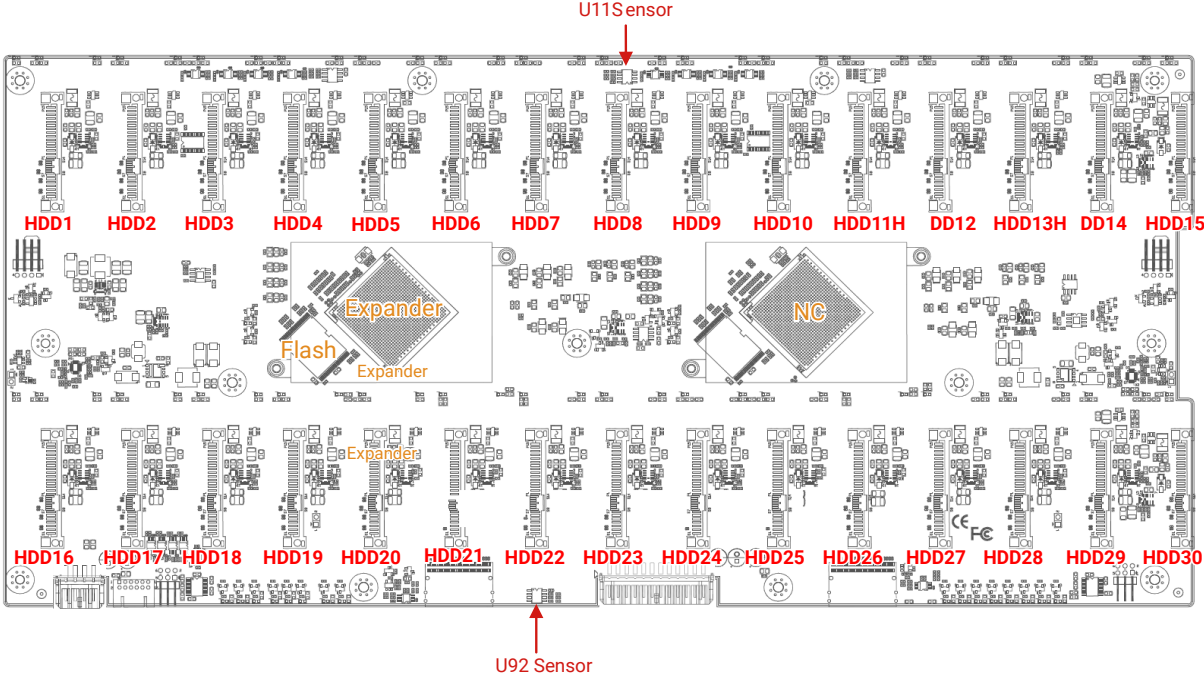


| Connector | Description |
|-----------|---|
| HDD1-30 | SFF-8680 SAS Receptacle (SMT H:14.15mm) |


Bottom view

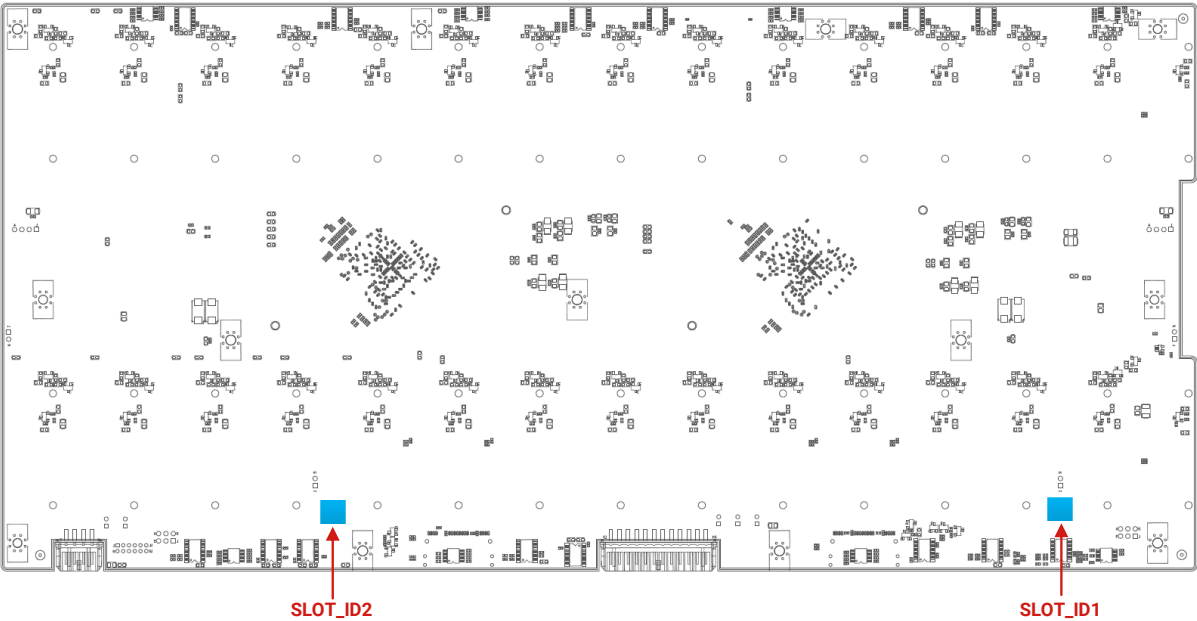

3.9.2 Connector

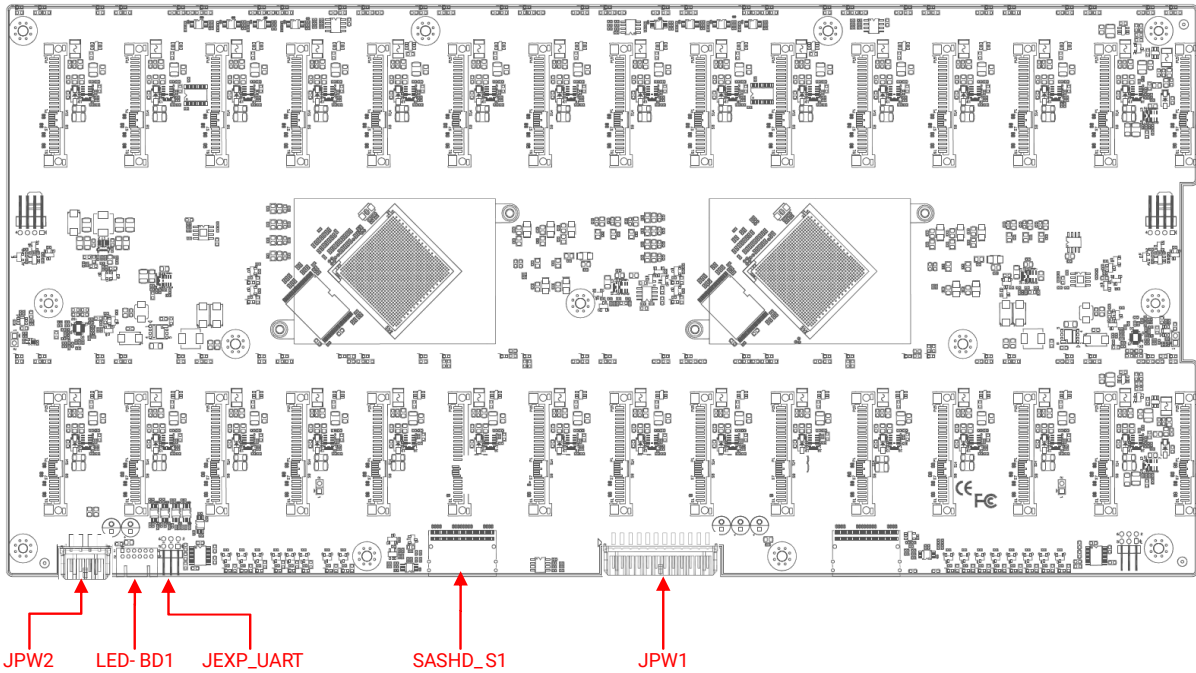


Power Connector (JPW1)

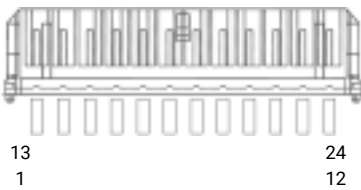


| | | | |
|------|----|----|------|
| GND | 13 | 1 | GND |
| GND | 14 | 2 | GND |
| GND | 15 | 3 | GND |
| GND | 16 | 4 | GND |
| GND | 17 | 5 | GND |
| GND | 18 | 6 | GND |
| +12V | 19 | 7 | +12V |
| +12V | 20 | 8 | +12V |
| +12V | 21 | 9 | +12V |
| +12V | 22 | 10 | +12V |
| +12V | 23 | 11 | +12V |
| +12V | 24 | 12 | +12V |

Power Connector (JPW2)

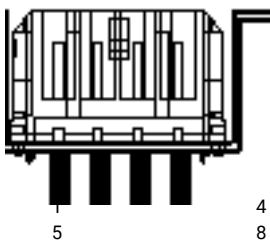


| | | | |
|------|---|---|------|
| GND | 5 | 1 | GND |
| GND | 6 | 2 | GND |
| +12V | 7 | 3 | +12V |
| +12V | 8 | 4 | +12V |

Control for Expander (JEXP_UART1)

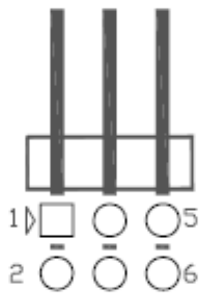


| | | | |
|-----------|---|---|----------|
| DBG_SIRXD | 2 | 1 | SM_SIRXD |
| GND | 4 | 3 | GND |
| DBG_SITXD | 6 | 5 | SM_SITXD |

Front LED Board Control for Display HDD LED Status (LED-BD1)

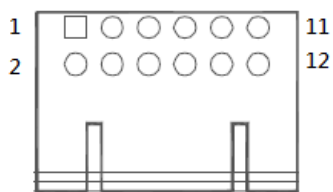

| | | | |
|----------|----|----|-----------|
| +3V3 | 1 | 2 | +5V |
| SLOAD2 | 3 | 4 | SDATAOUT2 |
| SCLOCK2 | 5 | 6 | GND |
| SLOAD1 | 7 | 8 | SDATAOUT1 |
| SCLOCK1 | 9 | 10 | CPLD SDA |
| CPLD SCL | 11 | 12 | GND |

3.9.3 LED Indicator

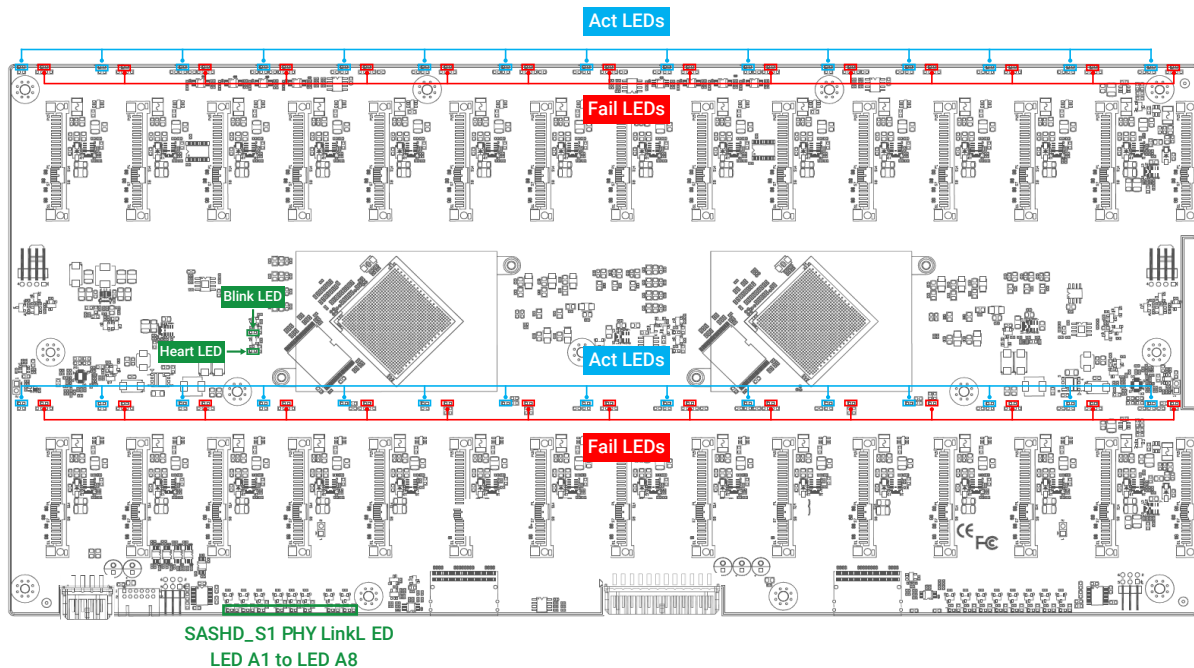

| Indicator | Color | Behavior | Description |
|---|-------|----------|---|
| SAS PHY Link Status (LEDA1 to LEDA8) | Blue | On | Link up |
| | | Blinking | Activity is detected |
| | | Off | Link down |
| Expander Blink (LED31) | Blue | Blinking | Expander alive, 0.0833Hz (12 seconds per cycle) |
| Expander Heart Bit (LED33) | Blue | Blinking | Expander FW running |
| HDD Activity LEDs | Blue | On | HDD present |
| | | Blinking | HDD Activity detected: 8Hz |
| | | Off | HDD Locate: 0.5Hz |
| HDD Fault/Status LEDs | Red | On | Set by any of the following bits: 1. RQST MISSING 2. RQST FAULT |
| | | Blinking | Set by any of the following bits: 1. RQST CONS CHECK 2. RQST IN CRIT ARRAY 3. RQST IN FAILED ARRAY 4. RQST REBUILD/REMAP 5. RQST R/R ABORT 6. RQST INSERT 7. RQST REMOVE 8. PRDFAIL |
| | | Off | No control bit is set or set by any of the following bits: 1. RQST OK 2. RQST RSVD DEVICE 3. RQST HOT SPARE 4. RQST ACTIVE 5. DO NOT REMOVE 6. RQST IDENT 7. DEVICE OFF |

Chapter 4. BIOS Configuration Settings

This chapter demonstrates how to configure the UEFI BIOS settings in your system device. You can enter the BIOS screen during system startup.

To enter BIOS configuration settings,

- Press **Esc** key during the Power-On-Self-Test (POST)

To enter BIOS after POST, you have to restart the system by using one of the three methods:

- Press **Ctrl + Alt + Delete**.
- Press the reset button on the system chassis.
- Turn the system off and on.

NOTE



- The following pages provide the details of BIOS menu. Please be noted that the BIOS menu are continually changing due to the BIOS updating. The BIOS menu provided are the most updated ones when this manual is written.
- The default value for each BIOS option key may vary per system. The [default] key is for reference only.

4.1 Navigation Keys

The navigation keys are listed below.

| Function Key | Description |
|-------------------------------|--------------------------------------|
| < ↑ > < ← > < → > < ↓ > | Select item. |
| < Enter > | Select and enter sub-screen. |
| < + > < - > | Modify selected option. |
| < F1 > | General help. |
| < F2 > | Previous Value. |
| < F3 > | Optimized defaults. |
| < F4 > | Save & Exit. |
| < F5 > < F6 > | Change values. |
| < F7 > | Discard Change and Exit. |
| < F9 > | Load Optimal Default for all values. |
| < F10 > | Save changes and exit. |
| < F12 > | Print Screen. |
| < Esc > | Exit the current menu screen. |

4.2 BIOS Menu

4.2.1 Menu


Press **←** and **→** to select the options of the menu bar.

Press **Enter** to access the option screen.


| Menu | Description |
|------------------------|--|
| Main | Displays basic system information and date & time. |
| Advanced | Allows configuration of advanced system settings. |
| Platform Configuration | Allows configuration of platform settings such as PCH, miscellaneous, and server ME configuration. |
| Socket Configuration | Allows configuration of socket settings such as processor, Common RefCode, UPI, and memory configurataion. |
| Server Management | Allows configuration of timer, System Event Log, and BMC network. |
| Security | Sets passwords and security functions. |
| Boot | Sets boot options such as Quick Boot or USB Boot. |
| Exit | Save changes and exit, discard changes and exit, discard changes, or load optimal or fail-safe defaults. |

4.2.2 Startup

① Press **DEL** or **ESC** to run the BIOS setup procedure.

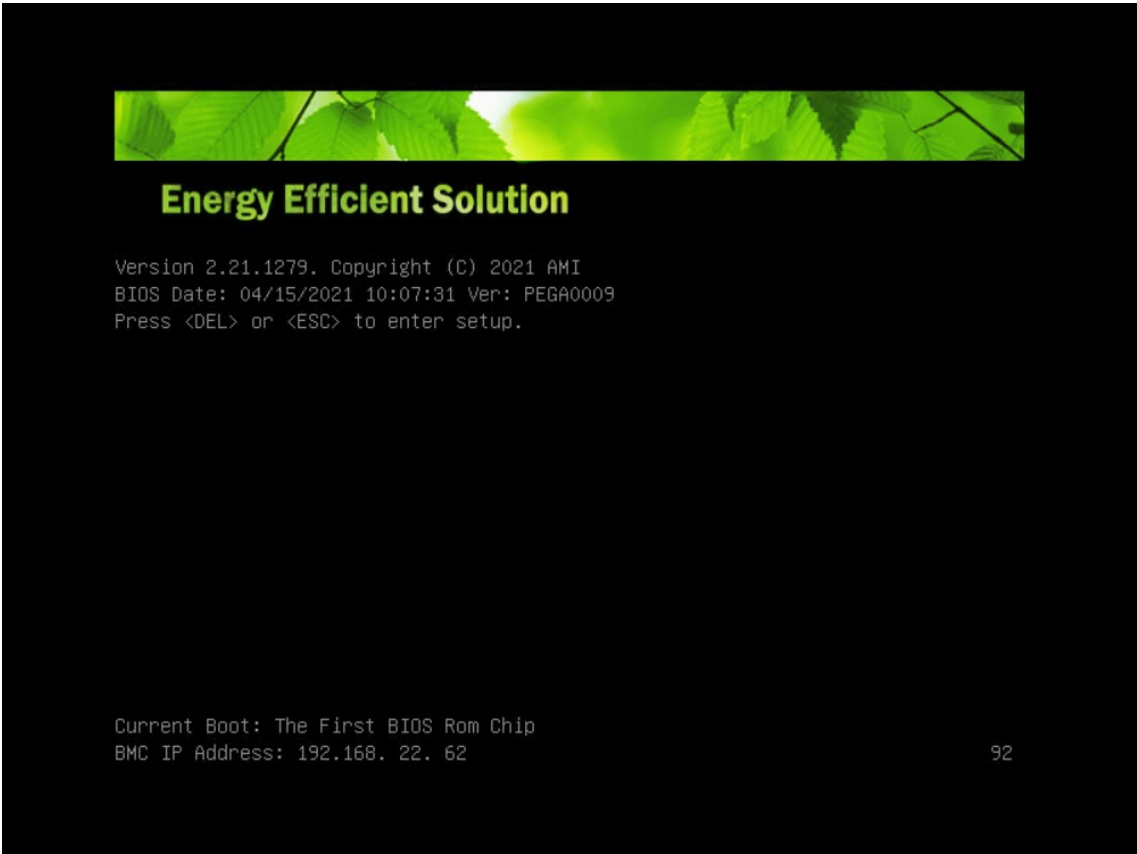


4.3 Main

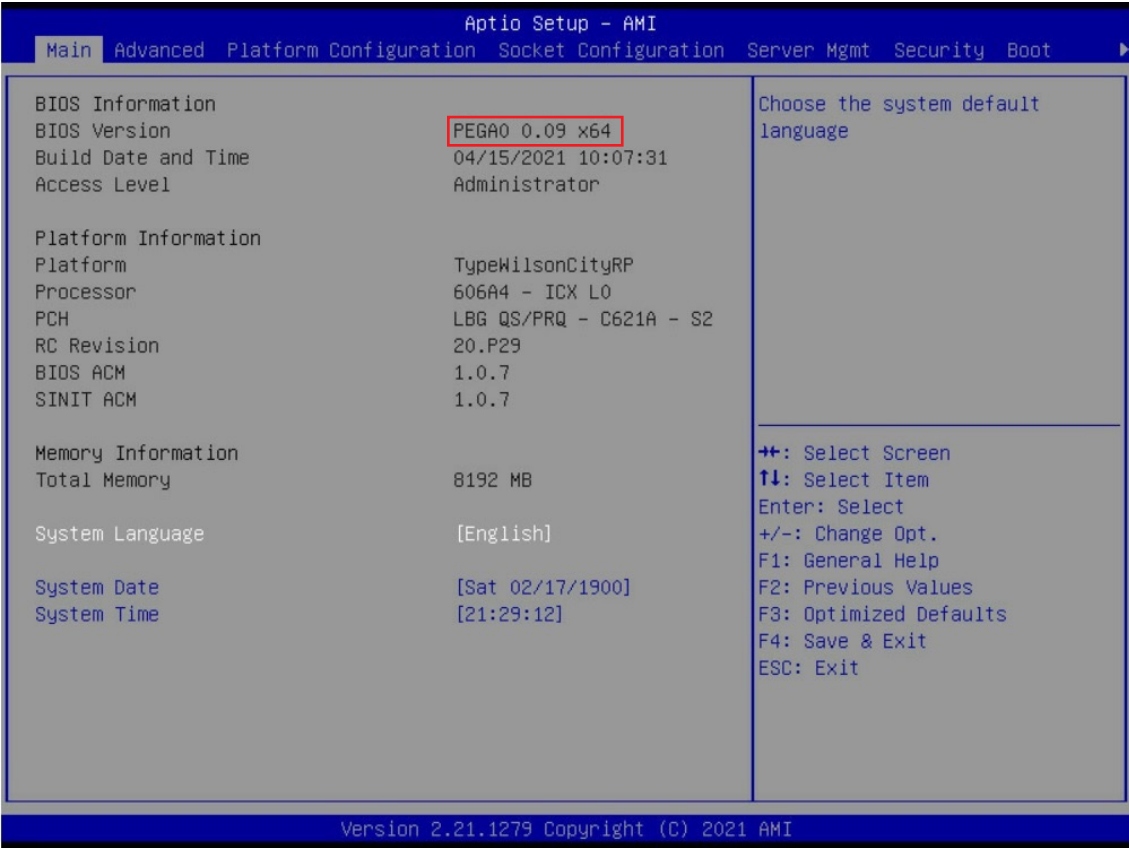

4.3.1 Main

| Main | |
|-----------------|---|
| System Language | Configures the language used in the system. |
| System time | Configures the current time. |
| System date | Configures the current date. |

4.4 Advanced

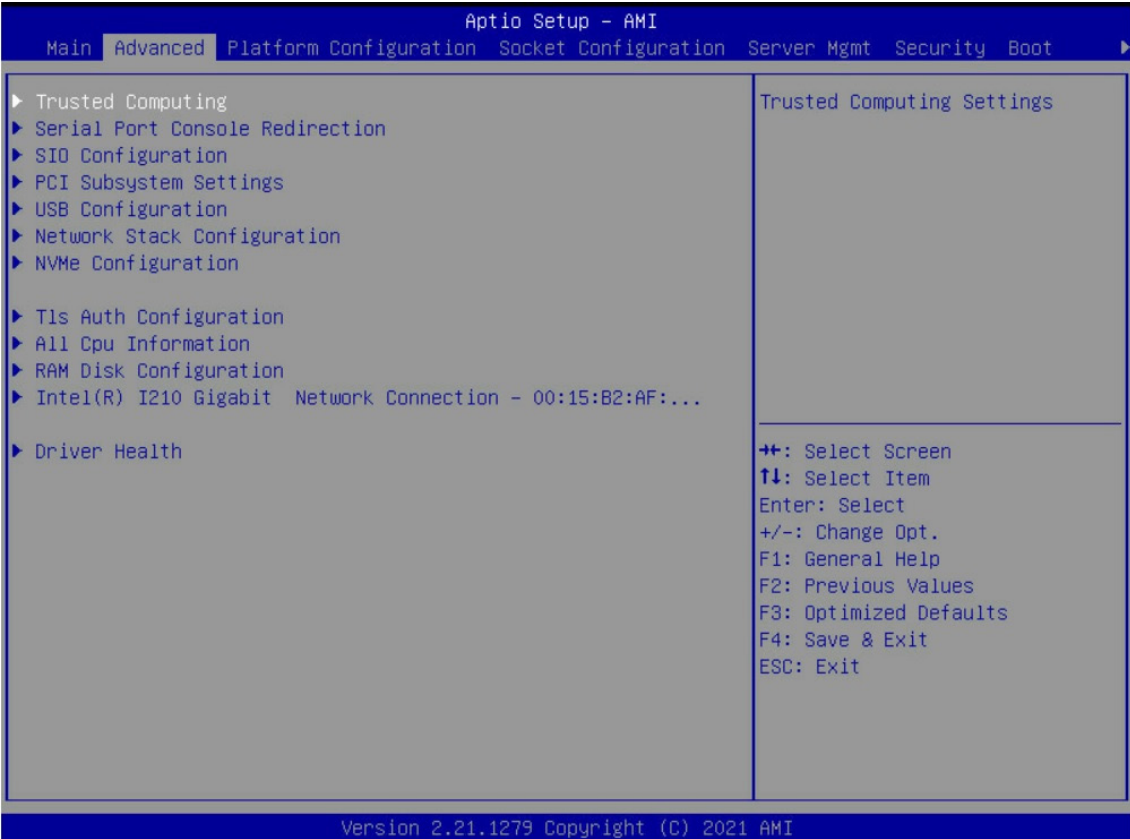

4.4.1 Trusted Computing

Trusted Computing Settings.

| Trusted Computing | |
|--------------------------------|--|
| Security Device Support | Enables/disables BIOS support for security device. Enable Disable |
| SHA-1/256/384 PCR Bank | Enables/disables SHA-1/SHA-256/SHA-384 PCR Bank. Enable Disable |
| Pending operation | Schedules an operation for the security device. NOTE: Your computer will reboot during restart in order to change the state of the security device. None TPM Clear |
| Platform Hierarchy | Enables/disables platform hierarchy. Enable Disable |
| Storage Hierarchy | Enables/disables storage hierarchy. Enable Disable |
| Endorsement Hierarchy | Enables/disables endorsement hierarchy. Enable Disable |
| TPM 2.0 UEFI Spec Version | Select the TCG2 spec version support. • TCG_1_2: The compatible mode for Win8/10. • TCG_2: Support new TCG2 protocol and event format for win10 or later. TCG_1_2 TCG_2 |
| Physical Presence Spec Version | Select to Tell O.S. to support PPI spec version 1.2 or 1.3. NOTE: Some HCK tests might not support 1.3. 1.2 1.3 |
| Device Select | • TPM 1.2: TPM 1.2 will restrict support to TPM 1.2 devices. • TPM 2.0: TPM 2.0 will restrict support to TPM 2.0 devices. • Auto: Auto will support both with the default set to TPM 2.0 devices if not found, TPM 1.2 devices will be enumerated. None TPM 1.2 TPM 2.0 |

4.4.2 Serial Port Console Redirection

Serial Port Console Redirection.

| Serial Port Console Redirection | | | |
|-------------------------------------|--|--|-------|
| Console Redirection | Enables/disables console redirection. | | |
| | Enable | Disable | |
| Legacy Console Redirection Settings | Redirection COM Port | Select a COM port to display redirection of Legacy OS and Legacy OPROM Messages. | |
| | | COM0 | COM1 |
| | Resolution | On Legacy OS, the number of rows and columns supported redirection. | |
| | | 80x24 | 80x25 |
| Redirect After POST | <ul style="list-style-type: none"> When Bootloader is selected, then Legacy Console Redirection is disabled before booting to legacy O.S. When Always Enable is selected, then Legacy Console Redirection is enabled for legacy O.S. | | |
| | Always Enable | Bootloader | |

4.4.3 SIO Configuration

SIO Configuration.

| SIO Configuration | | | | |
|--------------------------------|--|--|---------------------------------------|--|
| [*Active*] Serial Port 1/2/3/4 | Use this device | Enables/disables this logical device. | | |
| | | Enable | Disable | |
| | Possible | Allows the user to change the device user settings. New settings will be reflected on this setup page after system restarts. | | |
| | | Use Automatic Settings | IO=3F8h; IRQ=4: DMA; | IO=3F8h; IRQ=3, 4, 7, 10, 11, 12; DMA; |
| | IO=2F8h; IRQ=3, 4, 7, 10, 11, 12; DMA; | IO=3E8h; IRQ=3, 4, 7, 10, 11, 12; DMA; | IO=2E8h IRQ=3, 4, 7, 10, 11, 12; DMA; | |

4.4.4 PCI Subsystem Settings

PCI, PCI-X and PCI Express Settings.

| PCI Subsystem Settings | | | |
|------------------------|--|---------|--|
| Above 4G decoding | Enables/disables 64 bit capable devices to be decoded in above 4G address space (only if system supports 64 bit decoding). | | |
| | Enable | Disable | |
| SR-IOV Support | If system has SR-IOV capable PCIe devices, this option enables or disables Single Root IO Virtualization Support. | | |
| | Enable | Disable | |
| BME DMA Mitigation | Re-enable Bus Master Attribute disabled during PCI enumeration for PCI Bridges after SMM Locked. | | |
| | Enable | Disable | |

4.4.5 USB Configuration

USB Configuration Parameters.

| USB Configuration | | | | |
|--------------------------------|---|---------|--------|--------|
| XHCI Hand-off | This is a workaround for OSes without XHCI ownership change should be claimed by XHCI driver | | | |
| | Enable | Disable | | |
| SB Mass Storage Driver Storage | Enables/disables USB Mass Storage Driver Support | | | |
| | Enable | Disable | | |
| POST 60/64 Emulation | Enables I/O port 60h/64h emulation support. This should be enabled for the complete USB keyboard legacy support for non-USB aware OSes. | | | |
| | Enable | Disable | | |
| SB transfer time-out | The time-out value for control, bulk, and interrupt transfers. | | | |
| | 1 sec | 5 sec | 10 sec | 20 sec |
| Device reset time-out | USB mass storage device Start Unit command time-out. | | | |
| | 10 sec | 20 sec | 30 sec | 40 sec |

| | | | | | |
|-------------------------|--|--------|------------|-----------|--------|
| Device power-up delay | Maximum time the device will take before it properly reports itself to the host controller. • Auto: For a root port, it is 100 ms; for a hub port, the delay is taken from hub descriptor. | | | | |
| | Auto | | | Manual | |
| AMI Virtual CDROM0 1.00 | Mass storage device emulation type. • Auto: Enumerates devices according to their media format. Optical drives are emulated as "CDROM," drives with not media will be emulated according to drive type. | | | | |
| | Auto | Floppy | Forced FDD | Hard Disk | CD-ROM |
| AMI Virtual HDisk0 1.00 | Mass storage device emulation type. • Auto: Enumerates devices according to their media format. Optical drives are emulated as "CDROM," drives with not media will be emulated according to drive type. | | | | |
| | Auto | Floppy | Forced FDD | Hard Disk | CD-ROM |

4.4.6 Network Stack Configuration

Network Stack Settings.

| Network Stack Configuration | |
|-----------------------------|--------------------------------------|
| Network Stack | Enables/disables UEFI Network Stack. |
| | Enable Disable |

4.4.7 T1s Auth Configuration

Select T1s Auth Configuration.

| T1s Auth Configuration | | | |
|-------------------------|-----------------------|--------------------------|---------------------------|
| Server CA Configuration | Configures server CA. | | |
| | Enroll Cert | Enroll Cert Using File | Enroll Cert using file. |
| | | Commit Changes and Exit | Commit changes and exit. |
| | | Discard Changes and Exit | Discard changes and exit. |
| Delete Cert | | | |

4.4.8 RAM Disk Configuration

Adds/Removes RAM disks.

| RAM Disk Configuration | | | |
|-----------------------------|--|---|--|
| Disk Memory Type | Specifies type of memory to use from available memory pool in system to create a disk. | | |
| | Boot Service Data | | Reserved |
| Create Raw | Creates a raw RAM disk. | | |
| | Size (Hex) | The valid RAM disk size should be multiples of RAM disk block size. | |
| | | 1 | |
| | | Create & Exit | Creates a new RAM disk with the given starting and ending address. |
| Discard & Exit | | Discards and exits. | |
| Create from file | Creates a RAM disk from a given file. | | |
| RAM Disk 0 | Select to remove. | | |
| | Enable | | Disable |
| Remove selected RAM disk(s) | Removes selected RAM disk(s). | | |

4.4.9 Driver Health

Provides Health Status for the Drivers/Controllers.

| Driver Health | |
|---------------|--------------------------------------|
| Network Stack | Enables/disables UEFI Network Stack. |
| | Enable Disable |

| | | | | | | |
|-------------------------|-------------------------------|---|-------|-------------------|------|----|
| PCH SATA Configuration | Hot Plug | Designates this port as hot pluggable. | | | | |
| | | AHCI | | RAID | | |
| | Configure as eSATA | Configures port as external SATA (eSATA). | | | | |
| | | Enable | | Disable | | |
| | Mechanical Presence Switch | Controls reporting if this port has a mechanical presence switch. NOTE: Requires hardware support. | | | | |
| | | Enable | | Disable | | |
| PCH SATA Configuration | Spin Up Device | If enabled for any ports Staggered Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot. | | | | |
| | | Enable | | Disable | | |
| | SATA Device Type | Identify the SATA port is connected to solid state drive or hard disk drive. | | | | |
| | | Hard Disk Drive | | Solid State Drive | | |
| | SATA Topology | Identify the SATA topology if it is the default or ISATA or Flex or DirectConnect or M2. | | | | |
| | | Unknown | ISATA | Direct Connect | Flex | M2 |
| PCH sSATA Configuration | sSATA Controller | Enables/disables SATA controller. | | | | |
| | | Enable | | Disable | | |
| | Configure sSATA as | Identify the SATA port is connected to solid state drive or hard disk drive. | | | | |
| | AHCI | | RAID | | | |
| PCH sSATA Configuration | SATA test mode | Enables/disables SATA test mode. | | | | |
| | | Enable | | Disable | | |
| | SATA Mode options | SATA mode related options. | | | | |
| | SATA HDD Unlock | Enable: HDD password unlock is enabled in the OS. | | | | |
| | | Enable | | Disable | | |
| | SATA LED locate | If enabled LED/SGPIO hardware is attached. | | | | |
| | | Enable | | Disable | | |
| PCH sSATA Configuration | Support Aggressive Link Power | Enables/disables SALP. | | | | |
| | | Enable | | Disable | | |
| | sSATA Port 0-5 | Enables/disables SATA port. | | | | |
| | | Enable | | Disable | | |
| | Hot Plug | Designates this port as hot pluggable. | | | | |
| | | AHCI | | RAID | | |
| | Configure as eSATA | Configures port as external SATA (eSATA). | | | | |
| | | Enable | | Disable | | |
| | Mechanical Presence Switch | Controls reporting if this port has a mechanical presence switch. NOTE: Requires hardware support. | | | | |
| | | Enable | | Disable | | |
| PCH sSATA Configuration | Spin Up Device | If enabled for any ports Staggered Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot. | | | | |
| | | Enable | | Disable | | |
| | SATA Device Type | Identifies the SATA port is connected to solid state drive or hard disk drive. | | | | |
| | | Hard Disk Drive | | Solid State Drive | | |
| | SATA Topology | Identifies the SATA Topology if it is the default or ISATA or Flex or DirectConnect or M2. | | | | |
| | | Unknown | ISATA | Direct Connect | Flex | M2 |

| | | | | | | | | | | | | |
|--------------------------|-------------------------------------|--|-------|--------|--------|-----|---------|---------|---------|-----|-----|--|
| USB Configuration | USB Per-Connector Disable | Selectively enables/disables each of the USB physical connector (physical port). Once a connector is disabled, any USB devices plug into the connector will not be detected by BIOS or OS. | | | | | | | | | | |
| | | Enable | | | | | Disable | | | | | |
| | Wake On Usb Enable | Enables/disables support for XHCI Wake on USB on connect/disconnect. | | | | | | | | | | |
| | | Enable | | | | | Disable | | | | | |
| XHCI BAR below 4GB | | Enables to work around WSK12 KDUSB 64-bit BAR issue. | | | | | | | | | | |
| | | Enable | | | | | Disable | | | | | |
| ADR Configuration | Enable/Disable ADR | Enables/disables Automatic DIMM Refresh (ADR). This is not available if eADR is enabled since eADR requires ADR to be enabled. | | | | | | | | | | |
| | | Platform-POR | | | Enable | | | | Disable | | | |
| | ADR GPIO | Select between GPIO_B or GPIO_C. | | | | | | | | | | |
| | | GPIO B | | | | | GPIO C | | | | | |
| | Host Partition Reset ADR Enable | Enables/disables ADR on host partition reset. | | | | | | | | | | |
| | | Platform-POR | | | Enable | | | | Disable | | | |
| Enable/Disable ADR Timer | Held-off for debug purposed only. | | | | | | | | | | | |
| | Platform-POR | | | Enable | | | | Disable | | | | |
| ADR timer expire time | Select proper ADR timer value. | | | | | | | | | | | |
| | Platform-POR | 25 uS | 50 uS | 100 uS | 0 uS | | | | | | | |
| ADR timer multiplier | Select proper ADR timer multiplier. | | | | | | | | | | | |
| | Platform-PDR | x1 | x8 | x24 | x40 | x56 | x64 | x72 | x80 | x88 | x96 | |

4.5.2 Server ME Configuration

Configures ME Technology parameters.

| Server ME Configuration | |
|-------------------------|--|
| Altitude | The altitude of the platform location above the sea level, expressed in meters. The hex number is decoded as 2's complement signed integer. Provided the 8000h value if the altitude is unknown. 8000 |
| MCTP Bus Owner | MCTP bus owner location of PCIe: [15:8], [7:3] device, [2:0] function. If all zeros sending bus owner is disabled. 0 |

4.5.3 Server ME Debug Configuration

Server ME firmware debug parameters configuration.

| Server ME Debug Configuration | | |
|---------------------------------|---|--|
| Server ME General Configuration | Server ME basic features configuration. | |
| | ME Initialization Complete Timeout | This option defines how long BIOS waits for ME to initialize. 2 |
| | Enable HSIO Messaging | Enables/disables HSIO messaging. Enable Disable |
| | DRAM Init Done Enable | Enables/disables notifying ME about DRAM initialization. (It enables/disables UMA functionality.) Enable Disable |
| | DRAM Initialization Status | Overrides the DRAM initialization status value. Auto - true status 0 - Success 1 - No Memory in Channels 2 - Memory Init Error |
| | Host Reset Warning | Enables/disables sending Host Reset Warning to ME. Enable Disable |
| | Pre-DramInit Done ME Reset | When ME is in recovery because of internal error try to reset it. Enable Disable |
| | HMRFP0_LOCK Message | Enables/disables sending HMRFP0_LOCK message to ME. Enable Disable |

| | | |
|---------------------------------|-----------------------------------|--|
| Server ME General Configuration | HMRFP0_ENABLE Message | Enables/disables sending HMRFP0_ENABLE message to ME. Enable Disable |
| | END_OF_POST Message | Enables/disables sending END_OF_POST message to ME. Enable Disable |
| | REGION_SELECT Message | Enables/disables sending REGION_SELECT message to ME. Enable Disable |
| | CF9 global reset promotion | Enables/disables promoting CF9 reset to global. Enable Disable |
| | Global Reset Lock | Enables/disables locking the joint ME and host reset capability. Enable Disable |
| | HECI-1/2/3 Enable | Overrides HECU-1/2/3 status on PCI or let firmware decide based on ME type (auto). Auto Enable Disable |
| | IDEr Enable | Overrides IDEr status on PCI, or let firmware decide based on ME type (auto). Auto Enable Disable |
| | KT Enable | Overrides KT status on PCI, or let firmware decide based on ME type (auto). Auto Enable Disable |
| | HECI-1/2/3 Hide in ME | Enables sending request to ME to hide or disable HECI-1/2/3 on host PCI Off Hide Disable |
| | DOI3 Setting for HECI Disable | Setting this option disables setting DOI3 bit for all HECI devices. Enable Disable |
| | Break RTC Configuration | This is a test option which breaks RTC configuration. Enable Disable |
| | Core BIOS Done Message | Enables/disables Core BIOS Done message sent to ME. Enable Disable |
| | Delayed Authentication Mode (DAM) | Enables overriding the state of the Delayed Authentication Mode (DAM). Enable Disable |
| | Enable HECI Dump | Enables full HECI dumps in debug output. Enable Disable |
| NM Configuration | Boot Mode Override | Enables overriding the boot mode requested in NMFS. Enable Disable |
| | Cores Disable Override | Enables overriding the value of the number of cores to disable requested in NMFS register. Enable Disable |
| | Power Measurement Override | Overrides power measurement support status reported to ME. Enable Disable |
| | Hardware Change Override | Overrides hardware change detection status reported to ME. Enable Disable |
| | PTU Load Override | In MROM-less system force loading PTU regardless of ME request. Enable Disable |

4.5.4 Runtime Error Logging

To view or change the runtime error log configuration.

| Runtime Error Logging | |
|-----------------------|--|
| System Errors | System Error enable/disable setup options. Enable Disable |

4.6 Socket Configuration



4.6.1 Processor Configuration

Displays and provides option to change the Processor Settings.

| Processor Configuration | | |
|---------------------------------|--|------------------|
| Hyper- Threading [ALL] | Enables Hyper Threading (Software Method to enable/disable logical processor threads). | Enable / Disable |
| Legacy Agent | Legacy PECC agent in trust bit enable. | Enable / Disable |
| SMBus Agent | SMBus PECC agent in trust bit enable. | Enable / Disable |
| IE Agent | IE PECC agent in trust bit enable. | Enable / Disable |
| Generic Agent | Generic PECC agent in trust bit enable. | Enable / Disable |
| eSPI Agent | ESPI PECC agent in trust bit enable.- | Enable / Disable |
| DBP-F | The DBP-F can be turned off by writing into the (MSR 792h [5:6] for CLX, and MSR 6Dh [2:3] for ICX). | Enable / Disable |
| Lock Chipset | Locks or unlocks chipset. | Enable / Disable |
| MSR Lock Control | Enable: MSR 3Ah and CSR 80h will be locked. Power good reset is needed to remove lock bits. | Enable / Disable |
| PKG CST CONFIG CONTROL MSR Lock | Enable: MSR E2h will be locked. Power good reset is needed to remove lock bits. | Enable / Disable |
| Total Memory Encryption (TME) | Enables/disables Total memory Encryption (TME). | Enable / Disable |

4.6.2 Common RefCode Configuration

Displays and provides option to change the Common RefCode Settings.

| Common RefCode Configuration | | | | | | | | | | |
|------------------------------|---|------|------|--------|------|---------|---------|-----|------|-----|
| MMCFG Base | Select MMCFG base. | | | | | | | | | |
| | Auto | 1G | 1.5G | 1.75G | 2G | 2.5G | 3G | | | |
| MMCFG Size | Select MMCFG size. | | | | | | | | | |
| | Auto | 64M | 128M | 256M | 512M | 1G | 2G | | | |
| MMIO High Base | Select MMIO high base. | | | | | | | | | |
| | 3584T | 512G | 1T | 2T | 4T | 16T | 24T | 32T | 40T | 56T |
| MMIO High Granularity Size | Select the allocation size used to assign mmioh resources. Total mmioh space can be up to 32 x granularity. Per stack mmioh resource assignments are multiples of granularity where 1 unit per stack is the default allocation. | | | | | | | | | |
| | 1G | | 4G | | 16G | | 64G | | 256G | |
| Isoc Mode | Enables/disables Isoc. | | | | | | | | | |
| | Auto | | | Enable | | | Disable | | | |
| Numa | Enables/disables Non uniform Memory Access (Numa). | | | | | | | | | |
| | Enable | | | | | Disable | | | | |
| Virtual Numa | Divide physical NUMA nodes into evenly sized virtual NUMA nodes in ACPI table. This may improve Windows performance on CPUs with more than 64 logical processors. | | | | | | | | | |
| | Enable | | | | | Disable | | | | |

4.6.3 Memory Configuration

Displays and provides option to change Memory Settings.

| Memory Configuration | | | | |
|----------------------------|---|----------|-------------------------------|---------------------|
| Enforce POR | <ul style="list-style-type: none"> Enable: Enforces Plan Of Record restrictions for DDR4 frequency and voltage programming. Disable: Disables this feature and user if able to run at higher frequencies, specified in DDR frequency limit field (limited by processor support). Auto: Sets it to the MRC default setting. | | | |
| | POR | | Disable | |
| Enforce Population POR | Enables Memory Population POR Enforcement. Selecting Enforce Validated Populations will only allow populations that have been validated. | | | |
| | Enforce Supported Population | | Enforce Validated Populations | Disable Enforcement |
| PPR Type | Select Post Package Repair Type. | | | |
| | <ul style="list-style-type: none"> Auto: Sets it to the MRC default setting; current default is Soft PPR. | | | |
| Soft PPR | | Hard PPR | PPR Disable | |
| PPR Error Injection test | Enables/disables support for c-script err inj test. | | | |
| | Enable | | Disable | |
| Memory Frequency | Maximum Memory Frequency Selections in Mhz. If Enforce POR is disabled, user will be able to run at higher frequency than the memory support (limited by processor support). Do not select reserved. | | | |
| | Auto | | 1200~4800-OvrClk | |
| MRC Promote Warnings | Determines if warnings are promoted to system level. | | | |
| | Enable | | Disable | |
| Halt on mem Training Error | Halts on mem Training Error disable/enable. | | | |
| | Enable | | Disable | |
| Rank Switch Configuration | TA Floor enforces t_rrdr, t_rrdd minimum of 3; Rcven Ave attempts to match Rcven logic delay across ranks. | | | |
| | TA Floor | | Rcven Ave | Reserved |
| Enable ADR | Enables the detecting and enabling of ADR. This is not available if eADR is enabled since eADR requires ADR to be enabled. | | | |
| | Enable | | Disable | |
| Legacy ADR Mode | Enables/disables Legacy ADR mode. This is not available if eADR is enabled since eADR requires this mode to be enabled. | | | |
| | Enable | | Disable | |

| | | | | |
|----------------------------|--|-----|---------------------|---------|
| Minimum System Memory Size | Minimum memory size assigned as system memory when only JEDEC NVDIMMs are present. | | | |
| | 2GB | 4GB | 6GB | 8GB |
| NVDIMM Energy Policy | Sets the energy policy for NVDIMMs | | | |
| | Device-Managed | | Host-Managed | |
| ADR Data Save Mode | DATA Save mode for ADR. Batterybacked or Type 01 NVDIMM. | | | |
| | NVDIMMs | | Batterybacked DIMMs | Disable |
| Erase-Arm NVDIMMs | Enables/disables Erasing and Arming NVDIMMs. | | | |
| | Enable | | Disable | |
| Restore NVDIMMs | Enables/disables Automatic restoring of NVDIMMs. | | | |
| | Enable | | Disable | |
| Interleave NVDIMMs | Controls if NVDIMMs are interleaved together or not. | | | |
| | Enable | | Disable | |
| Memory Topology | Displays memory topology with DIMM population information. | | | |

4.6.4 IIO Configuration

Displays and provides option to change IIO Settings.

| IIO Configuration | | | | | | |
|----------------------------------|---|---|--|----------------|----------------|--|
| Socket0/1 Configuration | IOU0/1/2/3/4 (IIO PCIe Port 1/2/3/4/5) | Select PCIe port Bifurcation for selected slot (s). | | | | |
| | | Auto | x4x4x4x4 | x4x4x8 | | |
| | | x8x4x4 | x8x8 | x16 | | |
| | Sck0 RP Correctable Err | Applies to root ports only. Enable interrupt on a non-fatal error. | | | | |
| | | Yes | | No | | |
| | Sck0 RP Fatal Uncorrectable Err | Applies to root ports only. Enable MSI/INTx interrupt on fatal errors. | | | | |
| | | Yes | | No | | |
| | Port 0/DMI | Settings related to PCI Express Ports (0/1A/1B/1C/1D/2A/2B/2C/2D/3A/3B/3C/3D/4A/4B/4C/4D/5A/5B/5C/5D) | | | | |
| | Port 1A/2A/4A/5A | PCI-E Port | In auto mode, the BIOS will remove the EXP port if there is no device or errors on that device and the device is not HP capable. Enable/disable is used to enable/disable and expose/hide its CFG space. | | | |
| | | | Auto | Enable | Disable | |
| PCI-E Port Link Disable | | This option disables the link so that the no training occurs but the CFG space is still active. | | | | |
| | Yes | | No | | | |
| Link Speed | Choose link speed for this PCIe port. | | | | | |
| | Auto | Gen 1 (2.5 GT/s) | Gen 2 (5 GT/s) | Gen 3 (8 GT/s) | Gen 4 (16GT/s) | |
| IOAT Configuration | Sck0/1 IOAT Config | DNA | Select Dma enable/disable for each CB device. | | | |
| | | | Yes | | No | |
| | Disable TPH | No snoop | Enables/disables for each CB device. | | | |
| | | | Yes | | No | |
| | | TLP Processing Hint disable. | | | | |
| | Yes | | No | | | |
| Prioritize TPH | Prioritize TPH. | | Disable | | | |
| | Enable | | Disable | | | |
| Relaxed Ordering | Enables/disables Relaxed Ordering. | | | | | |
| | Yes | | No | | | |
| Intel VT for Directed I/O (VT-d) | Intel VT for Directed I/O | Enables/disables VT-d Interrupt Remapping support. | | | | |
| | | Enable | | Disable | | |
| DMA Control Opt-In Flag | Enables/disables DMA_CTRL_PLATFORM_OPT_IN_FLAG in DMAR table in ACPI. Not compatible with Direct Device Assignment (DDA). | | | | | |
| | | Enable | | Disable | | |

| | | | | |
|--|---|--|-------------------------------------|---------|
| Intel VT for Directed I/O (VT-d) | Interrupt Remapping | Enables/disables Interrupt Remapping support. | | |
| | | Auto | Enable | Disable |
| | X2APIC Opt Out | Enables/disables X2APIC_OPT_OUT bit. | | |
| | | Enable | Disable | |
| | Pre-boot DM Protection | Enables DMA Protection in Pre-boot environment (If DMAR table is installed in DXE and VTD_INFO is installed in PEI.) | | |
| | | Enable | Disable | |
| Intel VMD technology | Intel VMD for Volume Management Device on Socket 0/1 | Enable/disable VMD | Enables/disables VMD in this stack. | |
| | | Enable | Disable | |
| Intel AIC Retimer/AIC SSD Technology (non-VMD) | Intel AIC Retimer/AIC SSD on Socket 0/1 | A nonce Intel AIC Retimer/AIC SSD HW at Stack1 (Port 1A-1D). Override IOU0 bifurcation if required. | | |
| | | Enable | Disable | |
| Detected PCIe retimers | Socket 0/1 retimers configuration. | | | |
| PCIe Low Latency Retimers | Enables/disables PCIe low latency retimers. | | | |
| | Yes | No | | |
| Skip PCIe retimers detection | Skip PCIe retimers detection to speed up the boot. Retimers are present only in specific HW configurations. | | | |
| | Yes | No | | |

4.6.5 Advanced Power Management Configuration

Displays and provides to change the Power Management settings.


| Advanced Power Management Configuration | | | | |
|---|---|--|---------------------------|----------|
| CPU P State Control | P State Control Configuration Sun Menu, include Turbo, XE and etc. | | | |
| | Uncore Freq Scaling | If disabled, user can input Uncore Frequency. | | |
| | | Enable | Disable | |
| | AVX License Pre-Grant Override | If disabled, user can input Uncore Frequency. | | |
| | | Enable | Disable | |
| | SpeedStep (Pstates) | Enables/disables EIST (P-States). | | |
| | | Enable | Disable | |
| | AVX P1 | AVX P1 level selection. | | |
| | | Normal | Level 1 | Level 2 |
| | Dynamic SST-PP | Supports Dynamic SST-PP Select. NOTE: Disable: Static SST-PP can be displayed. | | |
| | | Enable | Disable | |
| | Intel SST-PP | Intel SST-PP Select allows user to choose from up to two additional base frequency conditions. | | |
| | | Base | Config 3 | Config 4 |
| | Activate SST-BF | This option allows SST-BF to be enabled. | | |
| | | Enable | Disable | |
| EIST PSD Function | Choose HW_ALL/SW_ALL in _PSD return. | | | |
| | HW_ALL | SW_ALL | | |
| Boot performance mode | Select the performance state that the BIOS will set before OS hand off. | | | |
| | Max Performance | Max Efficient | Set by Intel Node Manager | |
| Energy Efficient Turbo | Energy Efficient Turbo Disable, MSR 0x1FC [19] | | | |
| | Enable | Disable | | |
| Turbo Mode | Enables/disables processor Turbo Mode (requires EMTM enabled too.) | | | |
| | Enable | Disable | | |
| CPU Flex Ratio Override | Enables/disabled CPU Flex Ratio Programming. | | | |
| | Enable | Disable | | |
| GPSS timer | P-state change hysteresis time window. | | | |
| | 0 us | 50 us | 500 us | |

| | | | | | |
|---------------------------|--|--|------------------|------------------------------------|--------------------------|
| Hardware PM State Control | Hardware P-State setting. | | | | |
| | Hardware P-States | <ul style="list-style-type: none"> Disable: Hardware chooses a P-state based on OS Request (Legacy P-States). Native Mode: Hardware chooses a P-state based on OS guidance. Out of Band Mode: Hardware autonomously chooses a P-state (no OS guidance). | | | |
| | | Native Mode | Out of Band Mode | Native Mode with No Legacy Support | Disable |
| | HardwarePM Interrupt | Enables/disables Hardware PM Interrupt. | | | Disable |
| | EPP Enable | When disabled, HW masks EPP in CPUID [6],10 and uses EPB for EPP. | | | |
| | APS rocketing | Enables/disables the rocketing mechanism in the HWP p-state selection pcode algorithm. Rocketing enables the core ratio to jump to max turbo instantaneously as opposed to a smooth ramp up. | | | |
| | | Enable | | | Disable |
| Scalability | Enables/disables Core Performance to Frequency Scalability Based Optimizations in the CPU. | | | | |
| | Enable | | | Disable | |
| Native ASPN | <ul style="list-style-type: none"> Enable: OS Controlled ASPM. Disable: ASPM off. Auto: BIOS Controlled ASPM. | | | | |
| | Auto | Enable | | Disable | |
| CPU C State Control | CPU C State setting. | | | | |
| | Enable Monitor MWAIT | Allows Monitor and MWAIT instructions. | | | |
| | | Enable | | | Disable |
| | CPU C1 auto demotion | Allows CPU to automatically demote to C1. Takes effect after reboot. | | | |
| | | Enable | | | Disable |
| | CPU C1 auto undemotion | Allows CPU to automatically undemote to C1. Takes effect after reboot. | | | |
| | | Enable | | | Disable |
| CPU C6 report | Enables/disables CPU C6(ACPI C3) report to OS. | | | | |
| | Auto | Enable | Disable | | |
| Enhanced Halt State (C1E) | Core C1E auto promotion control. Takes effect after reboot. | | | | |
| | Enable | | | Disable | |
| OS ACPI Cx | Report CC3/CC6 to OS ACPI C2 or ACPI C3. | | | | |
| | ACPI C2 | | | ACPI C3 | |
| Package C State Control | Package C State setting. | | | | |
| | Package C State | Package C State limit. | | | |
| | | Auto | C0/C1 state | C2 state | C6 (non Retention) state |
| | Register Access Low Latency Mode | Enables lower latency mode for register accesses. NOTE: Enabling this mode will prevent PkgC6 as register access fabric is prevented from going into idle. | | | |
| | | Enable | | | Disable |
| | C2C3TT | Default = 0, means [Auto]. C2 to C3 Translation Timer, PPDN_INIT = 1:10:1:74 Bit [11:0]. | | | |
| 0 | | | | | |
| Dynamic L1 | PCU_MISC_CONFIG Bit [21] = dynamic L1 enable. | | | | |
| | Enable | | | Disable | |
| PKG C-state Lat. Neg. | MSR 1FCh Bit [30] = PCH_NEG_DISABLE. | | | | |
| | Enable | | | Disable | |

| | | | | | | |
|-------------------------|-------------------------------------|---|--|------------------------------|-------------------|-------------------|
| Package C State Control | LTR IIO Input | MSR 1FCh Bit [29] = LTR_IIO_DISABLE. Disable = Ignore IIO LTR input. | | | | |
| | | Take IIO LTR input | | Ignore IIO LTR input | | |
| | Latency Tolerance Requirement (LTR) | Program PCIE_IL TR_OVRD 1:30:1:0xFC Sub Menu. | | | | |
| | | PCIe LTR Override Control | Allows manual overrides for PCIE_IL TR_IVRD. | | | |
| | | | Enable | Disable | | |
| CPU Thermal Management | CPU T State Control | CPU Thermal Related setting. | | | | |
| | | Software Controlled T-States | Enables/disables Software Controlled T-States. | | | |
| | | | Enable | Disable | | |
| | PROCHOT Modes | When a processor thermal sensor trips (either core), the PROCHOT# will be driven. If bi-direction is enabled, external agents can drive PROCHOT# to throttle the processor. | | | | |
| | | Input-only | Both Input and Output | Output-only | Disable | |
| CPU- Advanced PM Tuning | Thermal Monitor | Enables/disables Thermal Monitor | | | | |
| | | Enable | | Disable | | |
| | Therm-Monitor-Status Filter | Enables Filter based therm_monitor_status(IA32_THERMAL_STATUS[0]) reporting. | | | | |
| | | Enable | | Disable | | |
| | PROCHOT RATIO | Controls the CPU response to an inbound platform assertion of xxPROCHOT# by capping to the programmed ratio. Default value 0 will allow ME to control this value. If ME does not set ratio, default 0 equates to Pn. A non-zero value will override ME setting. The min allowed ratio is defined by PLATFORM_INFO[MIN_OPERATING_RATIO]. | | | | |
| | 0 | Min=0, Max=57 | | | | |
| CPU- Advanced PM Tuning | TCC Activation Offset | Offset from factory set TCC activation temperature at which the Thermal Control Circuit must be activated. | | | | |
| | | 0 | Min=0, Max=58 | | | |
| | Energy Perf Bias | Setting Energy Per Bias Pwr_Ctl, PP0 Current SWL TD, SAPM etc. | | | | |
| | | | Energy Perf BIAS Sub Menu. | | | |
| | | | Power Performance Tuning | OS Controls EPB | BIOS Controls EPB | PECI Controls EPB |
| | | PECI PCS EPB | Controls whether Peci has control over EPB | | | |
| | | | OS controls EPB | PECI controls EPB using PCS. | | |
| Energy Perf Bias | Dynamic Loadline Switch | Dynamic Loadline Switch control. MSR 0x1FC[Bit24]. | | | | |
| | | Enable | | Disable | | |
| | Workload Configuration | This allows optimization for the workload characterization. The three options for selection. | | | | |
| | Balanced | | I/O sensitive | | | |
| Energy Perf Bias | Averaging Time Window | This is used to control the effective window of the average for C0 and P0 time. | | | | |
| | | 1A | | | | |

| | | | | |
|-------------------------|---|------------------------------|--|--|
| CPU- Advanced PM Tuning | Energy Perf Bias | P0 Total Time Threshold Low | The HW switching mechanism DISABLES the performance setting (0) when the total P0 time is less than this threshold. | |
| | | P0 Total Time Threshold High | The HW switching mechanism DISABLES the performance setting (0) when the total P0 time is greater than this threshold. | |
| | SAPM Control | Energy Perf BIAS Sub Menu. | | |
| | | Enable | Disable | |
| EET Mode | Coarse Grained Mode decides whether to grant user request turbo or P1. Fine Grained Mode decides how much turbo to be granted. More helpful with Scalability Enabled. | | | |
| | Coarse Grained Mode | Fine Grained Mode | | |

4.7 Server Mangement

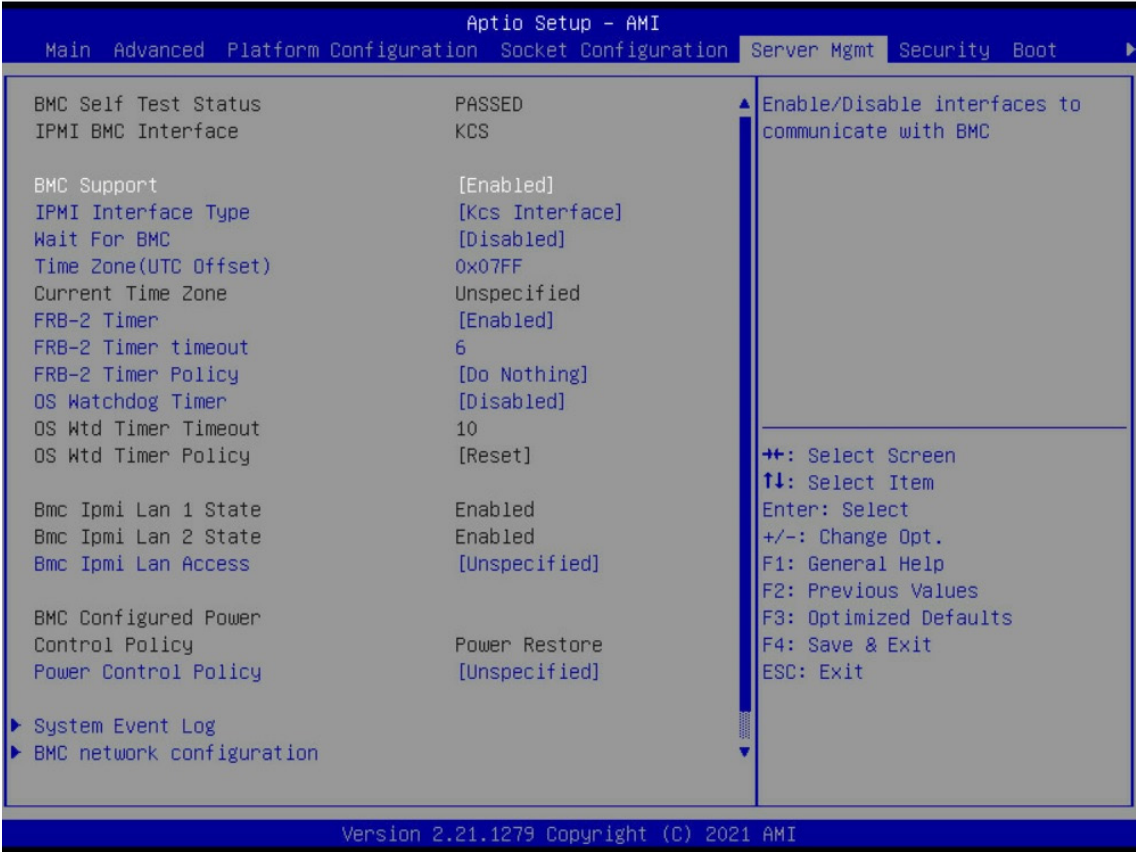

4.7.1 Processor Configuration

Displays and provides option to change the Processor Settings.

| Processor Configuration | |
|-------------------------|---|
| BMC Support | Enables/disables interfaces to communicate with BMC. Enable Disable |
| IPMI Interface Type | Type of Interface to communicate BMC from Host. Kcs Interface Bt Interface |
| Wait for BMC | Wait for BMC response for specified time out. In PILOTII, BMC starts at the same time when BIOS starts during AS power ON. It takes around 30 seconds to initialize Host to BMC interfaces. Enable Disable |
| Time Zone(UTC Offset) | Enter UTC Offset in hours. i.e. from -24:00 to +24:00. These values will be converted into minutes and programmed to BMC. Enter 0x07FF to consider BIOS time as local time. 0x07FF |
| FRB-2 Timer | Enables/disables FRB-2 timer (POST timer). Enable Disable |
| FRB-2 Timer timeout | Enter value between 1 to 30 minutes for FRB-2 Timer Expiration. 6 1-30 |
| FRB-2 Timer Policy | Configures how the system should respond if the FRB-2 Timer expires. Not available is FRB-2 Timer is disabled. Do nothing Reset Power Down Power Cycle |
| OS Watchdog Timer | If enabled, starts a BIOS timer which can only be shut off by Management Software after the OS loads. Helps determine that the OS successfully loaded or follows the OS Boot Watchdog Timer policy. Enable Disable |
| BMC IPMI LAN Access | Enables/disables BMC IPMI LAN. Enable Disable Unspecified |
| Power Control Policy | Configures how the system should respond if AC power is lost. Reset not required as selected power policy will be set in BMC when policy is saved. Do Not Power Up Last Power State Power Restore Unspecified |

4.7.2 System Event Log

Configures SEL event log.


| System Event Log | | | |
|----------------------|--|---------------------|----------------------|
| SEL Components | Change this to enable or disable event logging error/progress codes during boot. | | |
| | Enable | | Disable |
| Erase SEL | Choose options for erasing SEL. | | |
| | Yes, on next reset | Yes, on every reset | No |
| When SEL is Full | Choose options for reactions to full SEL. | | |
| | Do Nothing | Erase Immediately | Delete oldest Record |
| Log EFI Status Codes | Disables the logging of EFI Status Codes or log only error code or only progress code or both. | | |
| | Error code | Progress code | Both |

4.7.3 BMC Network Configuration

Configures BMC network parameters.


| BMC Network Configuration | | | |
|-------------------------------------|---|--------|------------------|
| Configuration Address source | Select to configure LAN channel parameters statically or dynamically (by BIOS or BMC). Unspecified option will not modify any BMC network parameters during BIOS phase. | | |
| | Enable | | Disable |
| IPv6 Support | Enables/disables LAN1 IPv6 Support | | |
| | Unspecified | Static | Dynamic BMC DHCP |
| Configuration Router LAN1/2 Address | Select to configure LAN channel parameters statically or dynamically (by BIOS or BMC). Unspecified option will not modify any BMC network parameters during BIOS phase. | | |
| | Unspecified | Static | Dynamic BMC DHCP |

4.8 Security

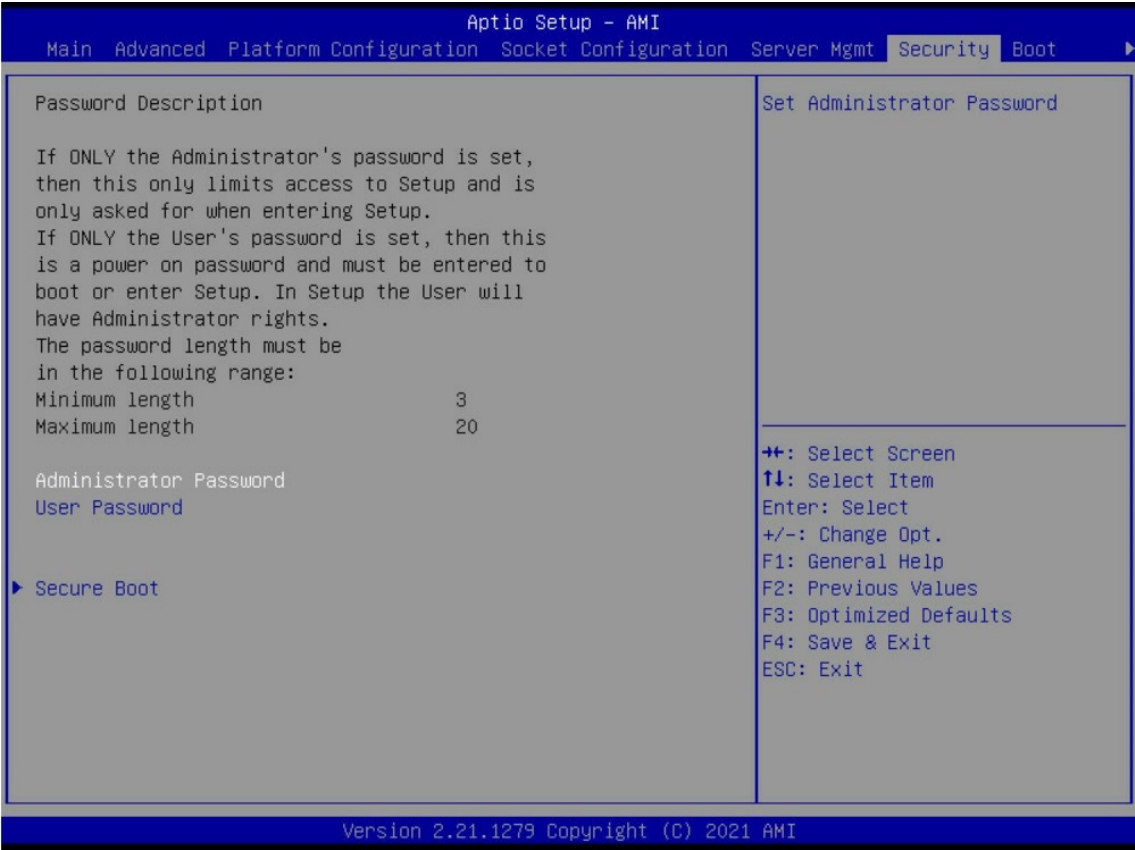


| Security | | |
|------------------------|-----------------------------|--|
| Administrator Password | Set administrator password. | |
| Set User Password | Create new password. | |
| Secure Boot | Secure boot configuration. | |
| | Secure Boot | Enable Disable |
| | Secure Boot Mode | Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication. |
| | | Standard Custom |

4.9 Boot

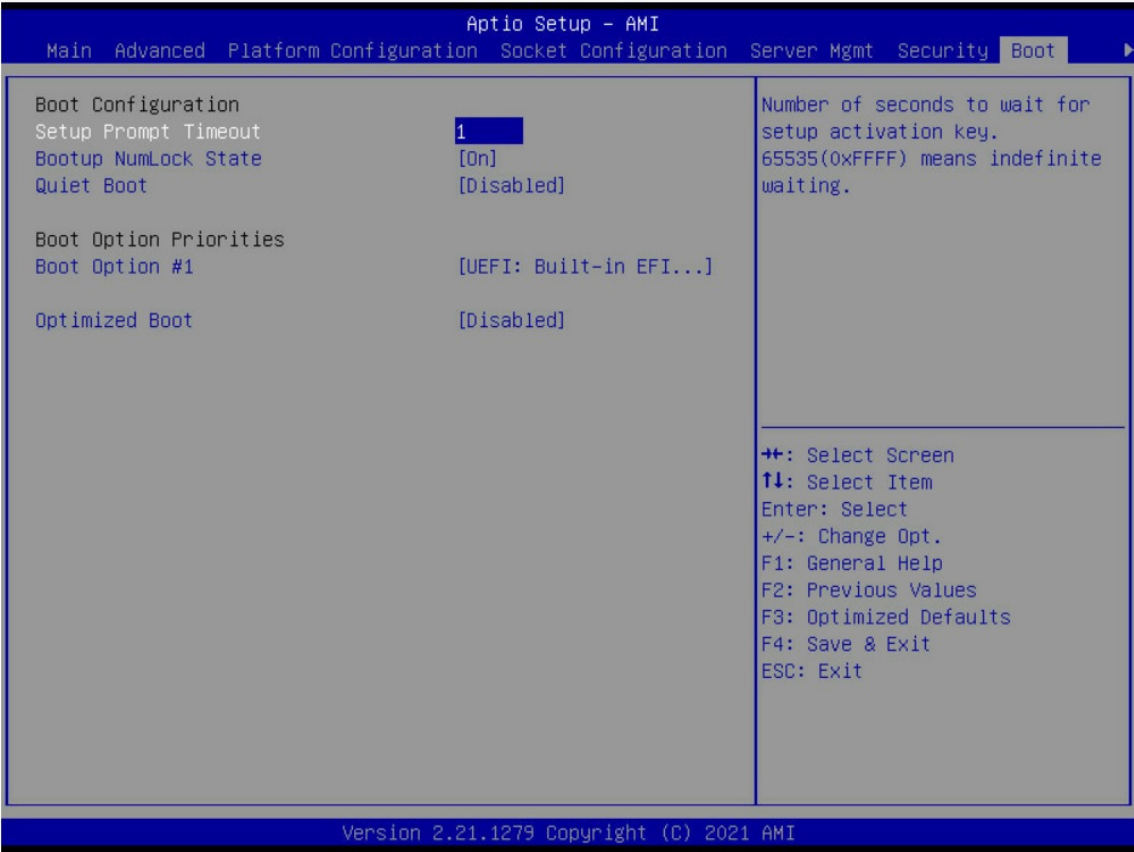

| Boot | |
|----------------------|---|
| Set Prompt Timeout | Number of seconds to wait for setup activation key. 65565 (0xFFFF) means indefinite waiting. On |
| Bootup Numlock State | Select the keyboard Numlock state. On Off |
| Quiet Boot | Enables/disables Quiet Boot option. Enable Disable |
| Boot Option #1 | Sets the system boot order. UEFI: Built-in EFI Shell Disable |
| Optimized Boot | Enables/disables Optimized Boot. Enabling Optimized Boot will disable Csm support and disable connecting Network devices to decrease boot time. While disabling Optimized Boot, make sure to restore Csm Support option to previous value before enabling Optimized Boot. Enable Disable |

4.10 Exit

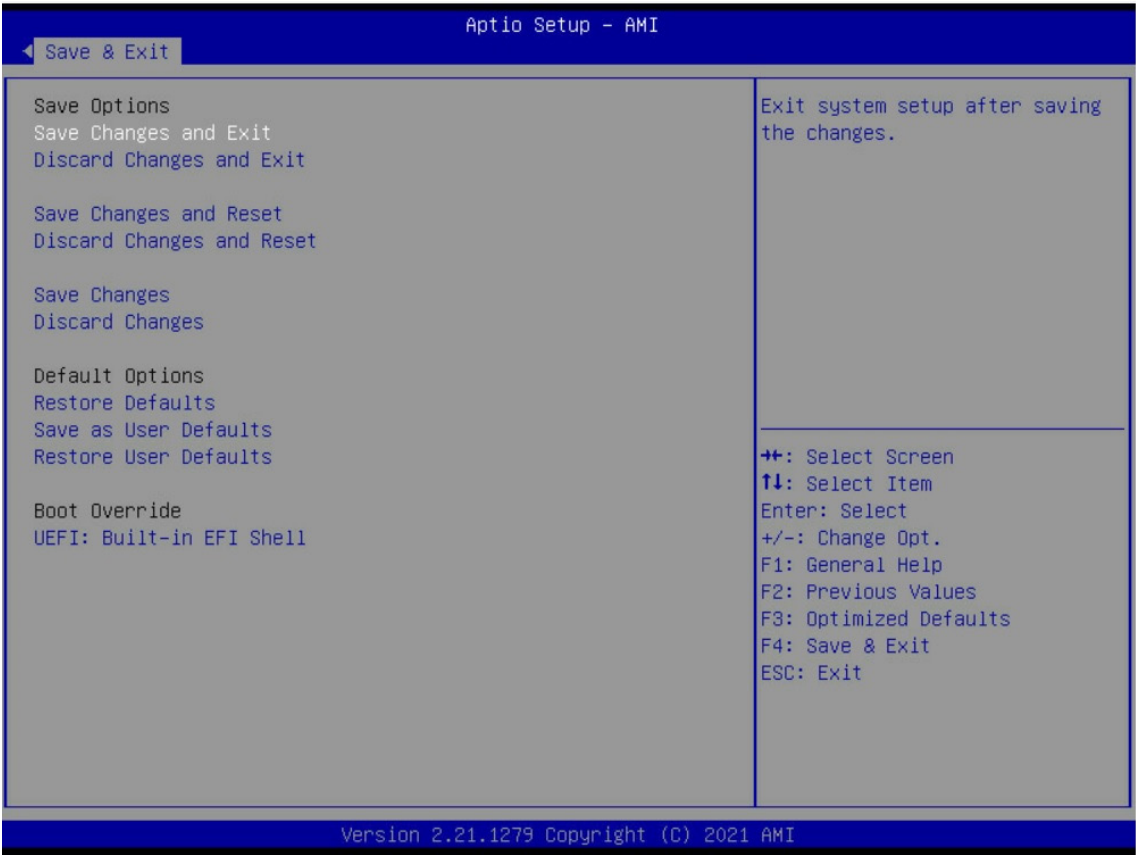

| Exit | |
|---------------------------|---|
| Save Change Without Exit | Save changes without exiting system setup. |
| Discard Changes and Exit | Exit system setup without saving any changes. |
| Save Changes and Reset | Reset the system after saving the changes. |
| Discard Changes and Reset | Reset system setup without saving any changes. |
| Save Changes | Save changes done so far to any of the setup options. |
| Discard Changes | Discard changes done so far to any of the setup options |
| Restore Defaults | Restore/load default values for all the setup options. |
| Save as User Defaults | Save the changes done so far as user defaults. |
| Restore User Defaults | Restore the user defaults to all the setup options. |

4.11 BIOS Update Process

This is the manual for updating BIOS on **Tucana** system. Please check current system BIOS version is **Tuct0010** or later. Here are the update procedures.

EFI:

1. Copy Tuct0010.bin to EFI folder
2. Copy EFI folder to USB stick or HDD
3. **Boot into internal** shell enters the usb EFI folder and executes the below command **Bios.nsh**
4. If the firmware update is complete, perform an AC power cycle.

Linux:

1. Copy Tuct0010.bin to AfuLnx64 folder
2. Copy AfuLnx64 folder to USB stick or HDD
3. Enter to AfuLnx64 folder and execute the below command./flash.sh
4. Reboot if complete the updated

**NOTE**

AFU FLASH Update may report change in ROM Layout. You can "F" to force the FLASH.

**NOTE**

Please refer to "**Bios Update Process.doc**" in bios release zip file for details.

Chapter 5. BMC Configuration Settings

5.1 Login




NOTE

For further details about the BMC, please refer to Tucana BMC Manual for reference. AIC® website link: <https://www.aicpc.com/en/productdetail/51337>.

The BMC default IP source is DHCP. The IP address can be configured in H2O IPMI configuration as demonstrated by the example below.

Step 1 Open the browser and then type in the BMC IP address.
IP address example: 192.168.22.108



Step 2 Use the default user name and password for first-time BMC WEB GUI login.

| | |
|-----------|---------|
| Field: | Default |
| UserName: | admin |
| Password: | admin |

AIC

Username

Password

US - English

Remember Username

Sign me in

[I forgot my password](#)



NOTE

The default user name and password are in lower-case characters. Users who login with the root user name and password will have full administrative power. The root password can be changed after login.


5.2 Web GUI

5.2.1 Menu Bar

The menu bar displays the following.


Firmware Information will be displayed with the latest version, date and time details. Power Control Status will be displayed as Host Online. To change the Power Control Status, click [Host Online](#) link.

- Dashboard
- Sensor
- System Inventory
- FRU Information
- Logs & Report
- Settings
- Remote Control
- Image Redirection
- Power Control
- Maintenance
- Sign out

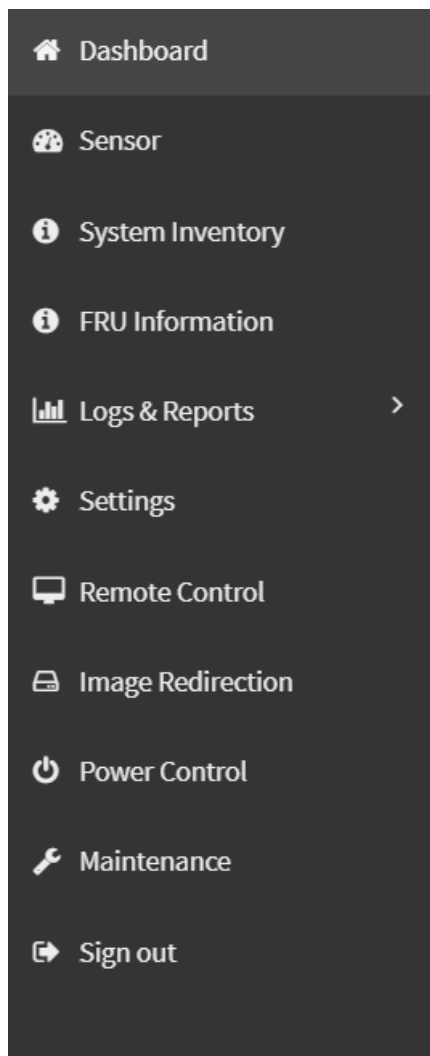

5.2.2 Dashboard

The Dashboard page gives the overall information about the status of a device. To open the Dashboard page, click **Dashboard** from the menu bar. A sample screenshot of the Dashboard page is shown below.

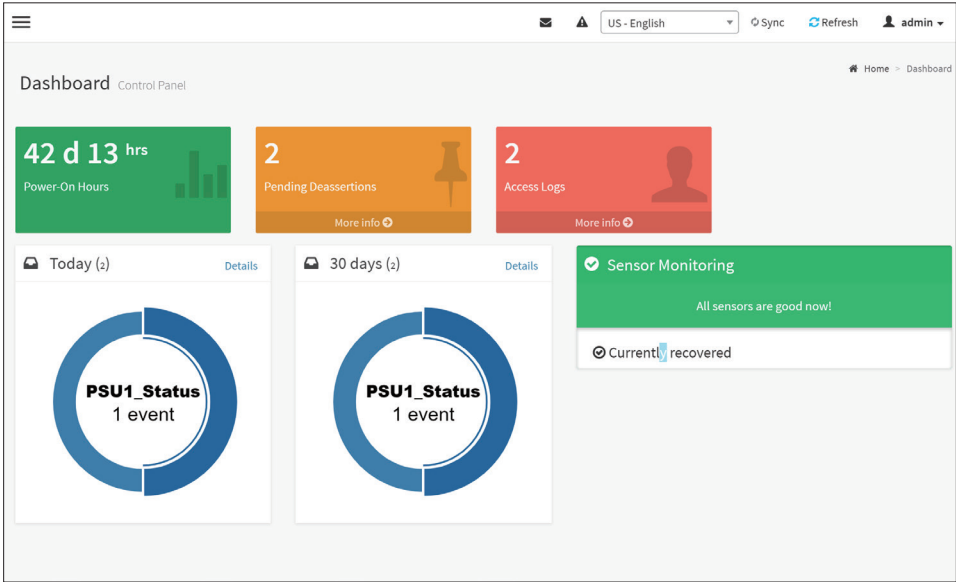


A brief description of the Dashboard page is given below.

- Language Selection
- BMC Power-On Hours
- Pending Deassertions
- Access Logs
- Today & 30 Days (Event Logs)
- Sensor Monitoring

5.2.3 Sensor

The Sensor Reading page displays all the sensor related information.

To open the Sensor Reading page, click [Sensor](#) from the menu. Click on any sensor to show more information about that particular sensor, including thresholds and a graphical representation of all associated events. A screenshot of Sensor Reading page is given below.

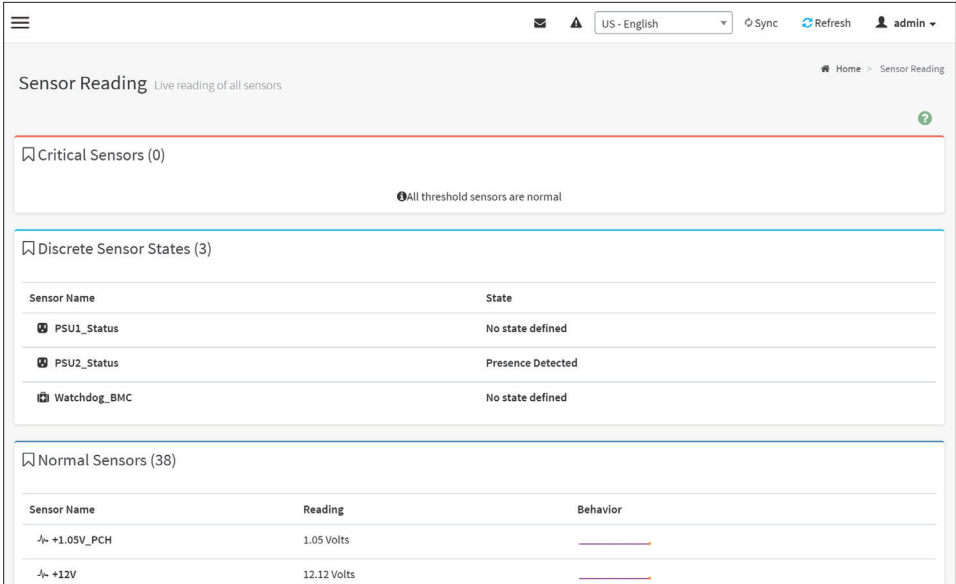


5.2.4 System Inventory

System Inventory page displays inventory information of host machine.

This page shows System, Processor, Memory Controller, Base Board, Power, Thermal, PCIE Devices, PCIE Function and Storage of host machine.

Click the tabs in the page to view details of each device. A screenshot of System Inventory page is given below.

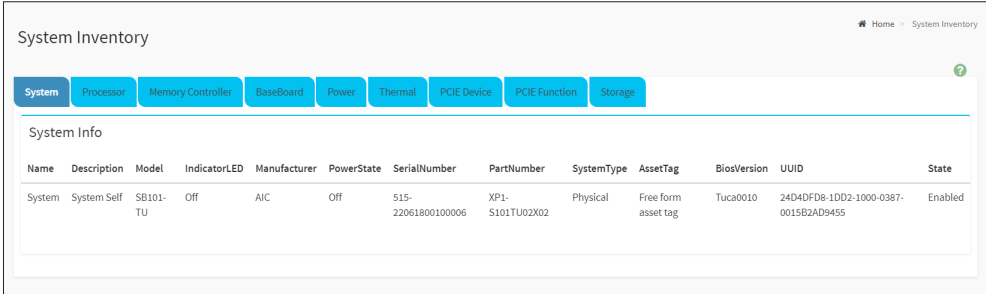

5.2.5 FRU Information

FRU Information page displays the BMC's FRU device information. FRU page shows information like Basic Information, Chassis Information, Board Information and Product Information of the FRU device.

To open the FRU Information page, click [FRU Information](#) from the menu bar. Select a FRU Device ID from the FRU Information section to view the details of the selected device. A screenshot of FRU Information page is given below.

The screenshot displays the FRU (Field Replacable Units) information page. At the top, there is a navigation bar with a hamburger menu, notification icons, a language dropdown set to 'US - English', and buttons for 'Sync', 'Refresh', and a user profile 'admin'. Below the navigation bar, the page title is 'FRU Field Replacable Units' with a home icon and 'FRU' breadcrumb. A search bar for 'Available FRU Devices' is present, with a dropdown menu showing '0' and a text field containing 'BMC_FRU'. The main content area is divided into three columns: Chassis Information, Board Information, and Product Information. Each column contains a table of attributes and values.

| Chassis Information | |
|---|---------------------|
| Chassis Information Area Format Version | 1 |
| Chassis Type | Main Server Chassis |
| Chassis Part Number | |
| Chassis Serial Number | |
| Chassis Extra | |

| Board Information | |
|---------------------------------------|--------------------------|
| Board Information Area Format Version | 1 |
| Language | 0 |
| Manufacture Date Time | Tue Sep 18 14:32:00 2018 |
| Board Manufacturer | AIC |
| Board Product Name | VIRGO |
| Board Serial Number | 35992-1837-00043 |
| Board Part Number | BMB-DP50002B |
| FRU File ID | |
| Board Extra | |


| Product Information | |
|---|---|
| Product Information Area Format Version | 1 |
| Language | 0 |
| Product Manufacturer | |
| Product Name | |
| Product Part Number | |
| Product Version | |
| Product Serial Number | |
| Asset Tag | |
| FRU File ID | |
| Product Extra | |

5.2.6 Log & Reports

The Logs & Reports page displays the following information.


- IPMI Event Log
- System Log
- Audit Log
- Video Log

A screenshot displaying the menu items under Logs & Reports is shown below.

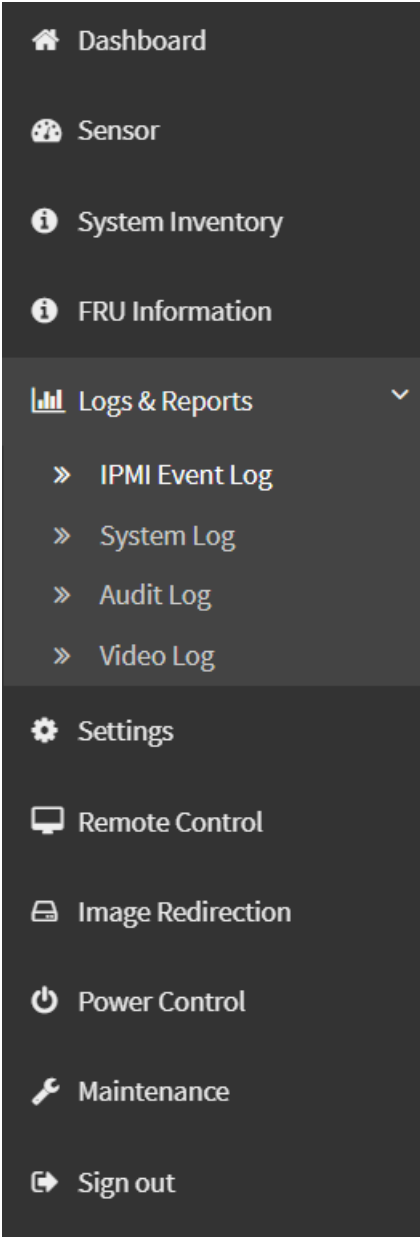

5.2.7 Settings

This group of pages allows you to access various configuration settings. A screenshot of Configuration Group menu is shown below.

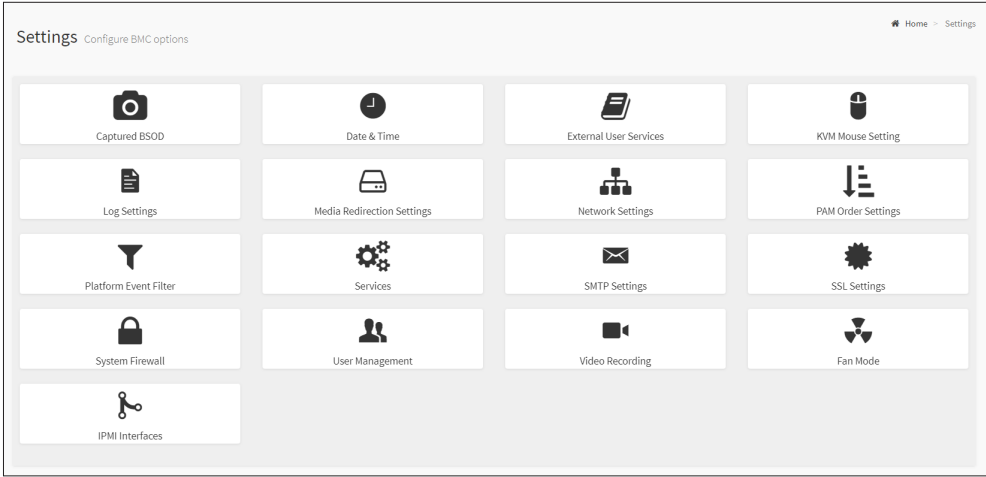


Configuration Group Menu

- Captured BSOD
- Date and Time
- External User services
- KVM Mouse Settings
- Log Settings
- Media Redirection Settings
- Network Settings
- PAM Order Settings
- Platform Event Filter
- Service
- SMTP Settings
- SSL Settings
- System Firewall
- User Management
- Video Recording
- Fan Mode
- IPMI Interfaces

5.2.8 Remote Control

The Remote Control page consists of the following options. A sample screenshot is displayed below.

- Launch H5Viewer
- Launch JViewer
- Launch Serial Over LAN

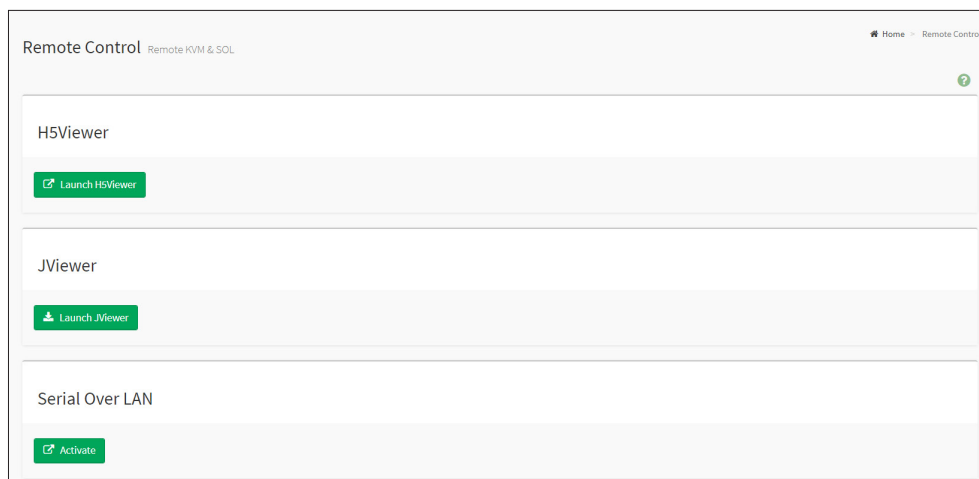

Launch H5Viewer

The system and browser requirements for Remote Control are given below.

System Requirements

- Client machine with 8GB RAM.
- If the client machine has 4GB RAM or lower, there will be lag in Video/Keyboard/Mouse/Media redirection functionality.

Supported Browsers

- Chrome latest version
- Firefox (with limited support)
- Microsoft Chromium-based Edge
- Safari (On Mac only)



NOTE

It is advisable to use Chrome or IE for H5Viewer, since Firefox has its own memory limitations.

In Microsoft Windows operating systems, IPv4 addresses are valid location identifiers in Uniform Naming Convention (UNC) path names. However, the colon ':' is an illegal character in a UNC path name. Thus, the use of IPv6 addresses is also illegal in UNC names.

For this reason, in IE browser the IPV6 address should be given in "Literal IPv6 addresses in UNC path names" format.


Example:

For web, 2001-db8-85a3-8d3-1319-8a2e-370-7348.ipv6-literal.net:85
 Where IP is 2001:db8:85a3:8d3:1319:8a2e:370:7348 and port is 85.

To open Remote Control page, click [Remote Control](#) from the menu bar.


A detailed description of the menu items are given below.

Open the Remote Control page, click [Launch H5Viewer](#). A sample screenshot of the Remote KVM page is shown below.

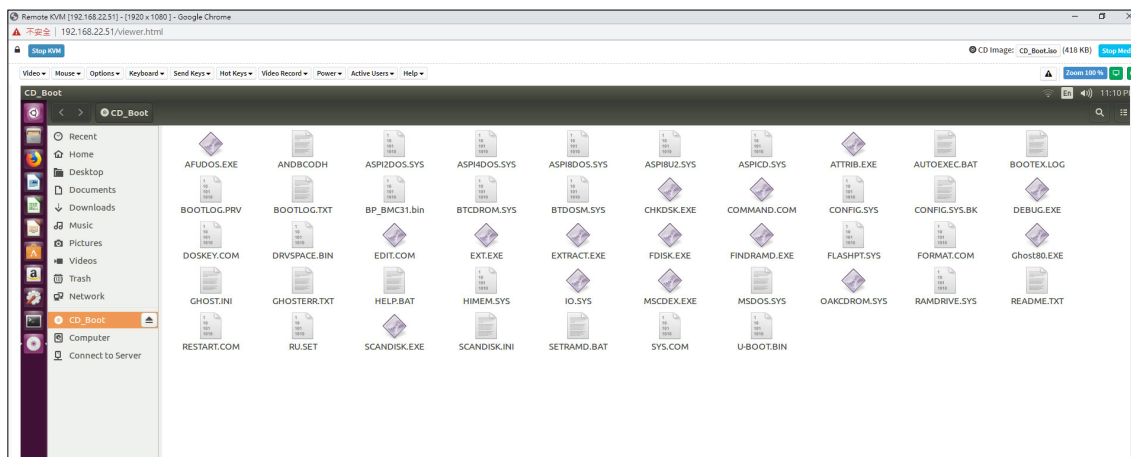

Procedure To Start KVM

1. Click [Launch H5Viewer](#) to open the Remote Control KVM page. A sample screenshot of the Remote KVM page is shown below.

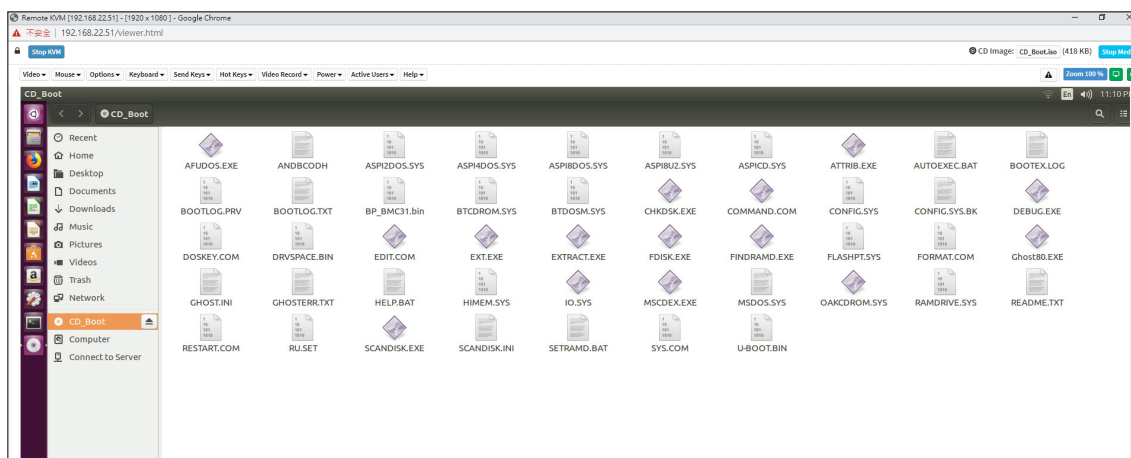

2. To stop the H5Viewer video redirection, click [Stop KVM](#).

Launch JViewer

This is an OS independent plug-in which can be used in Windows as well as Linux with the help of JRE. JRE should be installed in the client's system.

Activate Serial Over LAN


Activate Serial Over LAN.

Serial Over LAN (SOL) is a mechanism that enables the input and output of the serial port for a managed system to be redirected over IP; In this feature, Serial data is transmitted to HTML5 Web UI through websocket.

5.2.9 Images Redirection

This page is used to configure the images into BMC for redirection. This can be done either by uploading an image into BMC say, Local Media or by mounting the image from the remote system, Remote Media.

To open Images Redirection page, click [Images Redirection](#) from the menu bar. A sample screenshot of Images Redirection page is shown below.

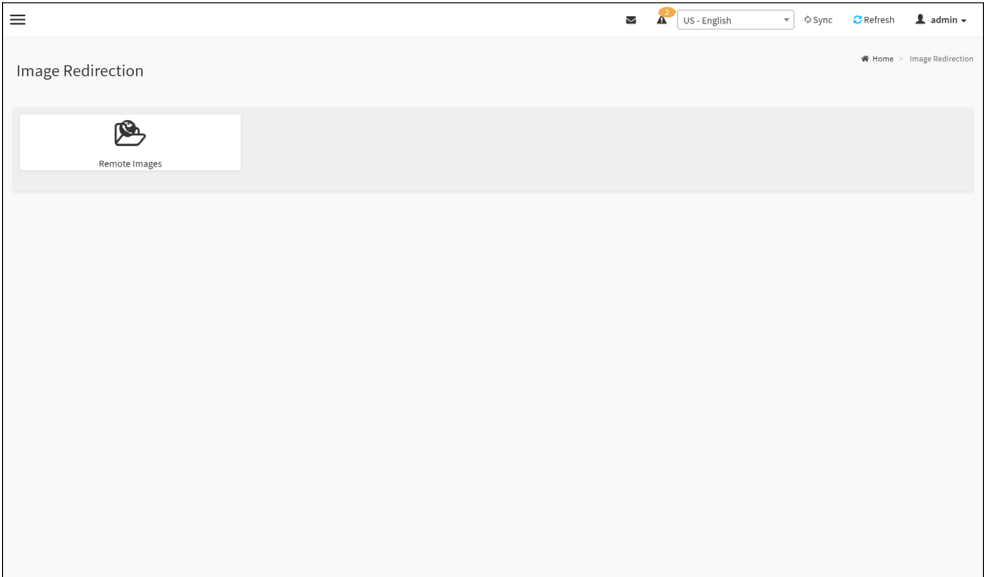

The fields of Images Redirection page are explained below.

- Remote Images


The displayed table shows configured images on BMC. You can configure images of the remote media server.

| Media Type | Media instance | Image Name | Redirection Status | Connected Server Session Index |
|------------|----------------|------------|--------------------|--------------------------------|
| CD/DVD | 0 | cdiso2.iso | N/A | |
| CD/DVD | 1 | cdiso2.iso | N/A | |
| CD/DVD | 2 | cdiso2.iso | N/A | |
| CD/DVD | 3 | cdiso2.iso | N/A | |
| Hard disk | 0 | rom.ima | N/A | |
| Hard disk | 1 | rom.ima | N/A | |
| Hard disk | 2 | rom.ima | N/A | |
| Hard disk | 3 | rom.ima | N/A | |

5.2.10 Power Control

This page allows you to view and control the power of your server.

To open Power Control, click [Power Control](#) from the menu bar. A sample screenshot of Power Control is shown below.

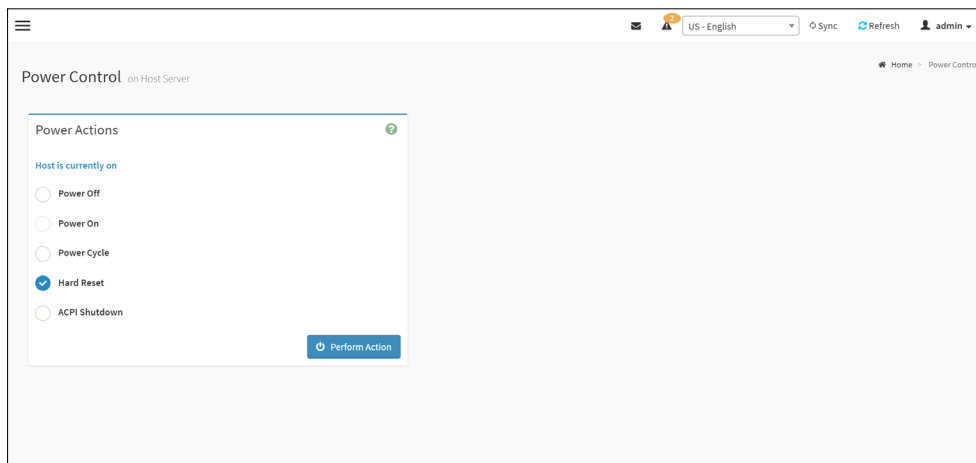

The various options of Power Control are given below.

Power Off: To immediately power off the server.

Power On: To power on the server.

Power Cycle: This option will first power off, and then reboot the system (cold boot).

Hard Reset: This option will reboot the system without powering off (warm boot).

ACPI Shutdown: This option to initiate operating system shutdown prior to the shutdown.

Perform Action: Click this option to perform the selected operation.

Procedure

Select an action and click [Perform Action](#) to proceed with the selected action.



NOTE


During Execution you will be asked to confirm your choice. Upon confirmation, you will be informed about the status after few minutes.

5.2.11 Maintenance Group

This group of pages allows you to do maintenance tasks on the device. The menu contains the following items:

- Backup Configuration
- BMC Recovery
- Firmware Image Location
- Firmware Information
- Firmware Update
- Preserve Configuration
- Restore Configuration
- Restore Factory Defaults
- System Administrator
- POST Code
- BMC Reset

A sample screenshot of Maintenance page is displayed below.

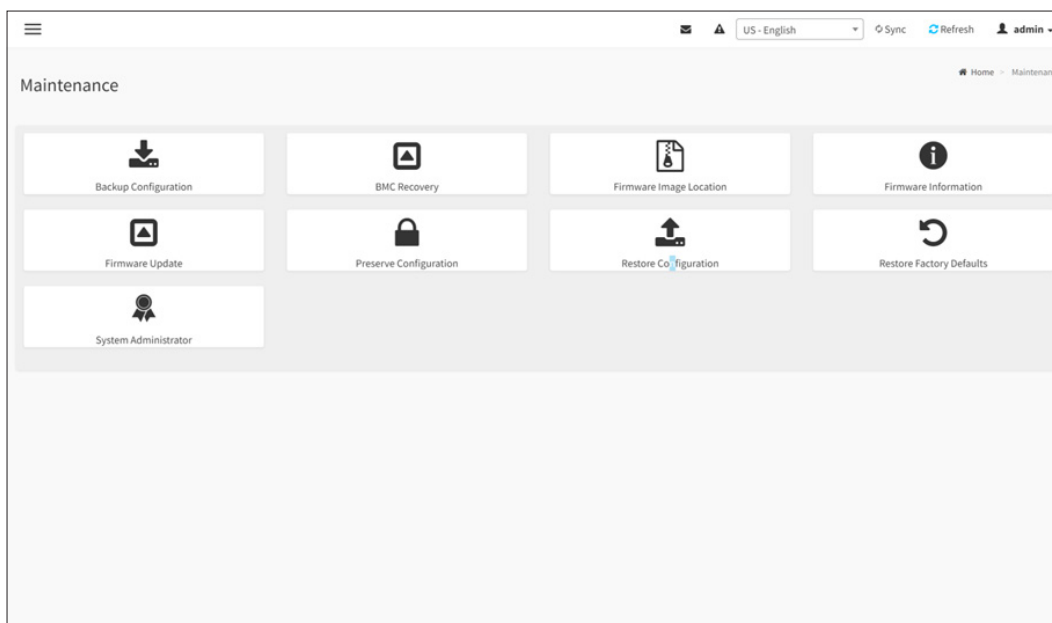

Maintenance

5.2.11.1 Firmware Update

This wizard takes you through the process of firmware upgradation. A reset of the box will automatically follow if the upgrade is completed or cancelled. An option to Preserve All Configuration is available. Enable it, if you wish to preserve configured settings through the upgrade.

Warning: Please note that after entering update mode widgets, other web pages and services will not work. All open widgets will be closed automatically. If upgrade process is cancelled in the middle of the wizard, the device will be reset.

NOTE

The firmware upgrade process is a crucial operation. Make sure that the chances of a power or connectivity loss are minimal when performing this operation.

Once you enter into Update Mode and choose to cancel the firmware flash operation, the MegaRAC® card must be reset. This means that you must close the Internet browser and log back onto the MegaRAC® card before you can perform any other types of operations.

Once Firmware upgrade using web is started, the regular IPMI command will not be allowed for safety concern if Enable IPMI Command handling during flashing support is disabled in project configuration.

To configure, choose [Firmware Image Location](#) under Maintenance. To open Firmware Update page, click [Maintenance](#) → [Firmware Update](#) from the menu bar.


Procedure

1. Click [Browse](#) to select firmware image.

NOTE


A file upload pop-up will be displayed for http/https but in the case of tftp files, the file is automatically uploaded displaying the status of upload.

2. Click [Start firmware update](#) to load the Firmware Update information. A sample screenshot is displayed below.

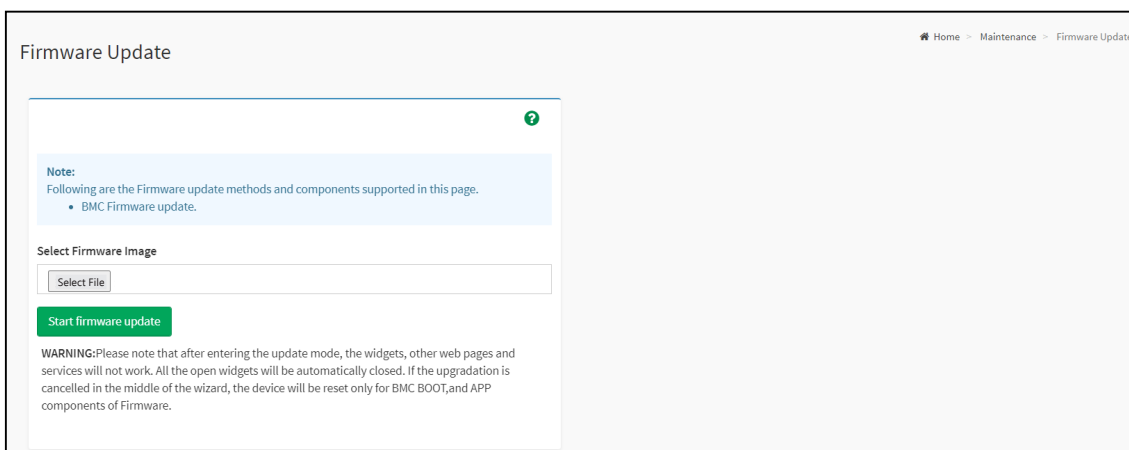

NOTE

SignImage Public Key is feature based option. If encrypted Signimage feature is enabled, then support to Upload a public.pem key info option will be available.

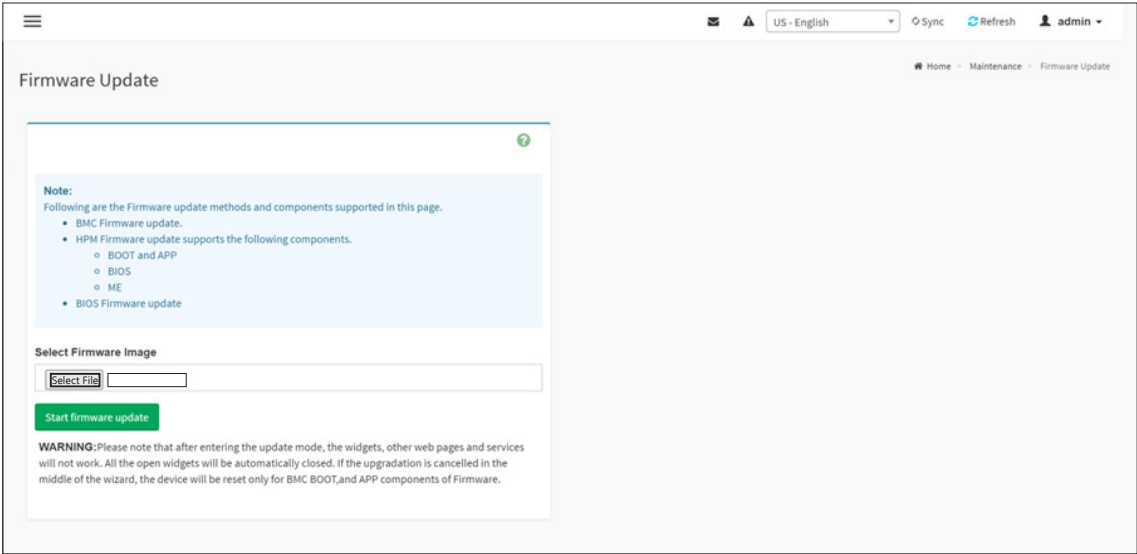


Firmware Update Page

- 3. Click **Preserve all Configuration** to preserve all configuration.
 - **Preserve all Configuration:** To preserve all configuration.
 - **Edit Preserve Configuration:** To modify the Preserve status settings.

This wizard takes you through the process of AMI based firmware upgradation. The protocol information to be used for firmware image transfer during this update is as follows.


NOTE
All configuration items will be preserved/overwrite as default during the restore configuration operation.

- 4. Click **Proceed to Flash**, it will prompt you with the warning message. Click **Ok** to start the Firmware update.

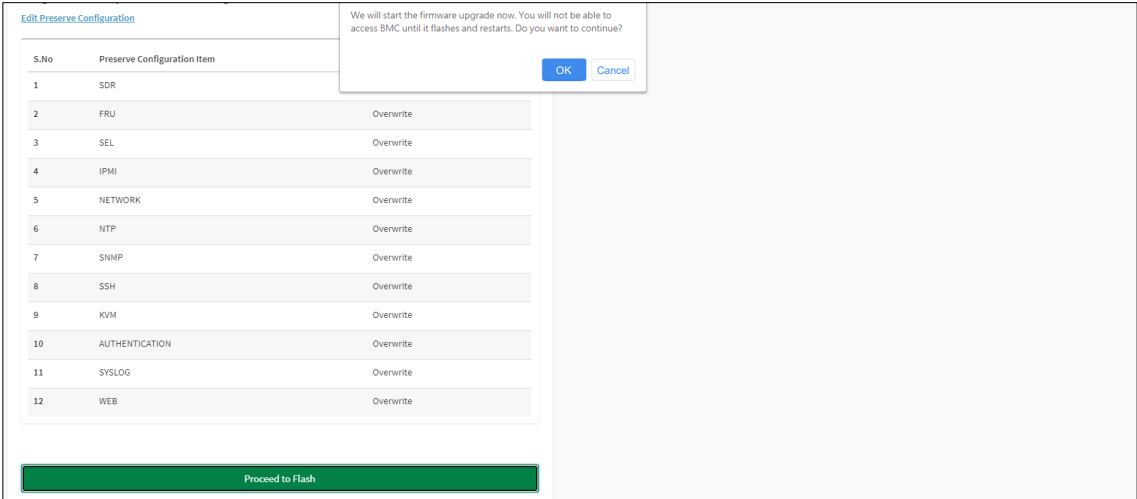

- 5. The Firmware update undergoes the following steps:
 - a. Closing all active client requests
 - b. Preparing Device for Firmware Upgrade
 - c. Uploading Firmware Image.

A sample screenshot is shown as below.

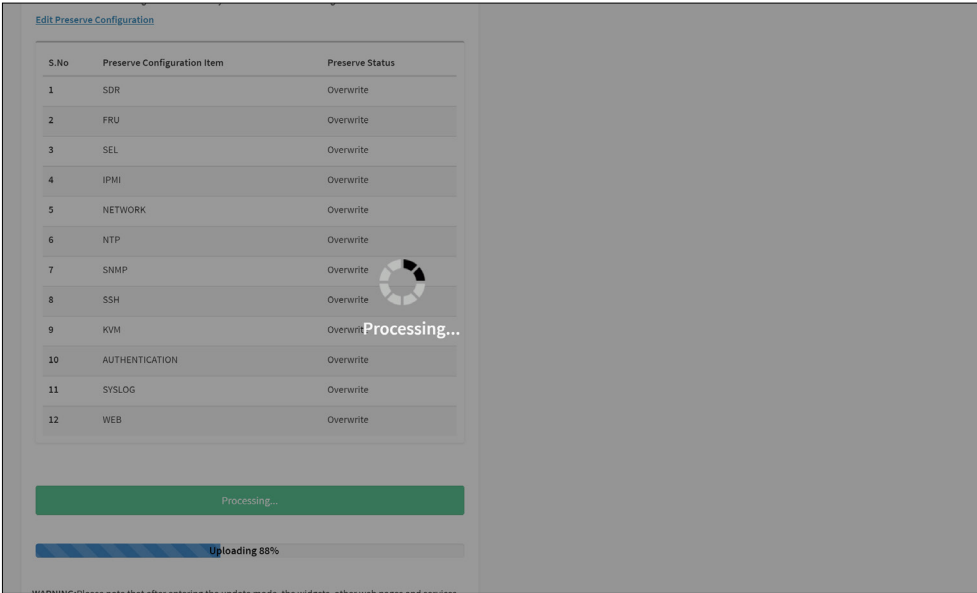

d. Verifying Firmware Image

In Section Based Firmware Update, you can configure the firmware image for section based flashing. Check the required sections and click **Proceed** to update the firmware.

If flashing is required for all images, select the option Full Flash .

If you select Version Compare Flash option from web, the current and uploaded module versions, FMHlocation, size will be compared.

If the modules differ in size and location, proceed with force firmware upgrade.

If all the module versions are same, restart BMC by saying all the module versions are similar.

If only few module versions are differ, those module will be flashed.

NOTE

Only selected sections of the firmware will be updated. Other sections are skipped. Before starting flash operation, you are advised to verify the compatibility between image sections.

Firmware Update
Home > Maintenance > Firmware Update

Note:
Following are the Firmware update methods and components supported in this page.

- BMC Firmware update.

Select Firmware Image

Select File
VIRGN_0102022.img

Start firmware update

Protocol Type: HTTPS

Preserve all Configuration. This will preserve all the configuration settings during the firmware update - irrespective of the individual items marked as preserve/overwrite in the table below.

All configuration items below will be preserved as default during the restore configuration operation. Click "Edit Preserve Configuration" to modify the Preserve status settings.

[Edit Preserve Configuration](#)

| S.No | Preserve Configuration Item | Preserve Status |
|------|-----------------------------|-----------------|
| 1 | SDR | Overwrite |
| 2 | FRU | Overwrite |
| 3 | SEL | Overwrite |
| 4 | IPMI | Preserve |
| 5 | NETWORK | Preserve |
| 6 | NTP | Overwrite |
| 7 | SNMP | Overwrite |
| 8 | SSH | Overwrite |
| 9 | KVM | Overwrite |
| 10 | AUTHENTICATION | Overwrite |
| 11 | SYSLOG | Overwrite |
| 12 | WEB | Overwrite |

Firmware Update
Current Image Version: 1.02.02 | New Image Version: 1.02.02

The firmware image has been verified. The uploaded image appears to be the same as the existing device firmware.


Version Compare Flash
 Full Flash

Flash to Proceed

Uploading 100%

WARNING: Please note that after entering the update mode, the widgets, other web pages and services will not work. All the open widgets will be automatically closed. If the upgradation is cancelled in the middle of the wizard, the device will be reset only for BMC BOOT, and APP components of Firmware.

- e. Flashing Firmware Image
- f. Resetting the image. The sample screenshot of Firmware update is as shown below.

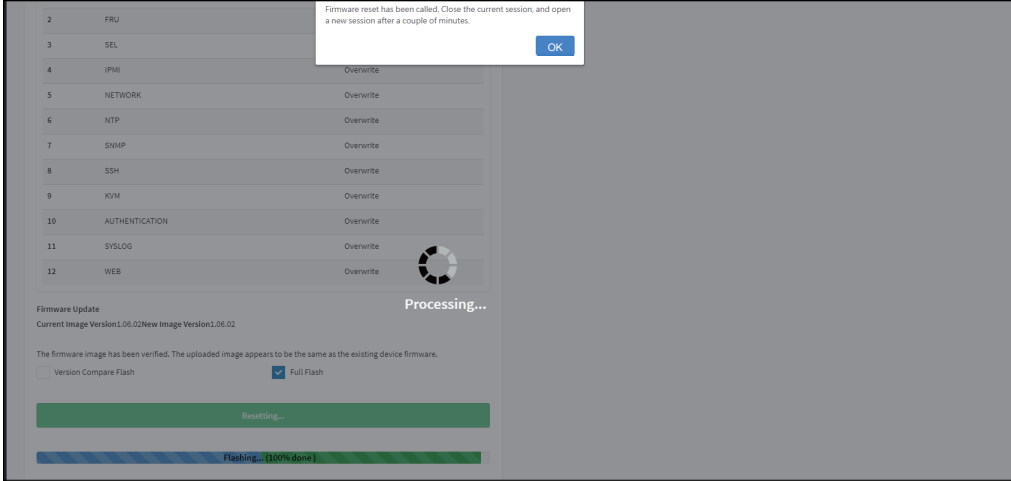


NOTE
The Firmware Update page will be disabled and you will not be able to perform any other tasks until firmware upgrade is completed and the device is rebooted. You can now follow the instructions presented in the subsequent pages to successfully update the card's firmware. The device will reset if update is canceled. The device will also reset upon successful completion of firmware update.

5.2.11.2 BIOS Firmware Update

This wizard takes you through the process of host BIOS firmware upgradation. A screenshot of BIOS Firmware Update is as shown below.

To perform BIOS Firmware Update operation, click [Maintenance](#) → [Firmware Update](#) from the menu bar. A sample screenshot is displayed below.

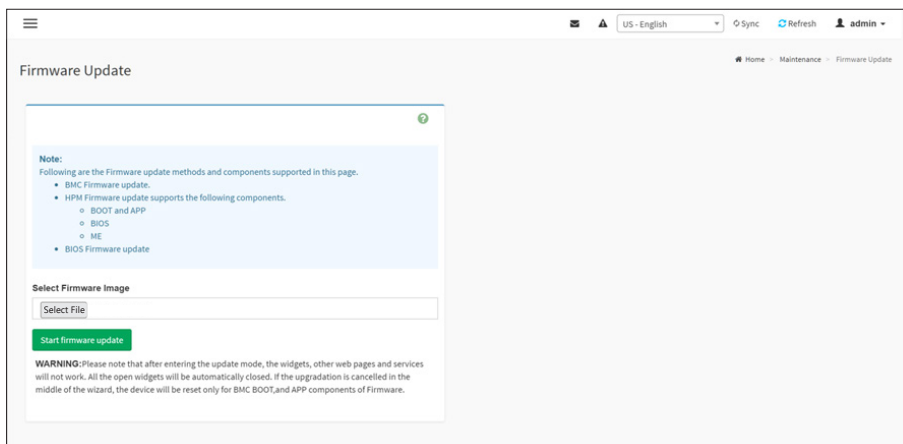

BIOS Firmware Update


Procedure

1. Click [Browse](#) to select BIOS Firmware image.

NOTE


Firmware update wizard will detect .bin extension as BIOS firmware image.

2. Click [Start Firmware Update](#) to load the BIOS firmware image information. A sample screenshot is displayed below.

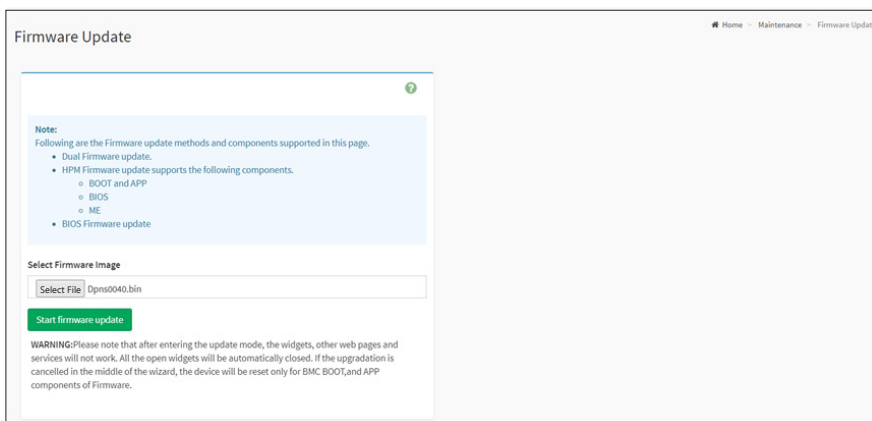


NOTE

Once you enter Firmware update page, an alert message will pop up if the system is on. The wizard will activate the update process after the user powers off the system.

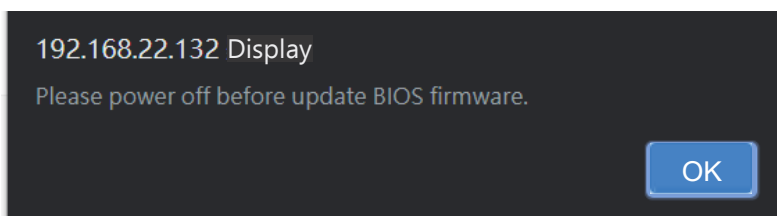

Firmware Update Home -> Maintenance -> Firmware Update



Note:
Following are the Firmware update methods and components supported in this page.

- Dual Firmware update.
- HPM Firmware update supports the following components.
 - BOOT and APP
 - BIOS
 - ME
- BIOS Firmware update


Select Firmware Image

Dpns0040.bin

WARNING:Please note that after entering the update mode, the widgets, other web pages and services will not work. All the open widgets will be automatically closed. If the upgradation is cancelled in the middle of the wizard, the device will be reset only for BMC BOOT, and APP components of Firmware.

- 3. Click **Proceed**, it will prompt you with the warning message. Click **OK** to start the firmware update.
- 4. The BIOS Firmware Update undergoes the below steps.
 - a. Uploading Firmware Image
 - b. Getting BIOS existing and uploaded versions (BIOS Tag)
 - c. Flashing Firmware Image


A sample screenshot is displayed below.

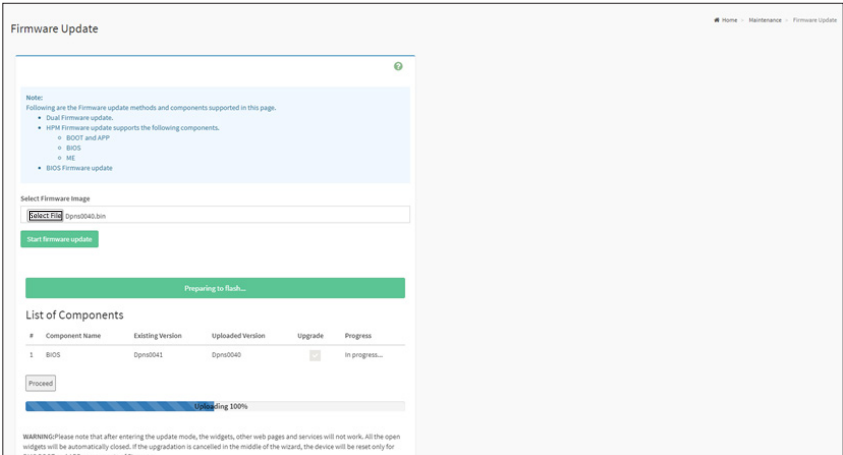

BIOS Image Flashing

NOTE
The BIOS Firmware Update page will be disabled and this action will not allow the user to perform any other tasks until firmware upgrade is completed.


- 5. Once the BIOS firmware update is completed, it will prompt you with the success message. Click **OK** to complete the process. A sample screenshot is displayed below.

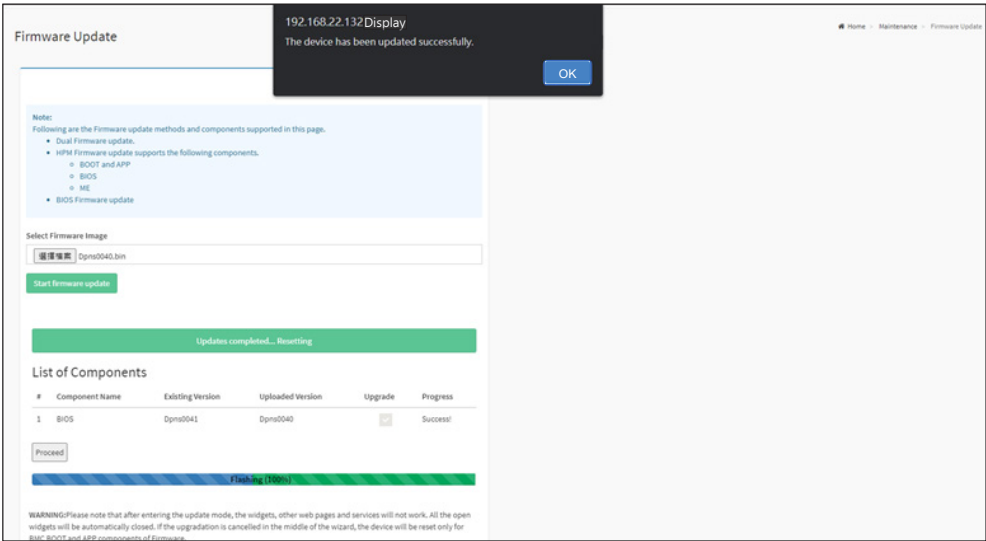

BIOS Firmware Update Success Message

5.2.12 Sign Out

To log out from, click the [admin](#) on the top right corner of the screen. A sample screenshot of admin option is shown below.

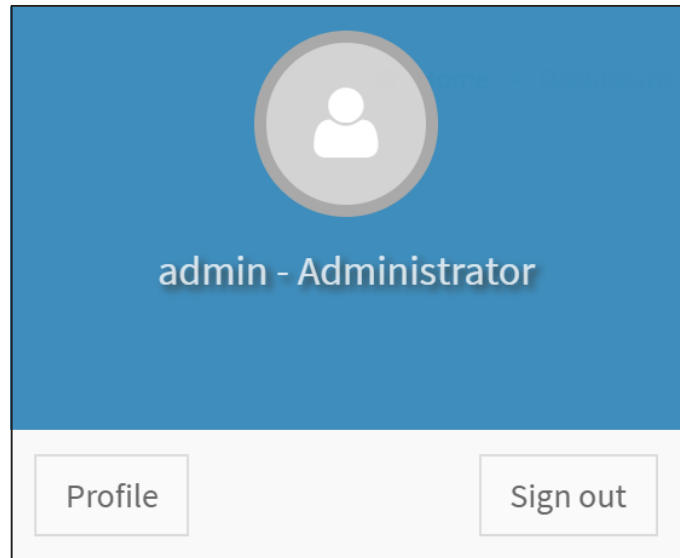

Click [Sign Out](#) to perform log out. A Warning message will be prompted you to proceed further, click [OK](#) to log out or [Cancel](#) to retain the interface.

Chapter 6. Technical Support



www.aicipc.com

Taiwan, Global Headquarters

Address: No. 152, Section 4,
Linghang N. Rd, Dayuan District,
Taoyuan City 337, Taiwan
Tel: +886-3-433-9188
Fax: +886-3-287-1818
Sales Email: sales@aicipc.com.tw
Support Email: support@aicipc.com

Shanghai, China

Address: Room 215, Building 4, No.471
Guiping Road, Xuhui District,
Shanghai City, 200233 China
Tel: +86-21-54961421
Sales Email: sales@aicipc.com.cn
Support Email: support@aicipc.com

Moscow, Russia

Address: No. 500, 5th Floor, 5th Entrance,
32A, Khoroshevskoye Shosse, Moscow,
123007
Tel: +7-4997019998A
Sales Email: support-ru@aicipc.com.tw
Support Email: rma.russia@aicipc.com.tw

North California, United States

Address: 48531 Warm Springs
Boulevard Suite 404 Fremont, CA
94539, United States
Tel: +1-510-573-6730
Sales Email: sales@aicipc.com
Support Email: support@aicipc.com

South California, United States

Address: 21808 Garcia Lane
City of Industry, CA 91789,
United States
Toll free: + 1-866-800-0056
Tel: +1-909-895-8989
Fax: + 1-909-895-8999
Sales Email: sales@aicipc.com
Support Email: support@aicipc.com

New Jersey, United States

Address: 322 Route 46 West Suite 100
Parsippany, NJ 07054 United States
Tel: +1-973-884-8886
Fax: +1-973-884-4794
Sales Email: sales@aicipc.com
Support Email: support@aicipc.com

Houten, The Netherlands

Address: Peppelkade 58, 3992AK, Houten,
The Netherlands
Tel: +31-30-6386789
Fax: +31-30-6360638
Sales Email: sales@aicipc.nl
Support Email: support@aicipc.com

For additional technical support or questions about trouble shooting, please contact the AIC® representative nearest to you or visit our AIC® website for more information.
AIC® website: <https://www.aicipc.com/en/faq>.