



# Libra

Server MotherBoard

User Manual

# Contents

<b>Contents</b> .....	0
<b>Safety Information</b> .....	2
<b>About This User Manual</b> .....	3
<b>Chapter 1</b> .....	4
1.1 General Information .....	4
1.2 Specifications .....	4
<b>Chapter 2</b> .....	6
2.1 Central Processing Unit (CPU).....	6
2.2 System Memory .....	9
<b>Chapter 3</b> .....	13
3.1 Motherboard block diagram .....	13
3.2 Motherboard Layout.....	14
3.3 Motherboard Content List .....	15
3.4 Internal Connectors/Jumpers .....	16
<b>Chapter 4</b> .....	29
4.1 Updating BIOS .....	31
<b>Chapter 5</b> .....	33
5.1 Method 1 (Use the BIOS setup).....	33
5.2 Method 2 (Use a Dos tool - Syscheck).....	36
5.3 Connect to BMC .....	38
5.4 Updating BMC Firmware .....	42
<b>Chapter 6</b> .....	43

# Safety Information

When installing, operating, or performing maintenance on this equipment, basic safety precautions, as listed below, should always be followed to reduce the risk of fire, electric shock, and personal injuries.

- Read and understand all instructions.
- Observe warnings and instructions marked on the product.
- For proper mounting instructions, please consult the User's Manual provided with the product.
- Do not place this product on an unstable cart, stand or table which might cause the product to fall and sustain serious damage.
- Install only equipment identified in the User's Manual provided with this product. Use of other equipment might cause improper connection of circuitry that might lead to fire or personal injuries.
- This product should be operated only from the type of power source indicated on the marked label. If you are uncertain about the type of power supply in your area, consult your dealer or the local Power Company.
- Disconnect the power supply module when removing power from the system.
- Unplug this product from the wall outlet before cleaning. Use a damp cloth for cleaning. Do not use liquid cleaners or aerosol cleaners.
- Do not use this product near a water source such as a wet faucet.
- Never push objects of any kind into this product through open slots as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill liquids of any kind on the product.
- Do not block or cover slots and openings in the unit as they are for ventilation to protect the unit from overheating. Do not place the product in a built-in installation unless proper ventilation is available.
- To reduce the risk of electric shock, do not disassemble this product. Service should only be performed by trained personnel. Opening or removing covers and/or circuit boards may expose you to electric or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
- Risk of explosion is possible if battery is replaced with an incorrect type. Dispose used batteries according to the instruction.
- This product is equipped with a three-wire grounding type plug, a plug with a third (grounding) pin. This plug is intended to fit only into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace the outlet. Do not defeat the safety purpose by removing the grounding type plug. Do not use a 3-to-2 prong adapter at the receptacle. Use of this type of adapter may result in risk of electric shock and/or damage to this product.

# About This User Manual

This document provides a detailed description of the Libra including:


- The General Features of the Product
- Motherboard Settings
- BIOS Configuration and Settings
- BMC Configuration and Settings

# Chapter 1.

## Product Introduction

### 1.1 General Information

Libra, a server grade mother board supports two Intel® Xeon® processor E5-2600 V3 series.

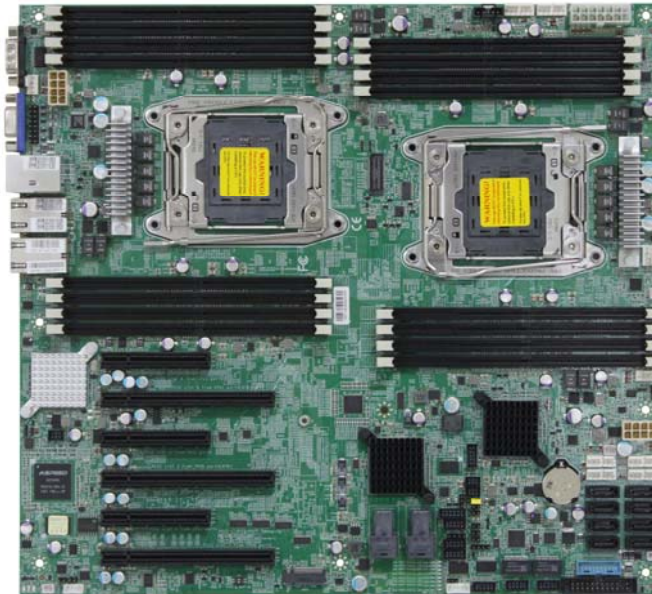

### 1.2 Specifications

<b>Dimensions (with chassis ears/protrusions)</b>	
W x D	mm : 305 x 330 inches : 12 x 13
<b>Motherboard</b>	
Motherboard	Libra
<b>Processor</b>	
Processor Support	Dual LGA2011-3 (Socket –R3) to support two Intel® Xeon® processor E5-2600 V3 series
QPI/DMI Speeds	8 GT/s, 5 GT/s, 2.5 GT/s
<b>Chipset</b>	
Chipset Support	Intel® C612 chipset
<b>System Memory</b>	

- 4 memory channels per CPU socket, 4 channels with 2DPC
- 16 DIMM slots support up to:
  - 256GB (@4Gb) / 512GB (@8Gb) DDR4 1866/2133 RDIMM SR, DR
  - 512GB (@4Gb) / 1024GB (@8Gb) DDR4 2133 LRDIMM QR

## BIOS

- BIOS Type**
- INSYDE 16MB
  - SPI (Serial Peripheral Interface) FLASH Interface

- BIOS Features**
- EFI BIOS
  - ACPI
  - PXE
  - WOL
  - AC loss recovery
  - IPMI KCS interface
  - SMBIOS
  - Serial console redirection

## On-Board Devices

- Serial ATA**
- Built-in SATA controller with RAID support on Intel® C612 chipset Support • 8 x SATA3 ports

- IPMI**
- Aspeed AST2400 BMC
- Intelligent Platform Management Interface 2.0 (IPMI 2.0)
  - iKVM, Media Redirection, IPMI over LAN, Serial over LAN
  - SMASH support

- Network Controllers**
- Intel® X540 10 GbE controller
  - Intel® I350 1GbE controller (Optional)
  - Intel® I210 PCIe single-port 1GbE controller
  - Intel® I217 1GbE PHY

- Graphics**
- Aspeed AST2400 graphics controller
- PCIe x1 VGA/2D controller
  - 1920x1200@60Hz 32bpp

## Rear I/O

- LAN**
- 2 x RJ45 single ports(10 GbE / 1 GbE)  
1 x RJ45 dual ports

- USB**
- 1 x USB ports

- VGA**
- 1 x VGA port

- Serial Port**
- 1 x external DSUB-9 serial port

## System Management

- System Management**
- IPMI 2.0 compliance
  - iKVM support (KVM over IP)
  - Media redirection
  - Smart fan speed control
  - Remote power on/off/reset
  - Temperature, fan, voltage, PSU sensor monitor
  - System ID / System fail indicator
  - SEL message alarm through mail
  - SNMP support
  - Intel NM

## Operating Environment

- Environmental Specifications**
- Operating Temperature: 0 ~ 55°C
  - Operating Altitude Condition: 0 ~ 10K feet
  - Storage Temperature: -40° ~ 70°C
  - System Relative Humidity: 5% to 95% non-condensing


# Chapter 2.

## Hardware Setup

### 2.1 Central Processing Unit (CPU)




CAUTION : WHEN UNPACKING A PROCESSOR, HOLD THE PROCESSOR ONLY BY ITS EDGES TO AVOID TOUCHING THE CONTACTS.

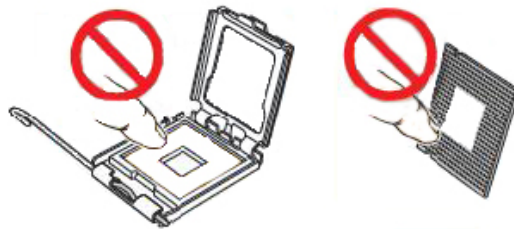


#### 2.1.1 Installing the CPU


1. Press the load lever to release the load plate.

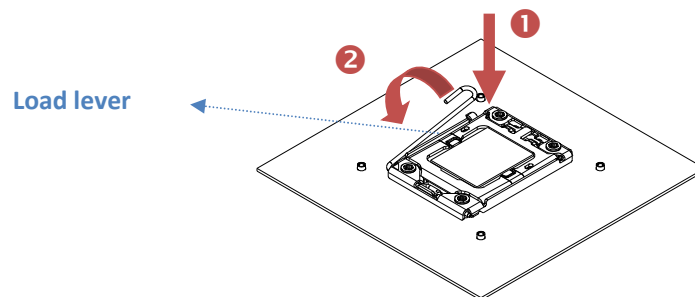


2. Lift the load plate.

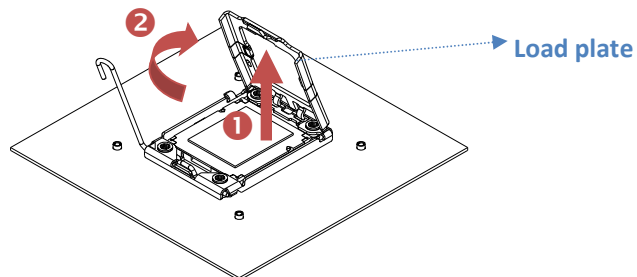

3. Remove the processor protective cover from CPU socket.

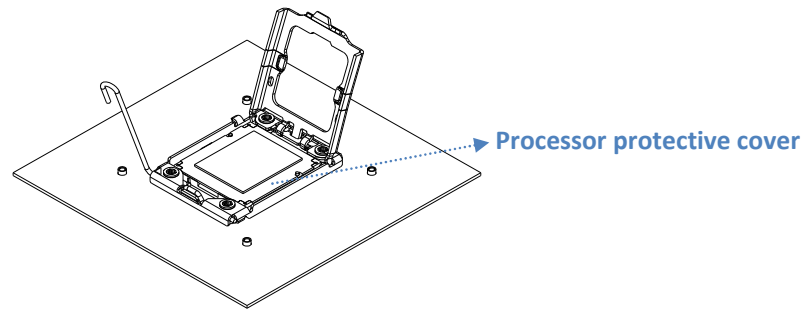


4. Align the processor cutouts against the socket notches.

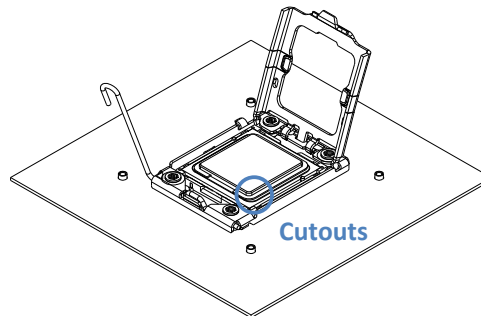

**CAUTION:** THE PINS OF THE PROCESSOR SOCKET ARE VULNERABLE AND EASILY SUSCEPTIBLE TO DAMAGE IF FINGERS OR ANY FOREIGN OBJECTS ARE PRESSED AGAINST THEM. PLEASE KEEP THE SOCKET PROTECTIVE COVER ON WHEN PROCESSOR IS NOT INSTALLED.

5. Close the load plate & load lever.

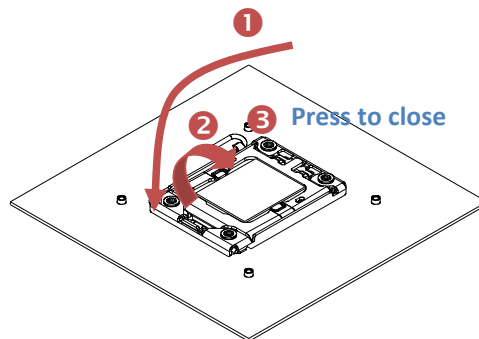


## 2.1.2 Installing the CPU Heatsink




**NOTE: APPLY THERMAL PASTE TO THE BOTTOM OF HEATSINK AND SPREAD IN AN EVEN THIN LAYER BEFORE INSTALLING THE HEATSINK.**

To install the CPU heatsink:

1. Place the heatsink on top of the CPU, ensuring that the four fasteners match the holes on the motherboard.

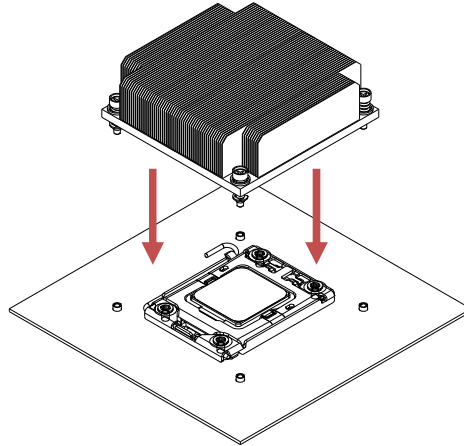


2. Tighten the four screws in a diagonal sequence, a couple of turns at a time, until all four screws are secure and the heatsink is securely fastened to the chassis.

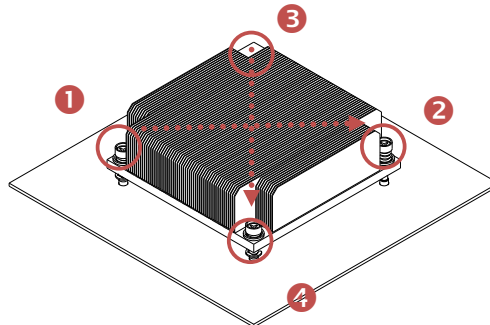

## 2.2 System Memory


This server board supports up to sixteen DDR4 1333/1600/1866/2133 Registered ECC SDRAM(RDIMM) / Load-Reduced DIMM (LRDIMM).

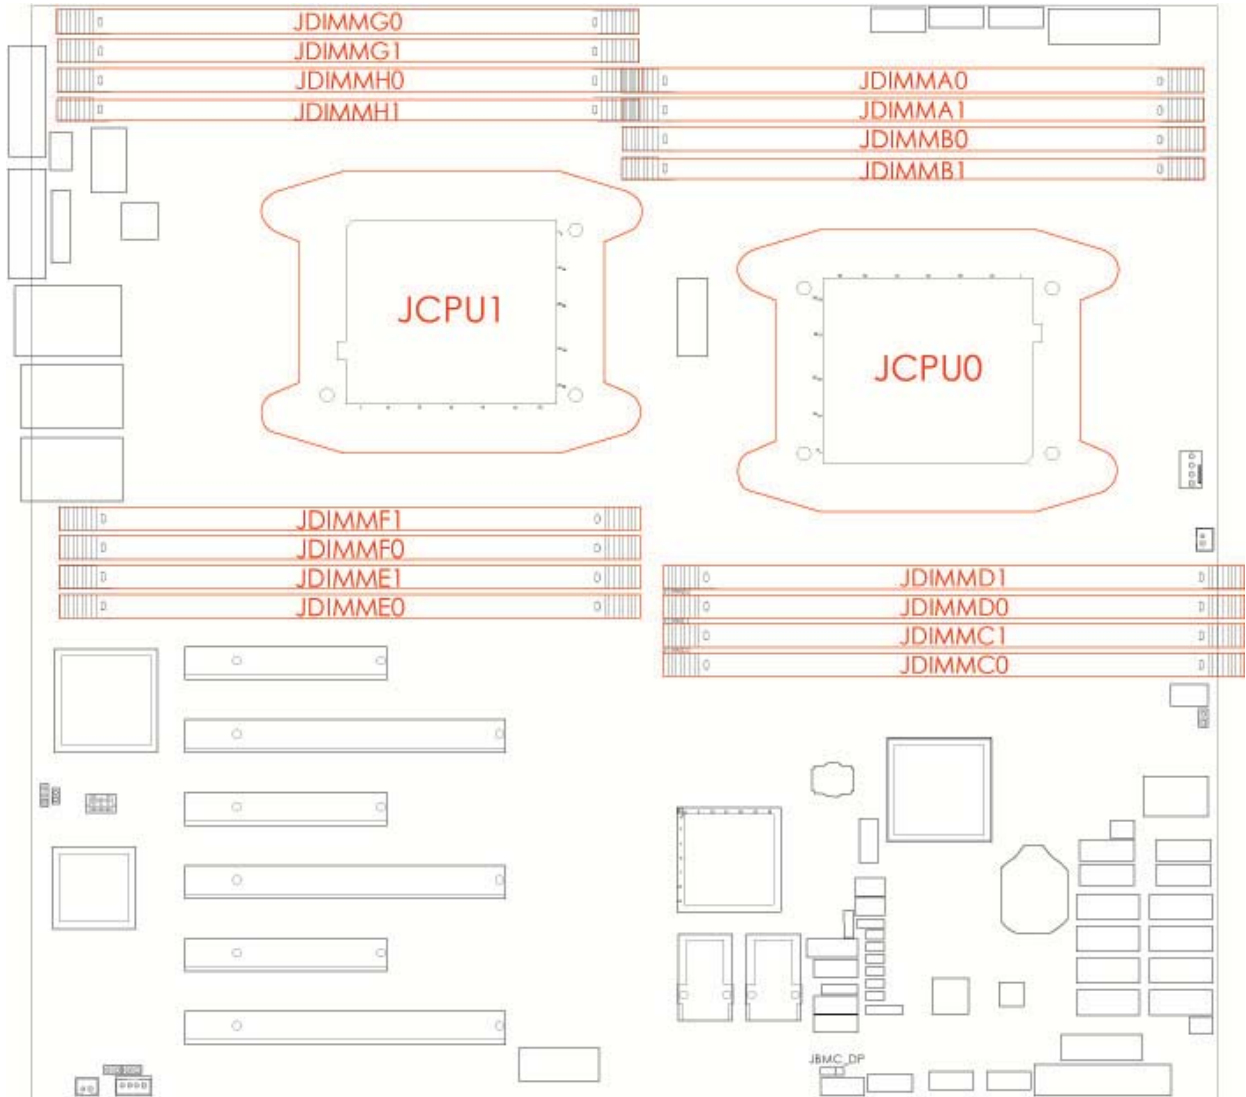

1. Populate DIMMs in the following order:


DIMM Numbers	DIMM arrangement													
2 DIMMs		<table border="1"> <thead> <tr> <th>CPU1</th> <th>JCPU0</th> </tr> </thead> <tbody> <tr> <td>JDIMM_G0</td> <td>JDIMM_A0</td> </tr> </tbody> </table>	CPU1	JCPU0	JDIMM_G0	JDIMM_A0								
CPU1	JCPU0													
JDIMM_G0	JDIMM_A0													
4 DIMMs		<table border="1"> <thead> <tr> <th>CPU1</th> <th>JCPU0</th> </tr> </thead> <tbody> <tr> <td>JDIMM_G0</td> <td>JDIMM_A0</td> </tr> <tr> <td>JDIMM_H0</td> <td>JDIMM_B0</td> </tr> </tbody> </table>	CPU1	JCPU0	JDIMM_G0	JDIMM_A0	JDIMM_H0	JDIMM_B0						
CPU1	JCPU0													
JDIMM_G0	JDIMM_A0													
JDIMM_H0	JDIMM_B0													
6 DIMMs		<table border="1"> <thead> <tr> <th>CPU1</th> <th>JCPU0</th> </tr> </thead> <tbody> <tr> <td>JDIMM_G0</td> <td>JDIMM_A0</td> </tr> <tr> <td>JDIMM_H0</td> <td>JDIMM_B0</td> </tr> <tr> <td>JDIMM_E0</td> <td>JDIMM_C0</td> </tr> </tbody> </table>	CPU1	JCPU0	JDIMM_G0	JDIMM_A0	JDIMM_H0	JDIMM_B0	JDIMM_E0	JDIMM_C0				
CPU1	JCPU0													
JDIMM_G0	JDIMM_A0													
JDIMM_H0	JDIMM_B0													
JDIMM_E0	JDIMM_C0													
8 DIMMs		<table border="1"> <thead> <tr> <th>CPU1</th> <th>JCPU0</th> </tr> </thead> <tbody> <tr> <td>JDIMM_G0</td> <td>JDIMM_A0</td> </tr> <tr> <td>JDIMM_H0</td> <td>JDIMM_B0</td> </tr> <tr> <td>JDIMM_F0</td> <td>JDIMM_D0</td> </tr> <tr> <td>JDIMM_E0</td> <td>JDIMM_C0</td> </tr> </tbody> </table>	CPU1	JCPU0	JDIMM_G0	JDIMM_A0	JDIMM_H0	JDIMM_B0	JDIMM_F0	JDIMM_D0	JDIMM_E0	JDIMM_C0		
CPU1	JCPU0													
JDIMM_G0	JDIMM_A0													
JDIMM_H0	JDIMM_B0													
JDIMM_F0	JDIMM_D0													
JDIMM_E0	JDIMM_C0													
10 DIMMs		<table border="1"> <thead> <tr> <th>CPU1</th> <th>JCPU0</th> </tr> </thead> <tbody> <tr> <td>JDIMM_G0</td> <td>JDIMM_A0</td> </tr> <tr> <td>JDIMM_G1</td> <td>JDIMM_A1</td> </tr> <tr> <td>JDIMM_H0</td> <td>JDIMM_B0</td> </tr> <tr> <td>JDIMM_F0</td> <td>JDIMM_D0</td> </tr> <tr> <td>JDIMM_E0</td> <td>JDIMM_C0</td> </tr> </tbody> </table>	CPU1	JCPU0	JDIMM_G0	JDIMM_A0	JDIMM_G1	JDIMM_A1	JDIMM_H0	JDIMM_B0	JDIMM_F0	JDIMM_D0	JDIMM_E0	JDIMM_C0
CPU1	JCPU0													
JDIMM_G0	JDIMM_A0													
JDIMM_G1	JDIMM_A1													
JDIMM_H0	JDIMM_B0													
JDIMM_F0	JDIMM_D0													
JDIMM_E0	JDIMM_C0													

12 DIMMs

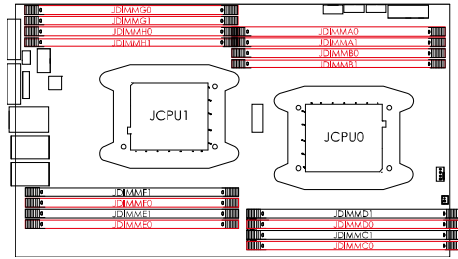


CPU1	JCPU0
JDIMM_G0	JDIMM_A0
JDIMM_G1	JDIMM_A1
JDIMM_H0	JDIMM_B0
JDIMM_H1	JDIMM_B1
JDIMM_F0	JDIMM_D0
JDIMM_E0	JDIMM_C0

14 DIMMs

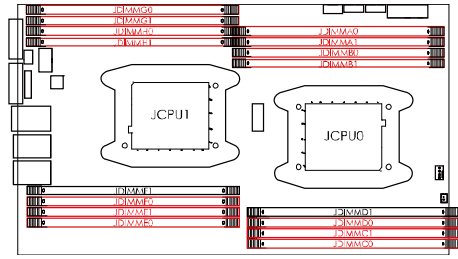

CPU1	JCPU0
JDIMM_G0	JDIMM_A0
JDIMM_G1	JDIMM_A1
JDIMM_H0	JDIMM_B0
JDIMM_H1	JDIMM_B1
JDIMM_F0	JDIMM_D0
JDIMM_E1	JDIMM_C1
JDIMM_E0	JDIMM_C0

16 DIMMs

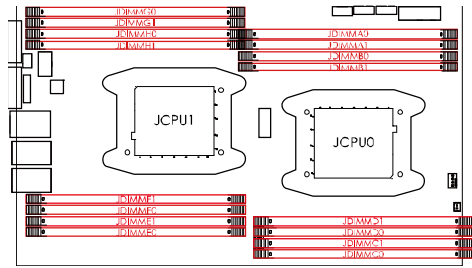

CPU1	JCPU0
JDIMM_G0	JDIMM_A0
JDIMM_G1	JDIMM_A1
JDIMM_H0	JDIMM_B0
JDIMM_H1	JDIMM_B1
JDIMM_F1	JDIMM_D1
JDIMM_F0	JDIMM_D0
JDIMM_E1	JDIMM_C1
JDIMM_E0	JDIMM_C0



2. Unlock a DIMM socket by pressing the retaining clips outward.



3. Insert module vertically and press down until it snaps into place.



NOTE: DIMM NOTCH AND SOCKET BUMP MUST ALIGN AS SHOWN.

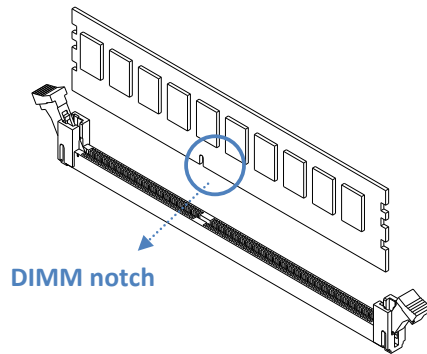


# Chapter 3.


## Motherboard Settings

This section describes the jumpers, internal connectors, and internal LEDs setting on Libra motherboard. Motherboard layout and important jumper settings are listed as below.

### 3.1 Motherboard block diagram

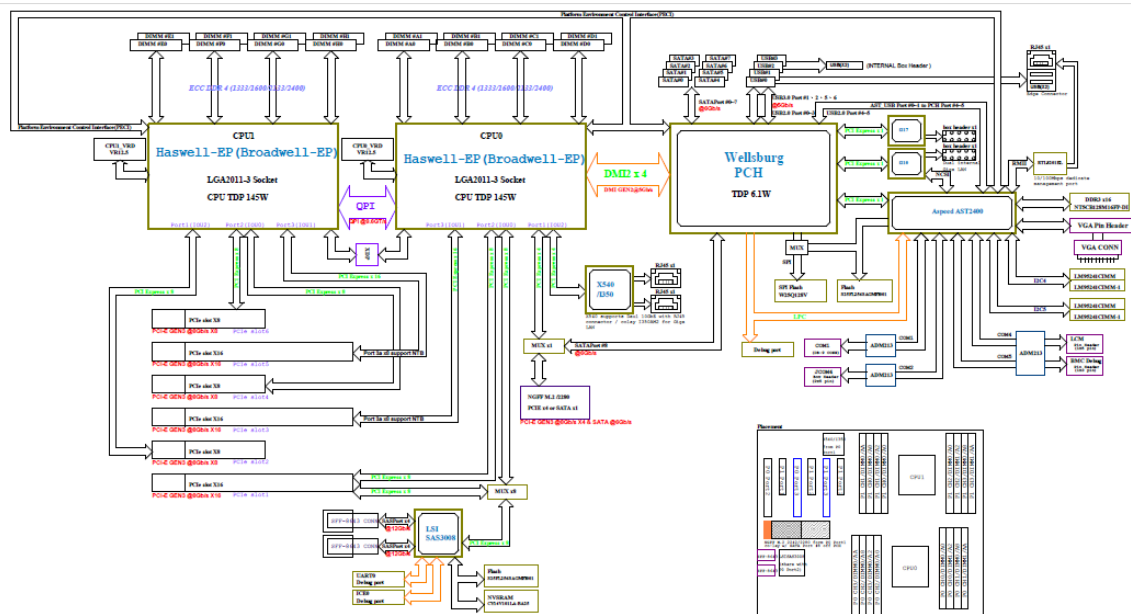

### 3.2 Motherboard Layout

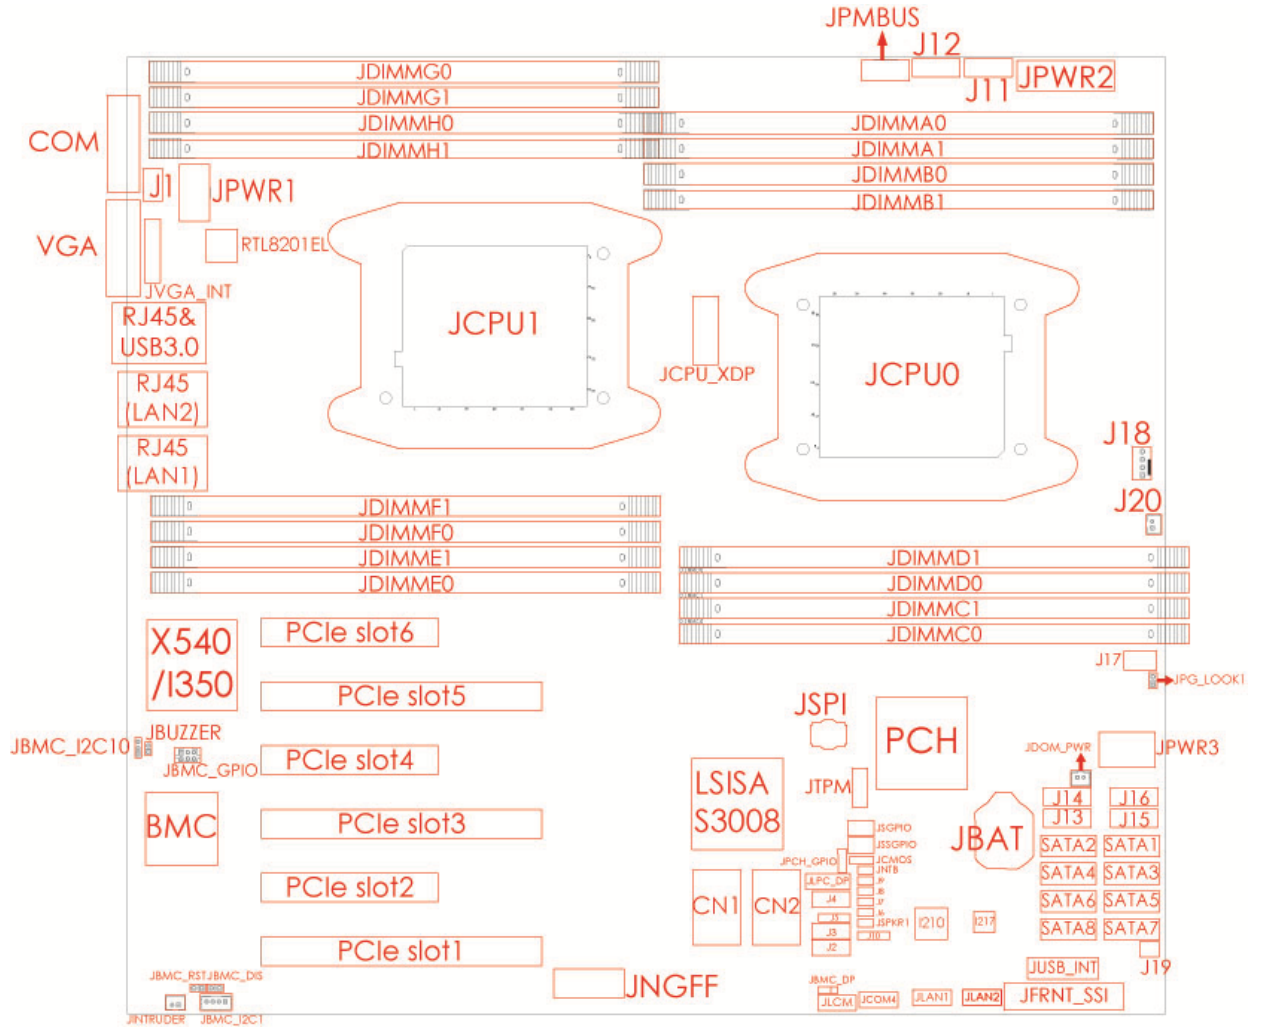

### 3.3 Motherboard Content List


Connectors		Location	Connectors		Location
1	Ethernet (Single Port)	LAN1,LAN2	28	Intruder	JINTRUDER
2	Ethernet (Dual Port)	RJ45	29	PMBUS	JPMBUS
3	USB Port (Dual Port)	USB3.0	30	SPI ROM Socket	JSPI
4	COM Port	COM	31	Speaker	JSPKR
5	VGA Port	VGA	32	BMC Reset	JBMC_RST
6	Power Supply (4x2 pin)	JPWR1	33	BMC Disable	JBMC_DIS
7	Power Supply (7x2 pin)	JPWR2	34	System PG Lock	JPG_LOCK
8	Power Supply (4x2 pin)	JPWR3	35	BMC Buzzer	JBUZZER
9	SATA-DOM Power	JDOM_PWR	36	BIOS Recovery Mode	J6
10	SSI Front Panel	JFRNT_SSI	37	ME Force Recovery Mode	J9
11	Serial ATA	SATA1~SATA4	38	Flash Descriptor Security override	J7
12	SSATA	SATA5~SATA8	39	No Reboot(Watch Dog)	J8
13	VGA Pin header	JVGA_INT	40	NTB (Non-Transparent Bridge)	JNTB
14	COM Port	JCOM4	41	PCH GPIO	JPCH_GPIO
15	Front USB	JUSB_INT	42	LCM(COM Port)	JLCM
16	CPU XDP header	JCPU_XDP	43	LAN3/LAN4	JLAN1/JLAN2
17	CPU Sockets	CPU0/CPU1	44	SAS Drive Error LEDs	J2
18	Debug port	JLPC_DP	45	SAS Drive Active LEDs	J3
19	TPM Port	JTPM	46	SAS ICE0	J4
20	BMC debug Port	JBMC_DP	47	SAS UART0	J5
21	BMC GPIO	JBMC_GPIO	48	LAN3/LAN4 LEDs	J10
22	SGPIO	JSGPIO	49	External Thermal Sensor	J19/J20
23	SSGPIO	JSSGPIO	50	SFF-8643 CONN	CN1,CN2
24	Clear CMOS	JCMOS	51	NGFF M.2 CONN	JNGFF
25	BMC_I2C10	JBMC_I2C10	52	FIN_4P	J1,J17,J18
26	BMC IPMI	JBMC_I2C1	53	FIN_6P	J11~J16
27	Battery Socket	JBAT	54		



Connectors/Jumpers		Description	
JFRNT SSI	SSI Front Panel	1. +3.3V_DUAL 2. +3.3V_DUAL 3. KEY (no pin) 4. +5V_AUX 5. PWR_LED# 6. UIDLED_OUT# 7. +3.3V 8. SYS_HEALTH#2 9. HD_LED# 10. SYS_HEALTH#1 11. SW_PWR_BTN# 12. LAN1_LINK_UP	13. GND 14. LAN1_TRAFFIC 15. SW_RST_BTN# 16. I2C8SDA 17. GND 18. I2C8SCL 19. UID_SW_IN# 20. INTRUDER# 21. NC 22. LAN2_LINK_UP 23. FP_NMI_BTN 24. LAN2_TRAFFIC
J1	Fan Header	1. GND 2. +12V	3. FAN9_TACH 4. PWM6
J17	Fan Header	1. GND 2. +12V	3. FAN8_TACH 4. PWM5
J18	Fan Header	1. GND 2. +12V	3.FAN7_TACH 4.PWM4
JPG_LOCK	System PG Lock (Jumper)	Open/Normal (Default) Short/Lock	
JPWR3	Power Supply	1.GND 2. GND 3. GND 4. GND	5. +12V 6. +12V 7. +12V 8. +12V
JDOM_PWR	SATA-DOM Power	1.+5V	2.GND
J11	Fan Header	1. GND 2. +12V 3. FAN1_TACH	4. PWM1 5. FAN1A_PRSENT_N 6. LED_FAN1A_FAULT

J12	Fan Header		1. GND 2. +12V 3. FAN2_TACH	4. PWM1 5. FAN1B_RSNT_N 6. LED_FAN1B_FAULT
J13	Fan Header		1. GND 2. +12V 3. FAN6_TACH	4. PWM3 5. FAN3B_PRSENT_N 6. LED_FAN3B_FAULT
J15	Fan Header		1. GND 2. +12V 3. FAN5_TACH	4. PWM3 5. FAN3A_PRSENT_N 6. LED_FAN3A_FAULT
J14	Fan Header		1. GND 2. +12V 3. FAN4_TACH	4. PWM2 5. FAN2B_PRSENT_N 6. LED_FAN2B_FAULT
J16	Fan Header		1. GND 2. +12V 3. FAN3_TACH	4. PWM2 5. FAN2A_PRSENT_N 6. LED_FAN2A_FAULT
J19	External Sensor	Thermal	1. HM_TD8+	2. HM_TD8-
J20	External Sensor	Thermal	1. HM_TD7+	2. HM_TD7-
JUSB_INT	Front I/O USB Header		1. +5V_USB23 2. PCH_FP_USB3_RX_N2 3. PCH_FP_USB3_RX_P2 4. GND 5. PCH_FP_USB3_TX_N2 6. PCH_FP_USB3_TX_P2 7. GND 8. PCH_FP_USB2_N2 9. PCH_FP_USB2_P2 10. PCH_USB_OC#23	11. PCH_FP_USB2_P3 12. PCH_FP_USB2_N3 13. GND 14. PCH_FP_USB3_TX_P3 15. PCH_FP_USB3_TX_N3 16. GND 17. PCH_FP_USB3_RX_P3 18. PCH_FP_USB3_RX_N3 19. +5V_USB23 20. KEY (no pin)

# Internal Connectors/Jumpers (Continued)

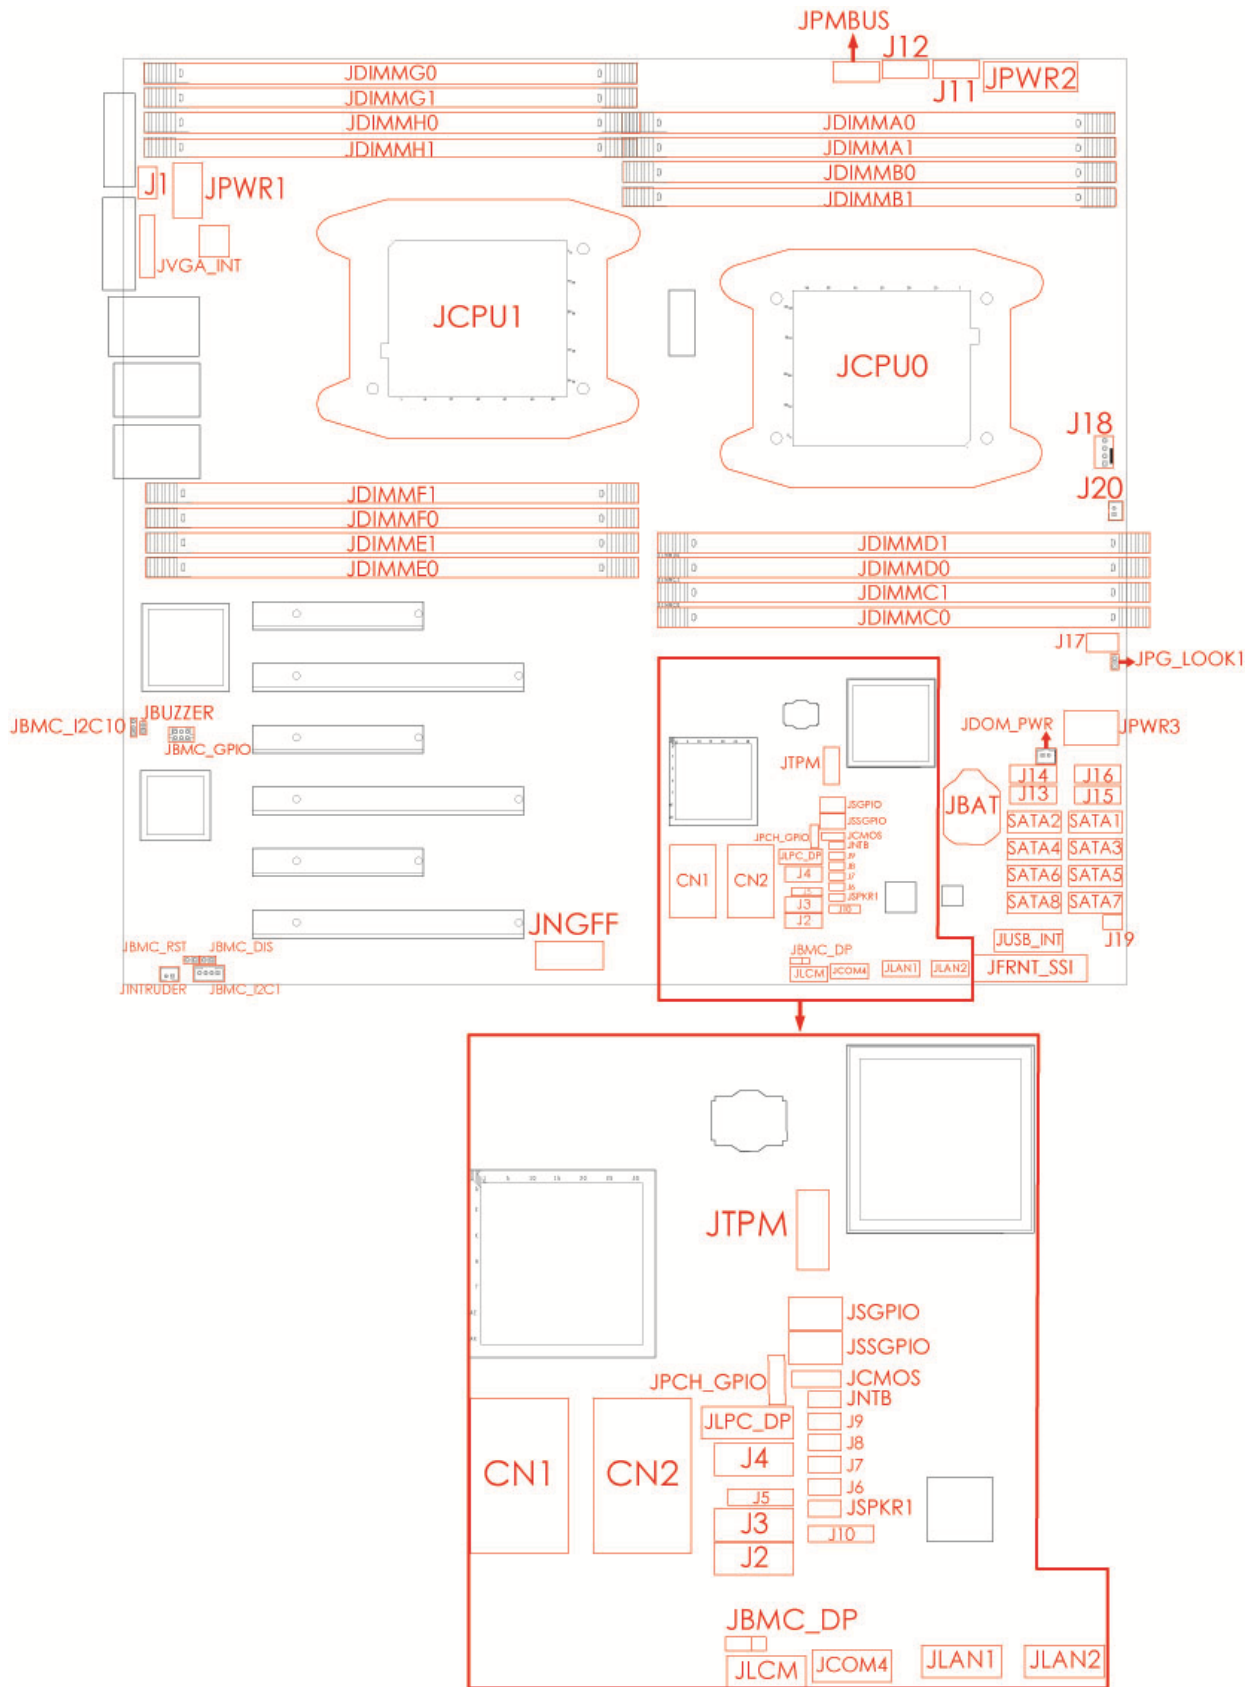

Connectors/Jumpers		Description	
JTPM	Debug Port	1.+3.3V 2.GND 3. PCH_SPI_MOSI 4. PCH_SPI_MISO 5. PCH_GPIO23	6. PCH_SPI_CLK 7. PCH_LDRO0_N 8. PCH_SPI_CS1_N 9. RST_PLTRST_N 10. PCH_SPI_CS2_N
JSGPIO	SGPIO	1. GND 2. PCH_SDATAOUT0 3. PCH_SDATAOUT1	4. PCH_SLOAD 5. +3.3V 6. PCH_SCLOCK
JSSGPIO	SSGPIO	1. GND 2. PCH_SSDATAOUT0 3. PCH_SSDATAOUT1	4. PCH_SSLOAD 5. +3.3V 6. PCH_SSCLOCK
JCMOS	CMOS Jump Setting (Jumper)	1. P3V3_VBAT 2. RST_RTCRST_N 3. GND	Pin1-2 close/Normal(Default) Pin2-3 close/Clear CMOS
JNTB	NTB Configurations (Jumper)	Open/Upstream port(Default) Short/Downstream port	
J9	ME Force Recovery Mode(Jumper)	Open/Normal (Default) Short/ME Recovery Mode	
J8	Watch dog(Jumper)	Open/Disable (Default) Short/Enable	
J7	Flash Security Descriptor override (Jumper)	Open/Normal (Default) Short/Flash Security override	
J6	BIOS Recovery Mode (Jumper)	Open/Normal (Default) Short/BIOS Recovery Mode	
JSPKR	Speaker	1.+5V	2.PCH_SPKR_M
J10	LED	1. LAN3_TRAFFIC 2. +3.3V	3. LAN4_TRAFFIC 4. GND
JLAN2	LAN3 Header	1. MDI_N0 2. MDI_P1	6. GND 7. MDI_N3

		3. MDI_P0 4. MDI_N1 5. +1V5_DUAL_LAN4	8. MDI_P2 9. MDI_P3 10. MDI_N2
JLAN1	LAN4 Header	1. MDI_N0 2. MDI_P1 3. MDI_P0 4. MDI_N1 5. +1.0V_PHY_I217	6. GND 7. MDI_N3 8. MDI_P2 9. MDI_P3 10. MDI_N2
JCOM4	Front COM Header	1. DSRB 3. RTSB 5. CTSB 7. RIB 9. KEY (no pin)	2. DCDB 4. RXDB 6. TXDB 8. DTRB 10. GND
JLCM	LCM	1. SW_PWR_BTN# 3. TXDC 5. GND	2. SW_RST_BTN# 4. RXDC
J2	SAS Drive Error LEDs	1. SPEAKER_SSB	2. +3.3V
J3	SAS Drive Active LEDs	1. PCH_GPIO34	2. GND
J5	SAS UART0	1. UART0_TX 2. GND	3. UART0_RX 4. SAS3008_1VB
J4	SAS ICE0	1. GND	2. PCH_GPIO44
JLPC_DP	LPC Debug Port	1. GND 3. PCH_GPIO61 5. AST_SERIRQ 7. PCH_LPC_LAD2 9. PCH_LPC_LAD1 11. GND	2. CLK_33M_DP80 4. PCH_LFRAME_N 6. RST_PLTRST_N 8. PCH_LPC_LAD3 10. +3.3V 12. PCH_LPC_LAD0
JPCH_GPIO	PCH GPIO	1. PCH_GPIO27 2. PCH_GPIO21	3. GND
JBMC_DP	BMC debug Port	1. SCOM2_T3OUT 2. SCOM2_R4IN	3. GND

CN2	SFF-8643 CONN	A1.NC A2.SIO0_SAS_CLK A3.GND A4.SAS_EXP_RX_P2 A5.SAS_EXP_RX_N2 A6.GND A7.SAS_EXP_RX_P3 A8.SAS_EXP_RX_N3 A9.GND B1.GND B2.SIO0_SAS_LOAD B3.GND B4.SAS_EXP_RX_P1 B5.SAS_EXP_RX_N1 B6.GND B7.SAS_EXP_RX_P0 B8.SAS_EXP_RX_N0 B9.GND	C1.SIO0_SAS_DIN C2.GND C3.GND C4.SAS_EXP_TX_P2 C5.SAS_EXP_TX_N2 C6.GND C7.SAS_EXP_TX_P3 C8.SAS_EXP_TX_N3 C9.GND D1.SIO0_SAS_DOUT D2.NC D3.GND D4.SAS_EXP_TX_P1 D5.SAS_EXP_TX_N1 D6.GND D7.SAS_EXP_TX_P0 D8.SAS_EXP_TX_N0 D9.GND
CN1	SFF-8643 CONN	A1.NC A2.GND A3.GND A4.SAS_EXP_RX_P6 A5.SAS_EXP_RX_N6 A6.GND A7.SAS_EXP_RX_P7 A8.SAS_EXP_RX_N7 A9.GND B1.GND B2.SIO1_SAS_LOAD B3.GND B4.SAS_EXP_RX_P5 B5.SAS_EXP_RX_N5 B6.GND B7.SAS_EXP_RX_P4 B8.SAS_EXP_RX_N4 B9.GND	C1.SIO1_SAS_DIN C2.GND C3.GND C4.SAS_EXP_TX_P6 C5.SAS_EXP_TX_N6 C6.GND C7.SAS_EXP_TX_P7 C8.SAS_EXP_TX_N7 C9.GND D1.SIO1_SAS_DOUT D2.NC D3.GND D4.SAS_EXP_TX_P5 D5.SAS_EXP_TX_N5 D6.GND D7.SAS_EXP_TX_P4 D8.SAS_EXP_TX_N4 D9.GND



JVGA_INT	VGA	1. GND 3. DACGOA 5. DDC_DATAO 7. GND 9. NC 11. AVSYNCO 13. GND 15. GND	2. DACROA 4. NC 6. GND 8. DACBOA 10. AHSYNCO 12. DVO_5V 14. GND 16. DDC_CLKO
JBUZZER	BMC Buzzer	1.+5V	2. BMC BUZZER-
JBMC_I2C10	BMC_I2C10	1. I2C10SCL 2. I2C10SDA	3. GND
JBMC_GPIO	GPIO	1.GND 3. I2C9SDA 5. I2C9SCL	2. BMC_GPY2 4. BMC_GPY1 6. BMC_GPY0
JINTRUDER	Intruder	OFF/Enable(Default) Short/Case Open	
JBMC_RST	BMC Reset Setting (Jumper)	Open/Normal (Default) Short/Reset BMC	
JBMC_DIS	BMC ARM Setting (Jumper)	Open/Normal (Default) Short/Disable	
JBMC_I2C1	BMC IPMI	1. I2C1SDA 2. GND	3. I2C1SCL 4. NC

JCPU_XDP	CPU XDP Header	1. GND 3. XDP_CPU_PREQ_N 5. XDP_CPU_PREQ_P 7. GND 9. XDP_CPU0_MBP_N2 11. XDP_CPU0_MBP_N3 13. GND 15. XDP_CPU0_MBP_N4 17. XDP_CPU0_MBP_N5 19. GND 21. XDP_CPU_MBP_N6 23. XDP_CPU_MBP_N7 25. GND 27. XDP_CPU1_MBP_N2 29. XDP_CPU1_MBP_N3 31. GND 33. XDP_CPU1_MBP_N4 35. XDP_CPU1_MBP_N5 37. GND 39. PWRGD_CPU0_GTL 41. XDP_PWRGD_RST 43. PVCCIO 45. SRP_CPU_PWR_DEBUG_N 47. XDP_BPM_MUX_CTL 49. GND 51. SMB_HOST_3V3_DAT 53. SMB_HOST_3V3_CLK 55. GND 57. JTAG_CPU2_TCLK 59. JTAG_CPU_TCLK	2. GND 4. TP_XDP_CPU_OBSFN_C0 6. TP_XDP_CPU_OBSFN_C1 8. GND 10. XDP_CPU2_MBP_N2 12. XDP_CPU2_MBP_N3 14. GND 16. XDP_CPU2_MBP_N4 18. XDP_CPU2_MBP_N5 20. GND 22. TP_XDP_CPU_OBSFN_D0 24. TP_XDP_CPU_OBSFN_D1 26. GND 28. XDP_CPU3_MBP_N2 30. XDP_CPU3_MBP_N3 32. GND 34. XDP_CPU3_MBP_N4 36. XDP_CPU3_MBP_N5 38. GND 40. CLK_100M_XDP_DP 42. CLK_100M_XDP_DN 44. PVCCIO 46. RST_LVC1_CPU01_RESET_N 48. PCH_SYSRST# 50. GND 52. JTAG_CPU_TDO 54. JTAG_CPU_TRST_N 56. JTAG_CPU_TDI 58. JTAG_CPU_TMS 60. XDP_PRESENT_N
----------	----------------	--	---

JNGFF	NGFF M.2 CONN	1. GND	35. GND
		2. +3.3V	36. NC
		3. GND	37. CPU0_EXP1_RX_DN_2
		4. +3.3V	38. NGFF_DEVSLP
		5. CPU0_EXP1_TX_DN_0	39. GND
		6. NC	40. NC
		7. CPU0_EXP1_TX_DP_0	41. NGFF_SATA_B+_TX_DN_0
		8. NC	42. NC
		9. GND	43. NGFF_SATA_B-_TX_DP_0
		10. +3.3V	44. NC
		11. CPU0_EXP1_RX_DN_0	45. GND
		12. +3.3V	46. NC
		13. CPU0_EXP1_RX_DP_0	47. NGFF_SATA_A-_RX_DN_0
		14. +3.3V	48. NC
		15. GND	49. NGFF_SATA_A+_RX_DP_0
		16. +3.3V	50. CPE_RST_N
		17. CPU0_EXP1_TX_DN_1	51. GND
		18. +3.3V	52. NGFF_CLKREQ#
		19. CPU0_EXP1_TX_DP_1	53. GND
		20. NC	54. PCH_WAKE_N
		21. GND	55. CLK_100M_NGFF_DN
		22. NC	56. NC
		23. CPU0_EXP1_RX_DN_1	57. GND
		24. NC	58. NC
		25. CPU0_EXP1_RX_DP_1	59. ~ 66. Key M
		26. NC	67. NC
		27. GND	68. PCH_SHSCLK_N
		28. NC	69. NGFF_PEDET
		29. CPU0_EXP1_TX_DN_2	70. +3.3V
		30. NC	71. GND
		31. CPU0_EXP1_TX_DP_2	72. +3.3V
		32. NC	73. GND
		33. GND	74. +3.3V
		34. NC	75. GND

### 3.5 LEDs


#### 3.5.1 Front Panel LED

Power	Yellow	System is On
	Blinking	System is in Standby; System is off, but has AC power
	Off	System has no AC power
UID	Blue	UID activity detected
	Off	No UID activity detected
System Error	Red	Critical system failure detected (processors, memory, voltage regulators, thermal events, fan failures, NMI, etc)
	Off	No critical failures detected
Hard Disk	Green (Blinking)	Disk activity detected
	Off	No disk activity detected
LAN 1	Green (Blinking)	LAN1 activity detected
	Off	LAN1 is not active
LAN 2	Green (Blinking)	LAN2 activity detected
	Off	LAN2 is not active

#### 3.5.2 Rear chassis LEDs

LAN* (Right)	Green (Blinking)	LAN* activity detected
	Off	LAN* is not active, LAN cable no connect
LAN* (Left)	Status LED	100M: Green 10M/No connect: Off
LAN1 (Right)	Green (Blinking)	LAN1 activity detected
	Off	LAN1 is not active, LAN cable no connect
LAN1 (Left)	Status LED	10G : Green, 1G : Yellow, 10M/No connect: Off(X540) 1G : Yellow, 100M: Green, 10M/No connect: Off(I350)
LAN2 (Right)	Green (Blinking)	LAN2 activity detected
	Off	LAN2 is not active, LAN cable no connect
LAN2 (Left)	Status LED	10G : Green, 1G : Yellow, 10M/No connect: Off(X540) 1G : Yellow, 100M: Green, 10M/No connect: Off(I350)

### 3.5.3 Internal LEDs

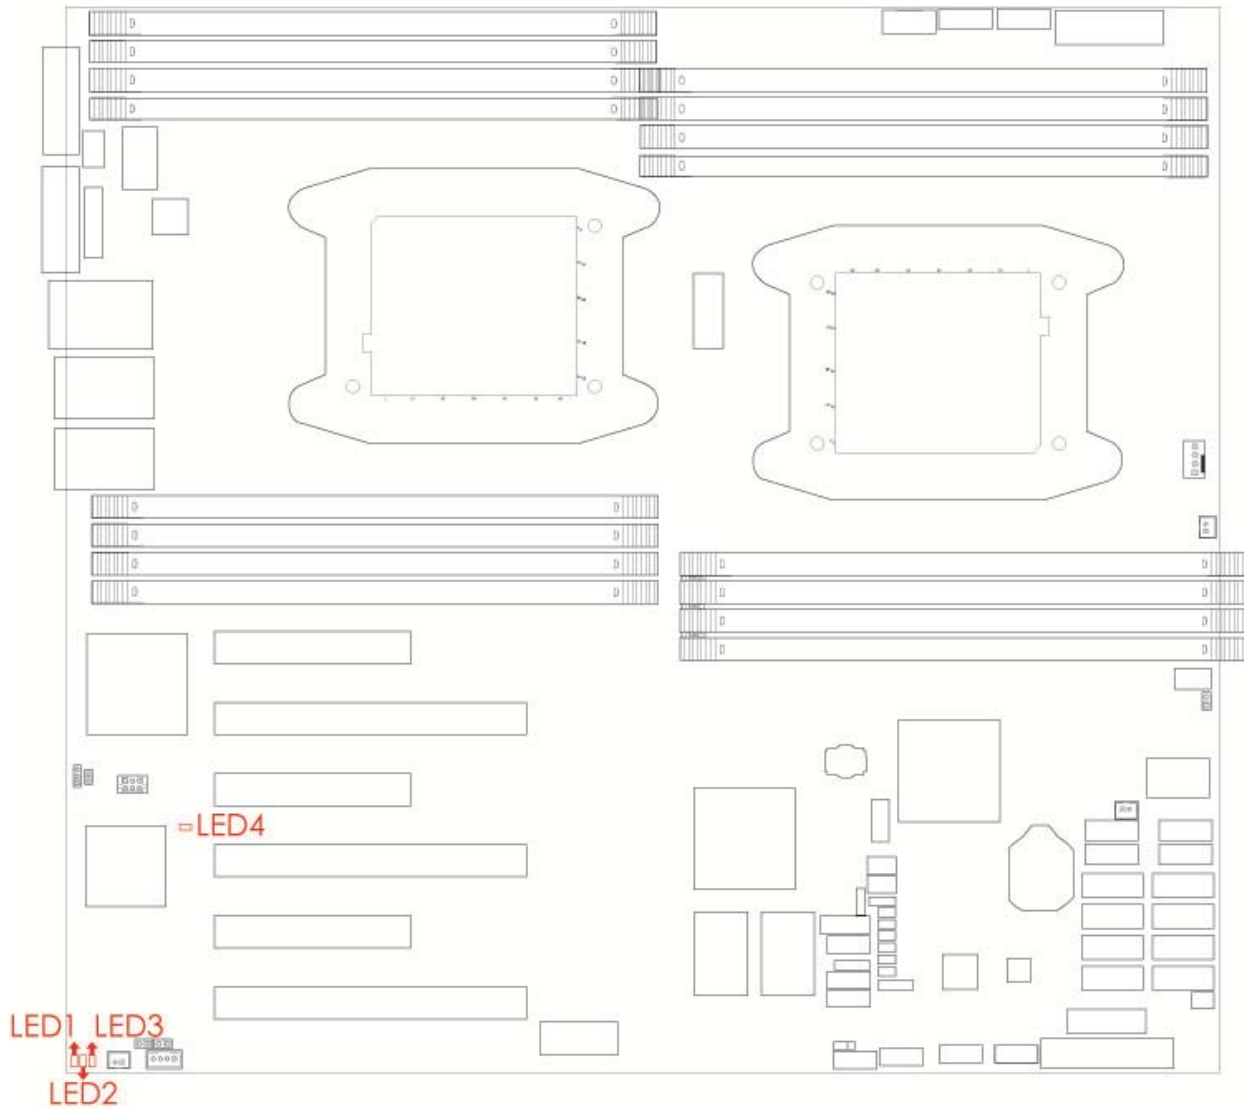

HEART BIT (LED4)	ON(Blinking)	BMC activity detected
	OFF	BMC is not active
SYS PG LED (LED2)	ON	System power good ready
	OFF	System power good is not ready
RSMRST PG LED (LED3)	ON	Resume Well Reset ready
	OFF	Resume Well Reset is not ready
UID LED (LED1)	ON	UID activity detected
	OFF	UID not activity detected


# Chapter4.

## BIOS Configuration and Settings




CAUTION: WHEN QUIET BOOT IS ENABLED, OEM LOGO WILL BE DISPLAYED INSTEAD OF POST MESSAGES.

1. Press ESC to run the setup procedure.

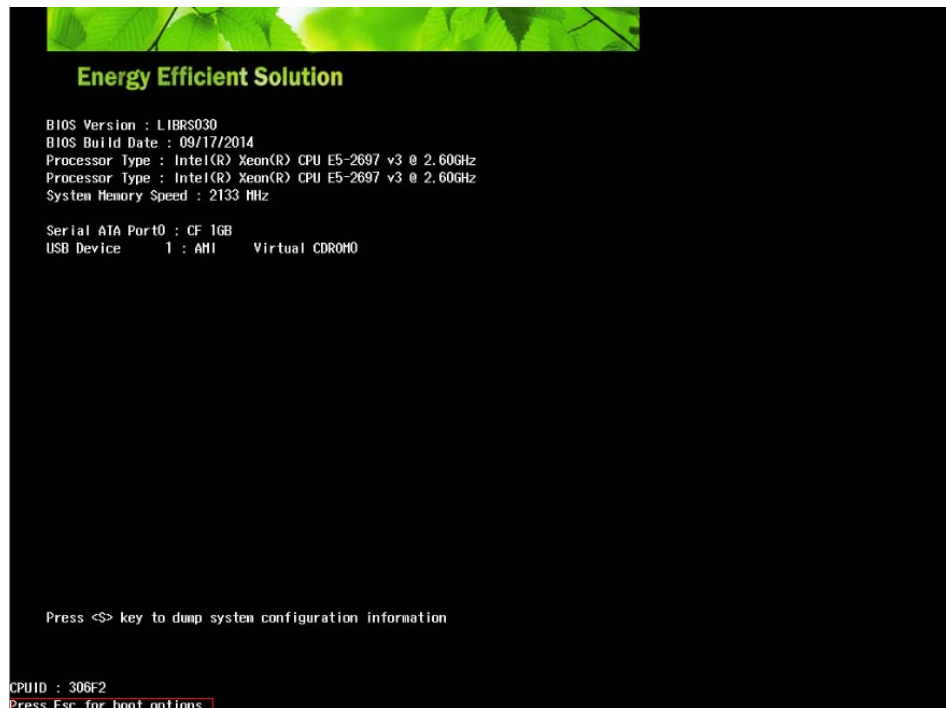


2. Choose the SCU to enter the Setup menu.

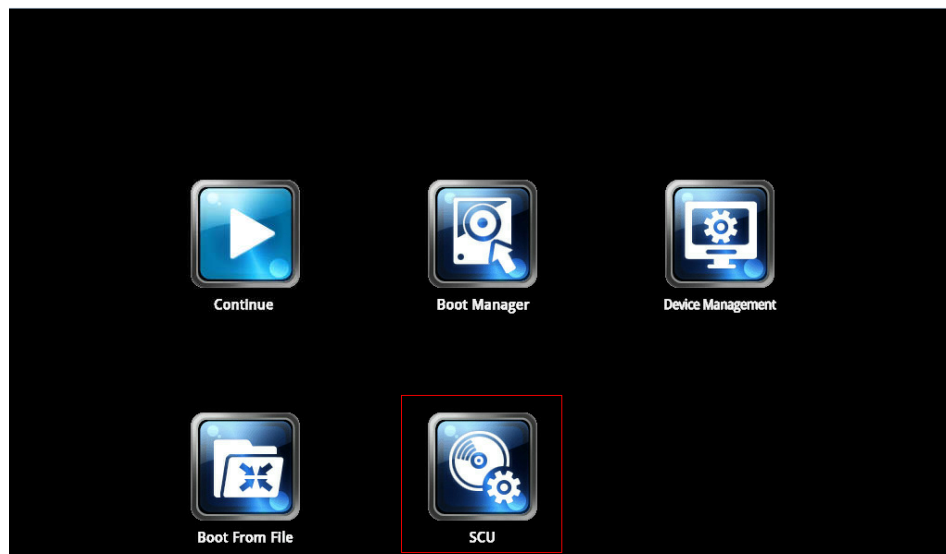


CAUTION: FOR THE OFFICIAL RELEASED VERSION, THE LAST DIGIT OF THE BIOS VERSION MUST END IN AN "0."


### 3. Identify the BIOS Version

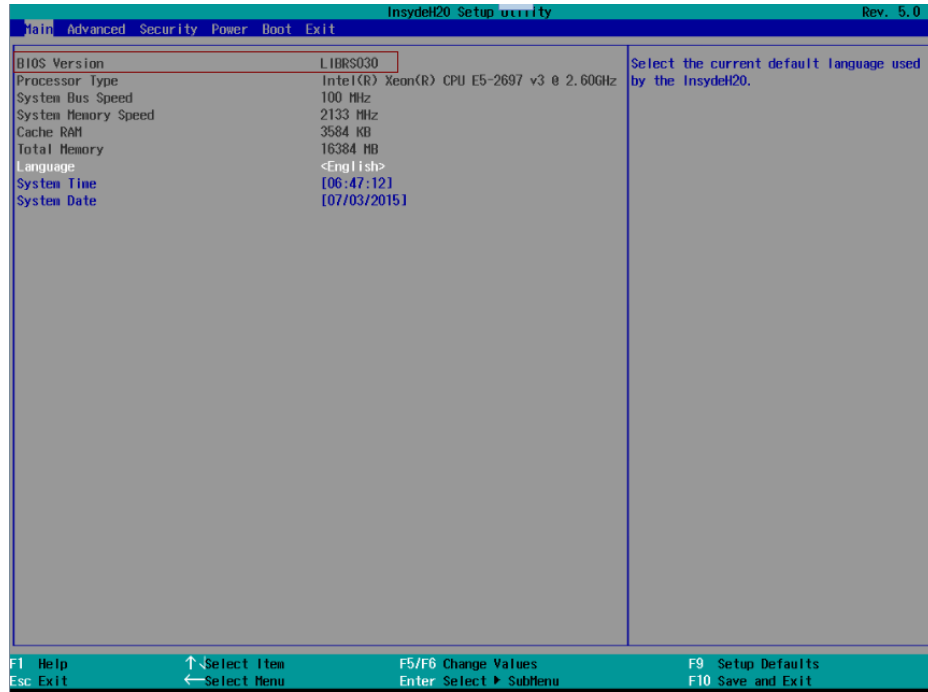

### 4. Load Optimal Default setting

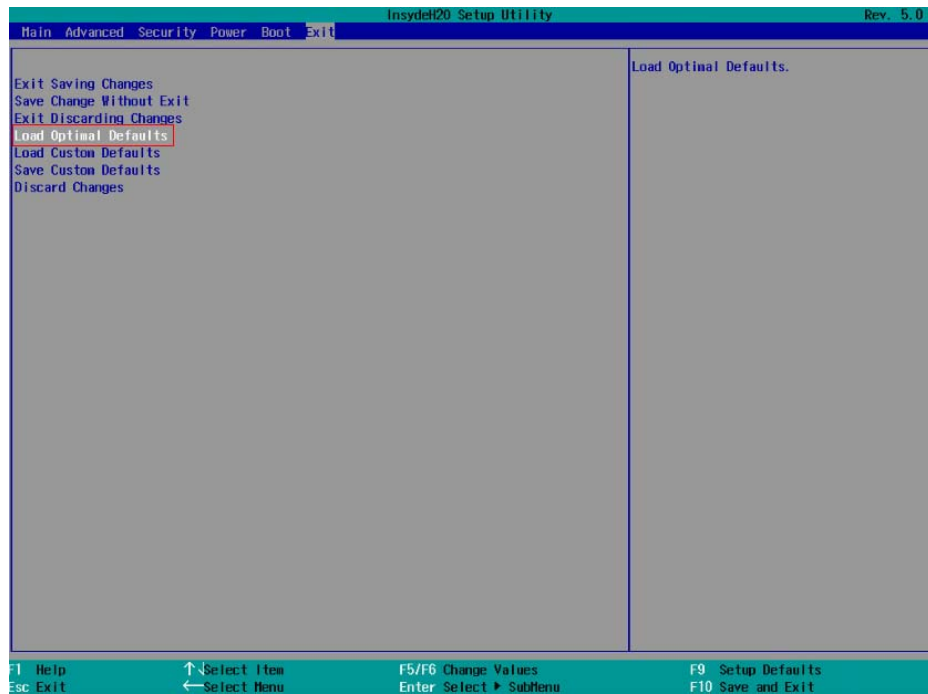

## 5. Save the setting and exit the BIOS setup utility.

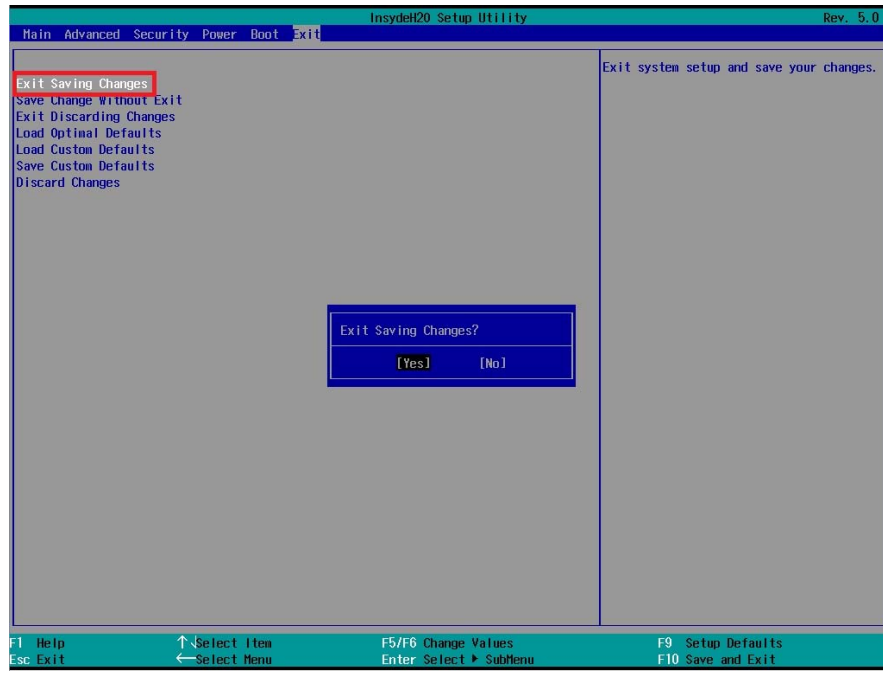

## 4.1 Updating BIOS

### Important Notes:

To identify the current BIOS version, please check out on BIOS setup.






# Chapter 5.

## BMC Configuration and Settings


Insert Ethernet LAN cable into the BMC LAN port. There are two methods to setup BMC IP:

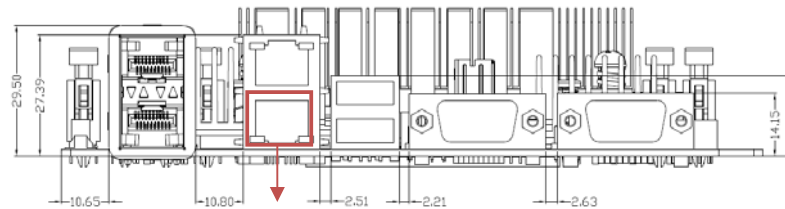

**BMC management port**

### 5.1 Method 1 (Use the BIOS setup)

BIOS SETUP → Advanced → H2O IPMI configuration → BMC Configuration → IPv4 source → Static

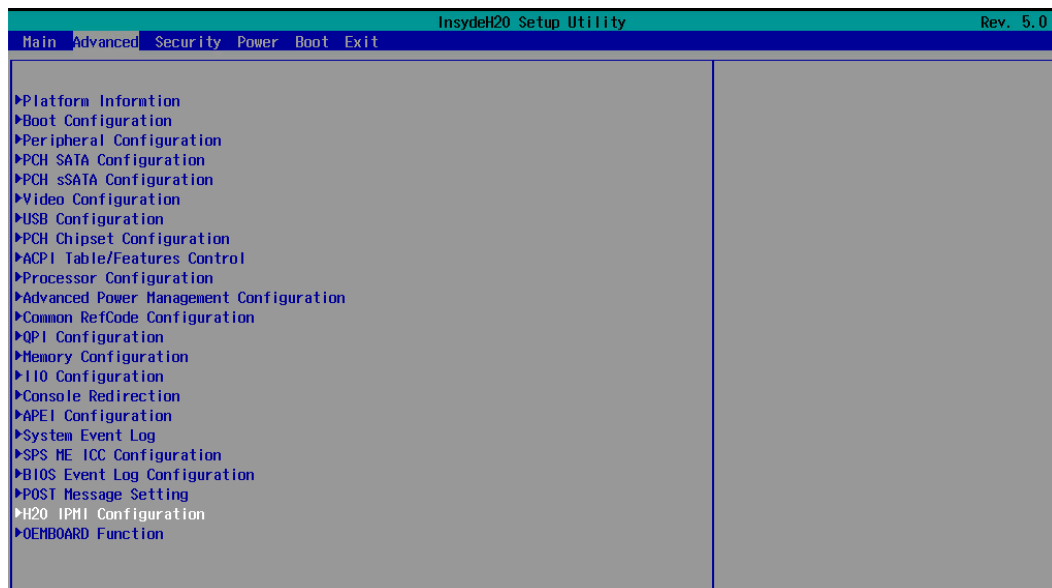

InsydeH20 Setup Utility		Rev. 5.0
Advanced		
<b>H20 IPMI Configuration</b>		BMC Configuration page. This page contains BMC related settings.
IPMI Support	<Enabled>	
System Interface Type	KCS	
IPMI Base Address for OS	CA2/CA3	
IPMI Base Address for POST	CA2/CA3	
IPMI Base Address for SHM	CA2/CA3	
BMC Status	OK	
BMC Firmware Version	4.10	
IPMI Specification Version	2.0	
BMC MAC Address	00:15:B2:11:22:33	
BMC status for wait bmc response	<Enabled>	
BMC Warmup Time	[90]	
ACPI SPMI Table	<Enabled>	
Boot Option Support	<Disabled>	
Set BIOS version to BMC	<Disabled>	
▶BMC Configuration		
▶SDR List		
Execute H20 IPMI Utility		

InsydeH20 Setup Utility		Rev. 5.0
Advanced		
<b>BMC Configuration</b>		DHCP: BMC IPv4 settings will be configured automatically by DHCP. Static: BMC IPv4 settings will be configured manually
Watchdog Timer Support	<Disabled>	
Watchdog Timer Timeout	[5]	
Watchdog Timer Action	<Hard Reset>	
Power Cycle Time Support	<Disabled>	
Power Cycle Time	[10]	
Power Button	<Enabled>	
Reset Button	<Enabled>	
NMI Button	<Enabled>	
Lan Port Configuration	<Dedicated>	
LAN Channel Number	[1]	
IPv4 Source	<Static>	
IPv4 IP Address	192.168.1.34	
IPv4 Subnet Mask	0.0.0.0	
IPv4 Gateway Address	0.0.0.0	
IPv6 Mode	<Disabled>	
IPv6 AutoConfig	<Enabled>	
IPv6 Prefix Length	[0]	
IPv6 IP Address	0:0:0:0:0:0:0:0	
IPv6 Gateway Address	0:0:0:0:0:0:0:0	

## 1. Input IP address. Set static IP.

Advanced		InsydeH20 Setup Utility	Rev. 5.0
BMC Configuration		Config BMC IPv4 IP Address.	
Watchdog Timer Support	<Disabled>		
Watchdog Timer Timeout	[5]		
Watchdog Timer Action	<Hard Reset>		
Power Cycle Time Support	<Disabled>		
Power Cycle Time	[10]		
Power Button	<Enabled>		
Reset Button	<Enabled>		
NMI Button	<Enabled>		
Lan Port Configuration	<Dedicated>		
LAN Channel Number	[1]		
IPv4 Source	<Static>		
IPv4 IP Address	192.168.1.34		
IPv4 Subnet Mask	0.0.0.0		
IPv4 Gateway Address	0.0.0.0		
IPv6 Mode	<Disabled>		
IPv6 AutoConfig	<Enabled>		
IPv6 Prefix Length	[0]		
IPv6 IP Address	0:0:0:0:0:0:0:0		
IPv6 Gateway Address	0:0:0:0:0:0:0:0		


## 2. Input subnet mask address.

Advanced		InsydeH20 Setup Utility	Rev. 5.0
BMC Configuration		Config BMC IPv4 Subnet Mask.	
Watchdog Timer Support	<Disabled>		
Watchdog Timer Timeout	[5]		
Watchdog Timer Action	<Hard Reset>		
Power Cycle Time Support	<Disabled>		
Power Cycle Time	[10]		
Power Button	<Enabled>		
Reset Button	<Enabled>		
NMI Button	<Enabled>		
Lan Port Configuration	<Dedicated>		
LAN Channel Number	[1]		
IPv4 Source	<Static>		
IPv4 IP Address	192.168.1.34		
IPv4 Subnet Mask	255.255.255.0		
IPv4 Gateway Address	0.0.0.0		
IPv6 Mode	<Disabled>		
IPv6 AutoConfig	<Enabled>		
IPv6 Prefix Length	[0]		
IPv6 IP Address	0:0:0:0:0:0:0:0		
IPv6 Gateway Address	0:0:0:0:0:0:0:0		

## 5.2 Method 2 (Use a Dos tool - Syscheck)

1. Type : sc -lanset.

```
C:\>sc -lanset
```

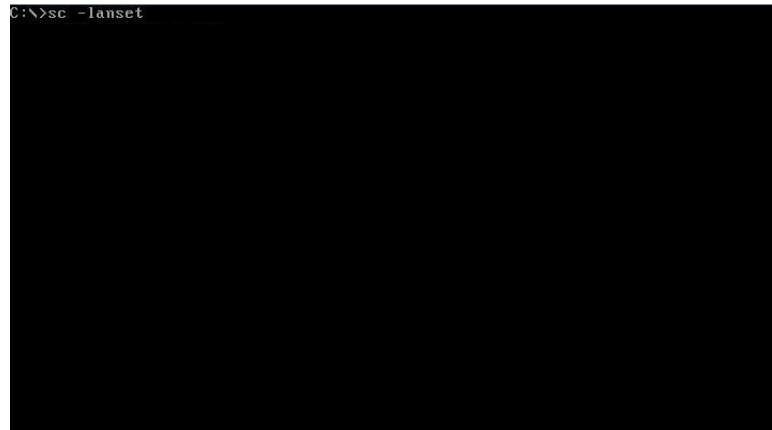

2. Modify IP setting.

```
C:\>sc -lanset
syscheck version 1.2.3
-----
-lanset          Set LAN configuration
Internet Protocol Please input 1 or 2
                 1 :Static IP enable
                 2 :DHCP enable
IP              IP       :192.168.0.2
Submask        Submask  :255.255.255.0
Gateway        Gateway  :192.168.0.254
-----

Present LAN Configuration:
DHCP           : disable
Static IP:     : enable
IP             : 192.168.22.22
Submask       : 255.255.255.0
Gateway       : 0.0.0.0
Do you want to Modify? (Y or y to Modify / any key to Exit)
y

Internet Protocol
(1 :Static IP enable / 2 :DHCP enable)
(Please input 1 or 2):1
```



NOTE: TYPE 1 FOR SELECTING STATIC IP MODE OR TYPE 2 FOR SELECTING DHCP MODE.

3. Input IP address.

```
1 :Static IP enable
2 :DHCP enable
IP       IP       :192.168.0.2
Submask Submask  :255.255.255.0
Gateway Gateway  :192.168.0.254
-----

Present LAN Configuration:
DHCP           : disable
Static IP:     : enable
IP             : 192.168.22.22
Submask       : 255.255.255.0
Gateway       : 0.0.0.0
Do you want to Modify? (Y or y to Modify / any key to Exit)
y

Internet Protocol
(1 :Static IP enable / 2 :DHCP enable)
(Please input 1 or 2):1
Check DHCP: 1

Modify IP address?
(Y or y to Modify / any key to Check Next) y
IP       : 192.168.22.22_
```

#### 4. Input submask address.

Below IP address is an example using a default IP setting. User is allowed to change the IP address for realistic use.

```
-----  
Present LAN Configuration:  
DHCP      : disable  
Static IP : enable  
IP        : 192.168.22.22  
Submask   : 255.255.255.0  
Gateway   : 0.0.0.0  
Do you want to Modify? (Y or y to Modify / any key to Exit)  
y  
  
Internet Protocol  
(1 :Static IP enable / 2 :DHCP enable)  
(Please input 1 or 2):1  
          Check DHCP: 1  
  
Modify IP address?  
(Y or y to Modify / any key to Check Next) y  
IP       : 192.168.22.22  
          The IP Address: 192.168.22.22 is valid  
  
Modify Submask address?  
(Y or y to Modify / any key to Check Next) y  
Submask  : 255.255.255.0
```

#### 5. Finish BMC IP configuration.

```
Do you want to Modify? (Y or y to Modify / any key to Exit)  
y  
  
Internet Protocol  
(1 :Static IP enable / 2 :DHCP enable)  
(Please input 1 or 2):1  
          Check DHCP: 1  
  
Modify IP address?  
(Y or y to Modify / any key to Check Next) y  
IP       : 192.168.22.22  
          The IP Address: 192.168.22.22 is valid  
  
Modify Submask address?  
(Y or y to Modify / any key to Check Next) y  
Submask  : 255.255.255.0  
          The Submask: 255.255.255.0 is valid  
  
Modify Gateway address?  
(Y or y to Modify / any key to Exit) +  
          Completed.  
  
C:\>
```



NOTE: TYPE SC.EXE -LANGET COMMAND TO OBTAIN BMC IP AND MAC ADDRESS.

```
C:\>sc -langet  
syscheck version 1.2.3  
-----  
IP           : 192.168.22.22  
Submask     : 255.255.255.0  
Gateway     : 0.0.0.0  
MAC        : 00-15-B2-A1-29-27  
DHCP       : disable  
Static IP  : enable  
C:\>
```

## 5.3 Connect to BMC



NOTE: THIS FEATURE WORKS WITH JAVA 6 RUNTIME INSTALLED CONSOLE ENVIRONMENT.

Below IP address is an example using default IP setting. User is allowed to change the IP address for realistic use.

1. Open the browser then type default BMC IP address: 192.168.22.22



2. Use the default user name and password for first-time login to BMC WEB GUI.

Field:	Default
User Name:	admin
Password:	admin



NOTE: THE DEFAULT USER NAME AND PASSWORD ARE IN LOWER-CASE CHARACTERS.



NOTE: USERS WHO LOGIN WITH THE ROOT USER NAME AND PASSWORD WILL HAVE FULL ADMINISTRATIVE POWER. THE ROOT PASSWORD CAN BE CHANGED AFTER LOGIN.

### 3. Information of firmware.

The screenshot shows the MEGARAC AIC dashboard. The top navigation bar includes 'Dashboard', 'FRU Information', 'Server Health', 'Configuration', 'Remote Control', 'Auto Video Recording', and 'Maintenance'. The 'Dashboard' section provides an overview of the device and remote server status.

**Device Information:**  
 Firmware Revision: 1.3.13232  
 Firmware Build Time: Oct 16 2012 15:31:57 CST

**Network Information (Edit):**  
 MAC Address: 00:15:B2:A2:77:8E  
 V4 Network Mode: DHCP  
 IPv4 Address: 192.168.0.118  
 V6 Network Mode: DHCP  
 IPv6 Address: ::

**Remote Control:** A 'Launch' button is present, and a terminal window shows a 'Refresh' button and a '720 x 400' resolution indicator.

**Sensor Monitoring:** A table lists various sensors with their status (all green) and readings (all 'Not Available').

Status	Sensor	Reading
●	Temp_1	Not Available
●	Temp_5	Not Available
●	Chas_IntrusionZ@	Not Available
●	Voltage_VCC	Not Available
●	Fan_1	Not Available
●	Fan_2	Not Available
●	Temp_3	Not Available
●	Temp_4	Not Available
●	Voltage_2.5V	Not Available
●	Voltage_5V	Not Available
●	Voltage1_12V	Not Available
●	Temp_2	Not Available

**Event Logs:** A circular graphic is shown, and a 'Free Space (100%)' indicator is visible.

### 4. Server Health - Sensor Readings:

The screenshot shows the 'Sensor Readings' section of the MEGARAC AIC dashboard. It provides detailed information for all 12 sensors.

**Sensor Readings Table:**

Sensor Name	Status	Current Reading
Temp_1	Normal	Not Available
Temp_5	Normal	Not Available
Chas_IntrusionZ@	All deasserted	Not Available
Voltage_VCC	Normal	Not Available
Fan_1	Normal	Not Available
Fan_2	Normal	Not Available
Temp_3	Normal	Not Available
Temp_4	Normal	Not Available
Voltage_2.5V	Normal	Not Available
Voltage_5V	Normal	Not Available
Voltage1_12V	Normal	Not Available
Temp_2	Normal	Not Available

**Temp\_1: Not Available** (Status: NORMAL)

**Thresholds for this sensor:**


Lower Non-Recoverable (LNR): 0	Upper Non-Recoverable (UNR): 40
Lower Critical (LC): 18	Upper Critical (UC): 35
Lower Non-Critical (LNC): 25	Upper Non-Critical (UNC): 30

**Graphical View of this sensor's events:**


LNR	(0)
LC	(0)
LNC	(0)
UNR	(0)
UC	(0)
UNC	(0)

5. Configuration

Please refer to AIC BMC User Guide for more information on AIC BMC.

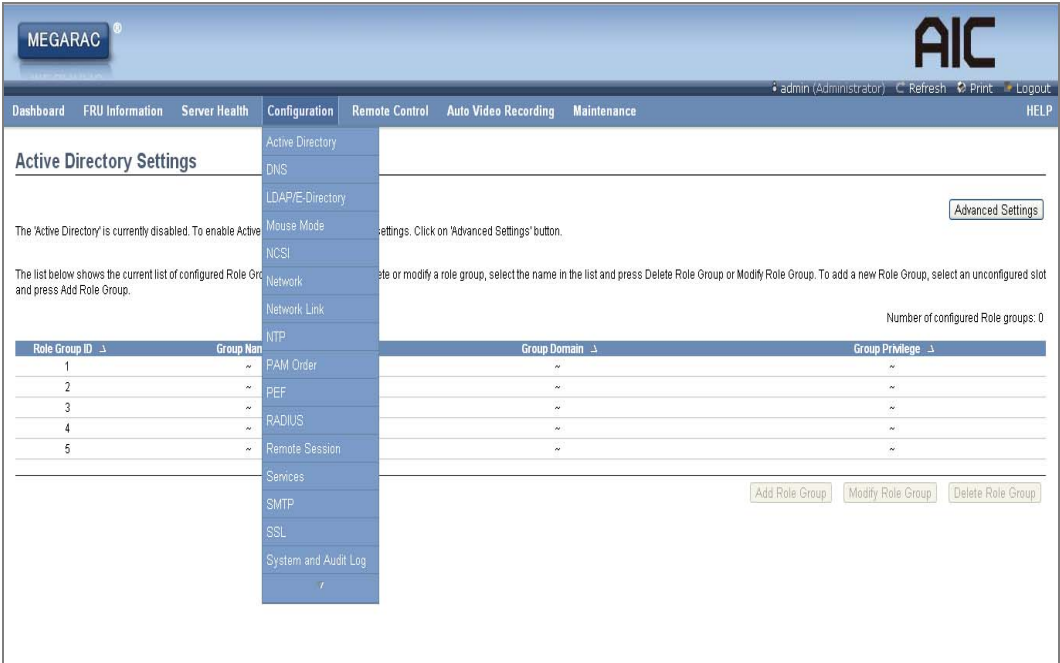


Mouse Mode setting:

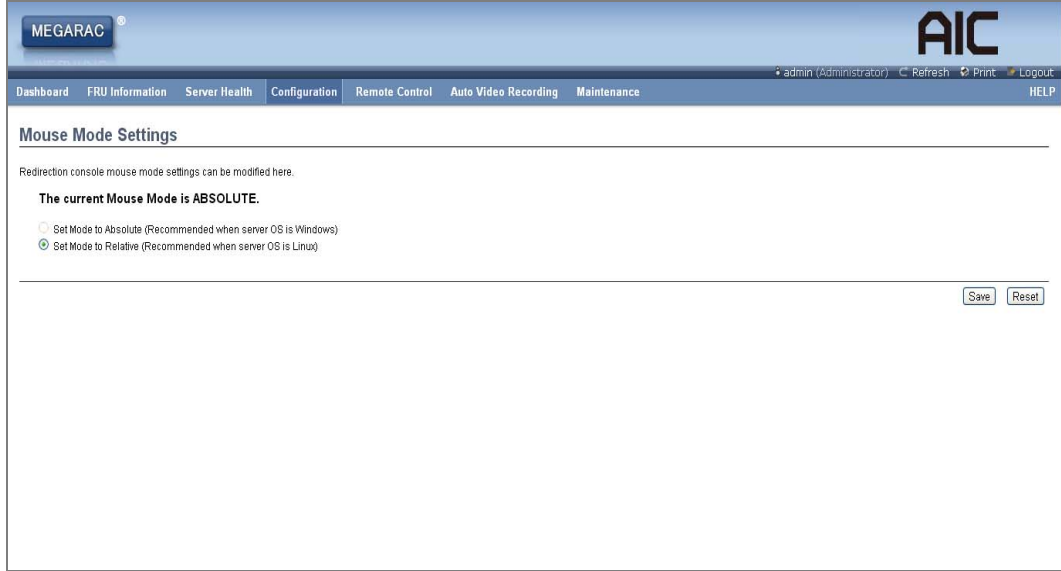


- For Windows OS environment, set mode to absolute.
- For Linux OS environment, set mode to relative.


6. Remote Control:

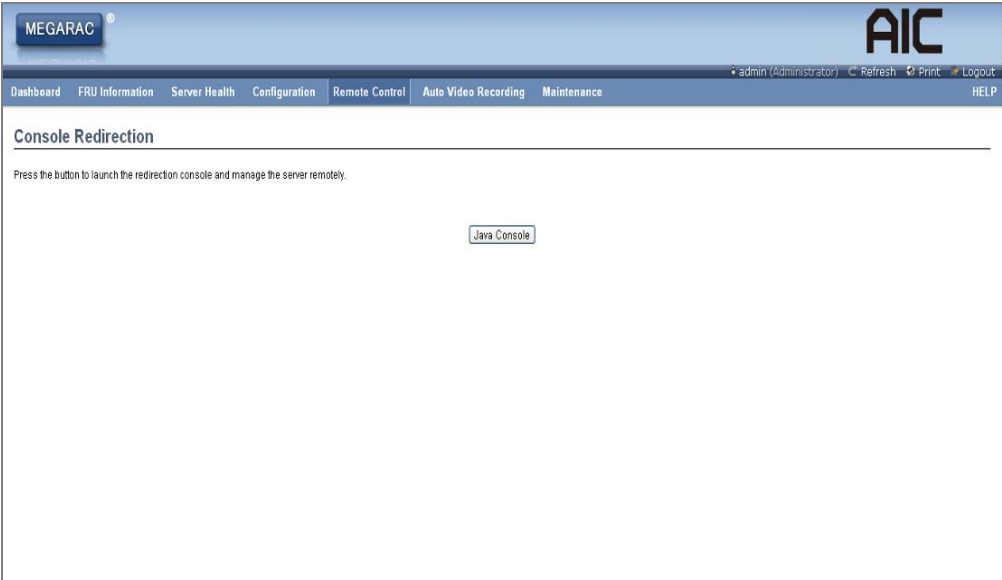

Environmental setting:

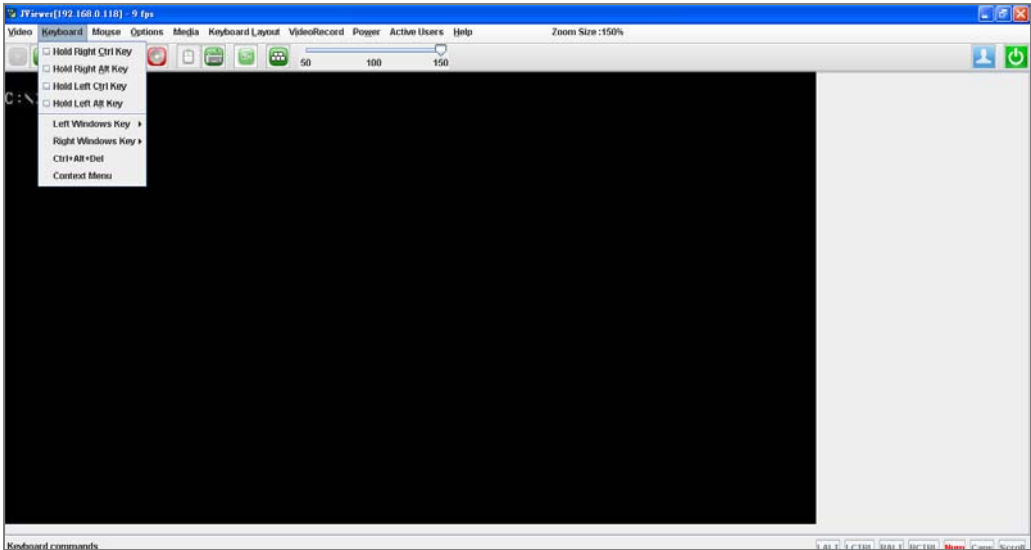

Press "ALT+C" for local and remote OS mouse control switching.

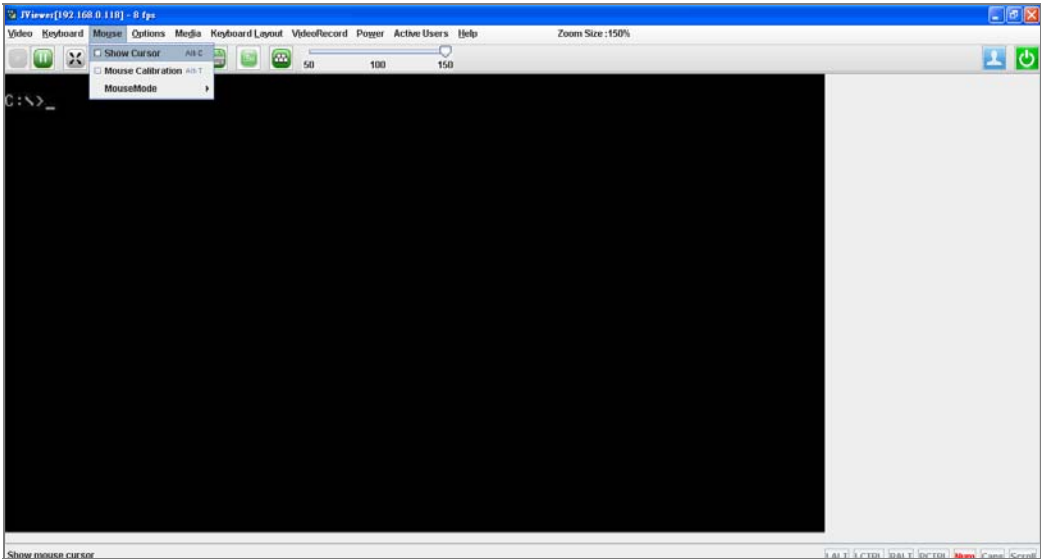

## 5.4 Updating BMC Firmware

1. Boot to the DOS (MS-DOS or Free DOS is workable)
2. Enter BMC firmware directory [XXXXXZYY]; XXXXX: project name ; YY: firmware version; Z: Identify character, C for official, B for Beta.
3. Execute a.bat batch file to update the BMC firmware

Example:

```
A:>cd SB301C01
```

```
A:\ SB301C01>a.bat
```

This is just an example. The latest BMC firmware version is available from the FAE or AIC website.

4. After update BMC firmware, please power off and then power on system.



### NOTES:

1. DO NOT USE EMM386 IN DOS ENVIRONMENT WHEN UPDATING FIRMWARE OR YOU WILL GET A FAIL.
2. IN SOME CRITICAL CONDITION, AFTER UPDATING BMC FIRMWARE OR CONFIG FILE, YOU MIGHT NEED TO UNPLUG AC POWER CORD 5 SECONDS AND THEN PLUG AC POWER CORD TO RESET BMC, THEN UPDATED NEW FUNCTION CAN WORK PROPERLY.

# Chapter 6.

## Technical Support



- TAIWAN

Tel: +886.3.313.8386

Fax: +886.3.313.8377

Email : sales@aicipc.com.tw

- CHINA

Tel: +86.21.54961421, +86.21.54961422

Fax: Extension: 608

Email Technical Support: support@aicipc.com

- AMERICA - West coast

Tel: +1.909.895.8989

Fax: +1.909.895.8999

Email : sales@aicipc.com

- AMERICA - East coast

Tel: +1.973.884.8886

Fax: +1.973.884.4794

Email : njsales@aicipc.com

- EUROPE

Tel: +31.30.6386789

Fax: +31.30.6360638

Email:sales@aicipc.nl

Email

Technical

Support:

support@aicipc.com

